


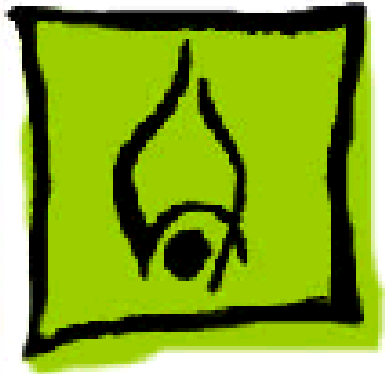

iMac



Hot Issues

iMac





Introduction

This chapter is designed to highlight unique or high-priority product issues that you should be aware of before servicing the iMac computer.

This chapter alerts you to important issues and provides pointers to other areas in the manual where more complete information can be found. This chapter is not intended to replace other parts of this manual; it merely provides a pointer to pertinent information in those chapters.

To familiarize yourself with a new product family, always read the Basics chapter in its entirety. You should also refer to the Troubleshooting chapter for basic theory of operations information.





Mixed Memory Types

The iMac computer uses SDRAM SO-DIMMs only; EDO memory will not work in the iMac computer. System problems will result if EDO memory is installed. (See “SDRAM DIMMs” in the Basics chapter and refer to the iMac section of the Memory Guide.)

Note: Customers are allowed to upgrade the memory in iMac computers and may inadvertently mix EDO and SDRAM memory. If incompatible memory types are installed, you will hear two beeps upon startup. (See “Power-On Self Test” in Troubleshooting for more information.)





SGRAM Video Memory

The iMac computers use SGRAM video memory. Use only SGRAM SO-DIMMs in these machines. Never install the 256K or 512K video memory DIMMs used in older Macintosh computers. (See “SGRAM Video Memory” in the Basics chapter.)

Error Beeps

If problems are detected upon startup, the iMac system will sound one or more error beeps. (See “Error Beeps” in the Troubleshooting chapter.)





HFS+ Formatted Drives

The iMac hard drive is formatted from the factory with Mac OS Extended format, also referred to as HFS+. Norton Utilities version 3.5 is not compatible with HFS+ and version 3.5.1 and earlier can result in hard drive corruption and loss of all data on the hard drive. (See “HFS+ Formatted Drives” in the Troubleshooting chapter.)





Universal Serial Bus

The iMac uses a Universal Serial Bus (USB) for connecting the mouse, keyboard, and all peripheral devices. There is no SCSI bus in the iMac. Refer to the USB section in the Basics chapter for a full explanation of USB technology and to “USB Problems” in the Troubleshooting chapter for possible error messages.





Forcing a Restart

If holding down the Command, Control and Power keys fails to restart the iMac computer after a system hang, you can force a restart in one of two ways:

First, try inserting a straightened paper clip in the reset button hole. (Open the I/O door on the side of the iMac. The reset button hole is the top hole located between the Ethernet and modem ports and marked with a triangle symbol.)

If the reset button method doesn't work, try the following:

- 1 Unplug the power cord.
- 2 Wait at least 30 seconds and then reconnect the power cord.
- 3 Restart the iMac by pressing the power button on either the keyboard or the front of the computer.





Basics

iMac





movie.studio

Overview

The iMac is an “all-in-one” product with a unique industrial design, that is targeted specifically for the consumer and education market. The sharp new industrial design has several unique features that make the iMac a revolutionary computer.

Click the icon at left to see a 360-degree QuickTime VR movie of the iMac. Use the hand tool to rotate the iMac and zoom in on hot spots.



**Features of the iMac computer include:**

- PowerPC G3 microprocessor running at 233 MHz
- System bus speed at 66 MHz
- Backside cache of 512K
- 32 MB SDRAM SO-DIMM standard, expandable to 128 MB total using 144-pin, 100 MHz or faster SO-DIMM modules
- 2 MB SGRAM standard, expandable to 6 MB total using industry standard SGRAM SO-Dimms
- Built-in 15" CRT (13.8" viewable area)
- 4 GB 3.5" IDE hard drive
- 24x-speed ATAPI CD-ROM drive
- 56K hardware modem
- Infrared link for up to 4 Mbit-per-second IrDA data transfer
- Two Universal Serial Bus (USB) Type A ports supporting USB devices (such as a keyboard, mouse, or printer and USB hubs). A maximum of 500 milliamperes (mA) of 5 V power is provided per port, for a total of 1 Ampere.
- One RJ-11 modem port






- One 10/100 BaseT Ethernet RJ-45 connector for connection to 10 mb/s or 100 mb/s networks
- Two internal ATA connectors: one supports the hard disk drive and one supports the CD-ROM drive
- Two 3.5 millimeter (mm) headphone jacks
- One 3.5 mm sound output port for stereo sound output
- One 3.5 mm sound input port for stereo sound input. The sound input port supports the Apple PlainTalk Microphone that comes with some Macintosh computers. The sound input port also supports a standard stereo (miniplug-to-RCA) cable adapter for connecting stereo equipment to your computer.
- Clock/Calendar featuring CMOS custom circuitry with long-life battery
- Fan speed thermally controlled
- Energy Saver control panel
- Built-in 2D and 3D hardware graphics acceleration via ATI Rage IIc graphics controller ASIC






Front View

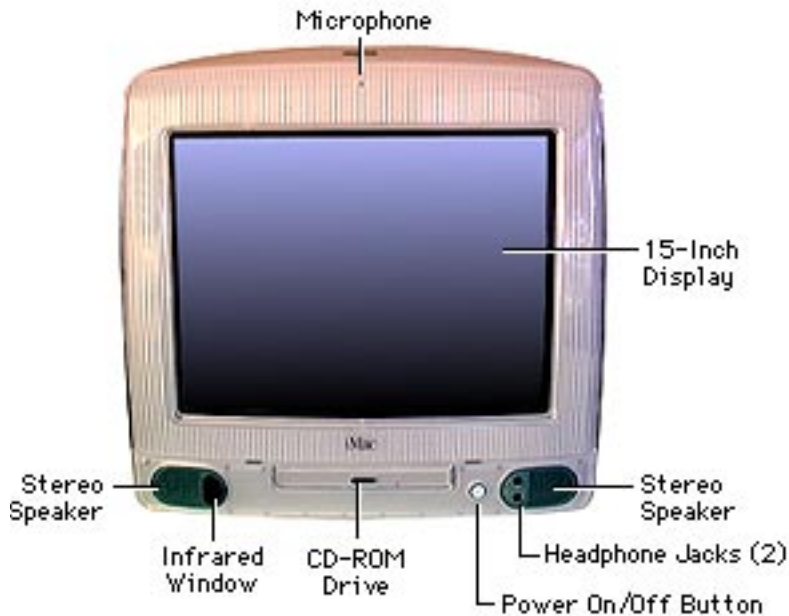




Rear View

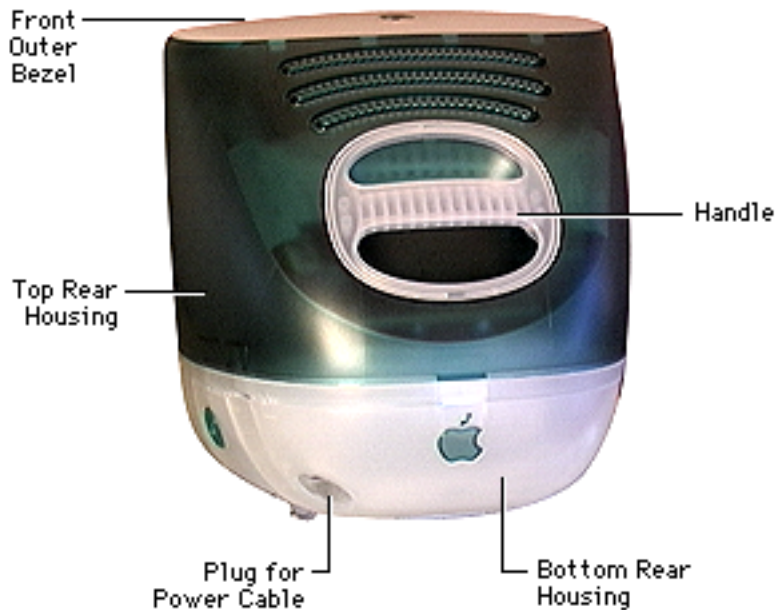




Left Side View

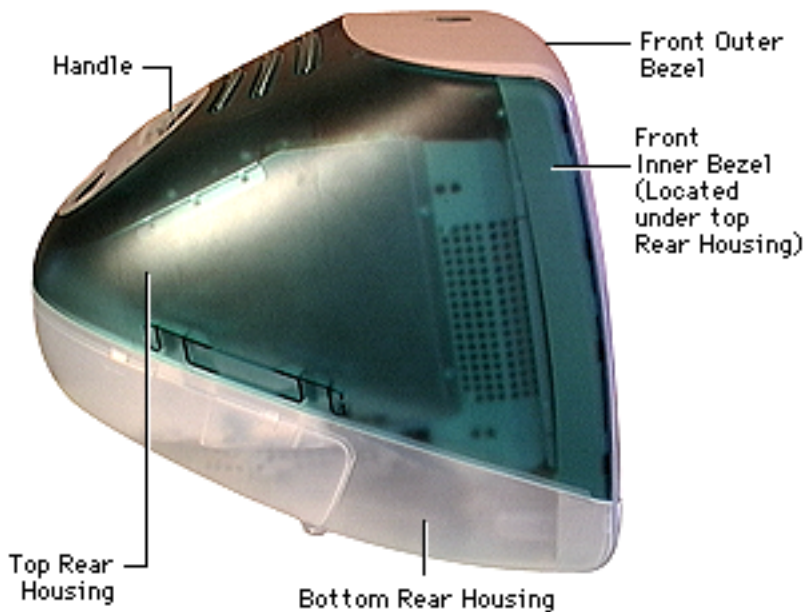




Right Side View

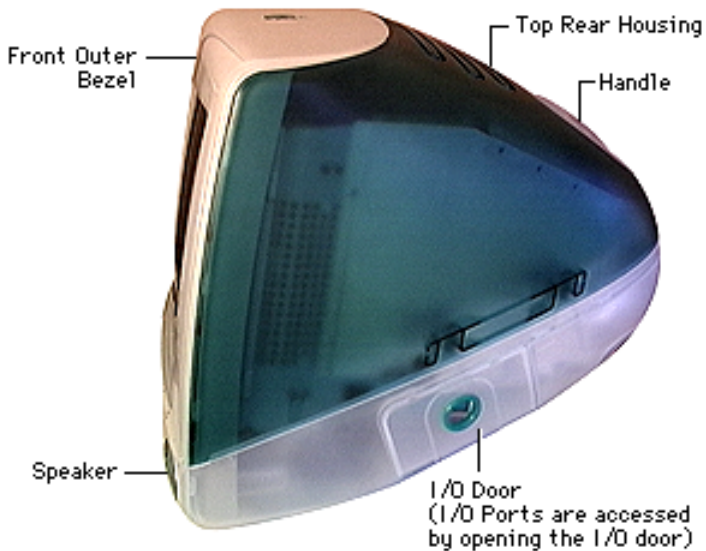



Internal Locator

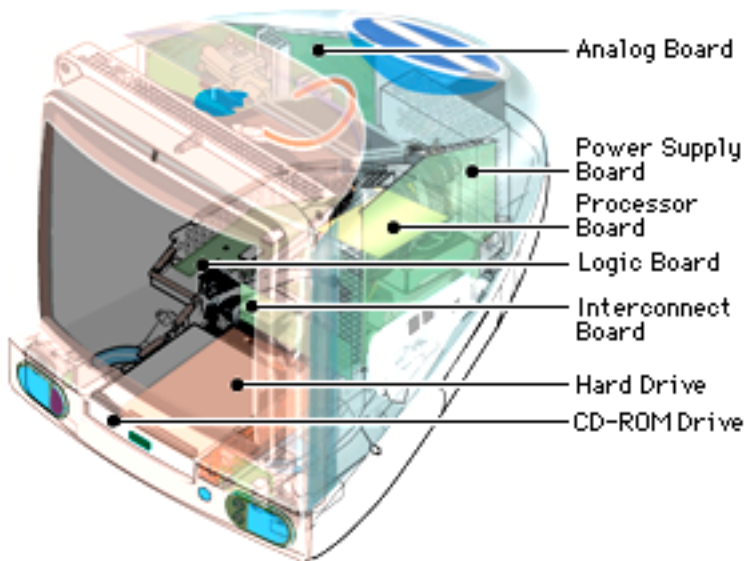



Data Buses

The data buses on the iMac include:

- USB: The mouse, keyboard, and any additional external peripheral devices connect to this bus. For more information on this bus, refer to “USB Support” later in this chapter.
- EIDE (Extended Integrated Drive Electronics): There are two EIDE connectors on the logic board (the ATAPI CD-ROM drive uses one of these connectors, and the ATA hard drive uses the second connector, so the CD-ROM drive and the hard drive are on separate buses).

Note: There is no SCSI bus on the iMac.





USB Support

Universal Serial Bus (USB) is a new device communication standard developed by the computer and telecommunication industries. USB provides a powerful, hot-swappable, “true plug-and-play” interface between a host computer and add-on peripheral devices. (**Note:** “Hot-swappable” means that you can plug in, use, and unplug devices without having to shut down the host computer.)

USB devices can include keyboards, mice, joysticks, telephones, scanners, printers, security dongles, microphones, speakers, floppy drives, cameras, modems, CD-ROM drives, etc. USB technology can provide support for anticipated future devices as well, such as digital subscriber line (DSL) modems, cable modems, and MPEG video devices.

A 1997 IDC report states that USB is expected to be





featured in 93% of desktop CPUs and 63% of printers by the year 2000.

USB was designed to overcome limitations of earlier peripheral connection technologies. USB allows end users to connect peripheral devices to a host computer on the fly, without having to hassle with

- Shutting down/restarting the computer
- Opening the computer case
- Installing a card
- ID conflicts
- Termination issues
- Loading device drivers (although some devices may require a one-time driver installation).

In addition, USB provides the user with

- A “tiered star hub” network topology (see diagram later in this section) allowing for the connection of up to 127





devices per host computer

- Two simple, standardized plugs for the broad range of devices
- Power for some devices directly through the USB cable
- Two data speeds for devices: 1.5 and 12 megabits per second (Mbps)
- Automatic adjustment of bandwidth allocation among devices.





USB devices use two types of plugs, Type A and Type B:

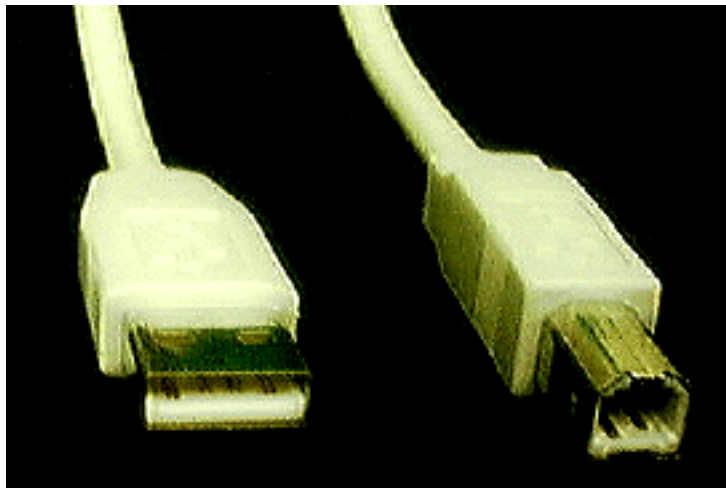


Figure 1: USB Plug Types



The Type A plug (pictured on the left) connects to the host computer or an upstream hub. The Type B plug (pictured on the right) connects downstream to the USB device. Some devices, such as mouse devices, have a Type B plug built into the device.

Note: “Upstream” means moving up the device chain, in the direction of the host computer. “Downstream” means moving down the device chain, away from the host computer. Figure 2 on the next page illustrates this concept.

High speed connections (12 Mbps) use shielded cabling to reduce interference at higher connection rates, while low speed (1.5 Mbps) may not. Each connector has four pins, two for power and two for data.



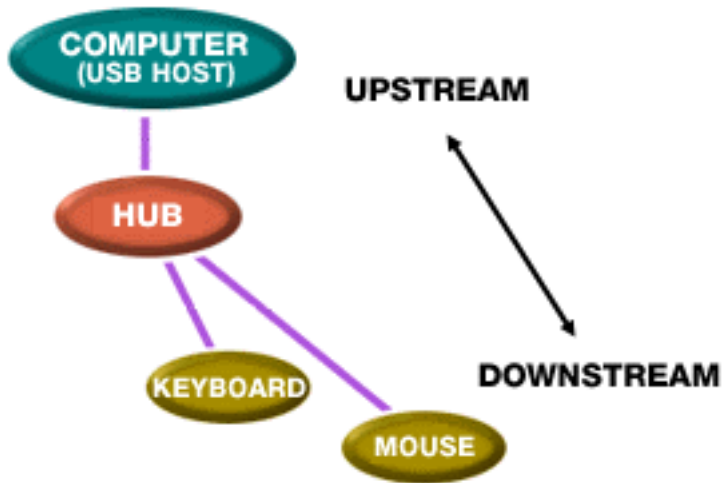


Figure 2: Defining Upstream/Downstream Terms





Benefits of USB Technology

The advantages of USB technology include hot-swapping capability, auto-configuring, and ease of use. For example, with just one available USB socket, a customer could:

- plug in a scanner, scan a photo, unplug the scanner
- then plug in a printer, print that photo, unplug the printer
- then plug in a modem, e-mail the photo to a friend, unplug the modem
- then plug in a storage drive, backup the photo file, unplug the drive

all without having to restart the host computer, or even go into sleep mode.

USB also provides a faster connection and a larger number of ports than ADB or serial options.





How a USB Device is Installed and Used

A USB network is made up of the following components:

- An operating system that supports USB. (Both iMac and Windows 98 support USB.)
- A host, typically a controller chip set residing in the personal computer, controls the USB system and allocates bandwidth per device. There is only one host per USB network, and as such USB is designed for connecting peripherals to the computer, not computers (or hosts) to each other. This explains why USB will not replace local area networking (for example, 10BaseT Ethernet), though their data transfer speeds can be comparable.

The USB host typically provides two or three Type A ports via an internal hub (inside the computer case) for devices and hubs to connect to.



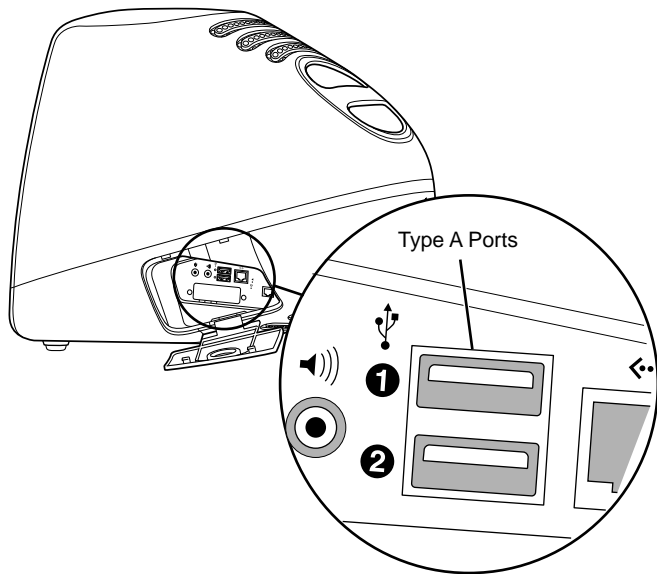


Figure 3: USB Ports





Note: Type A ports (as shown in the previous illustration) are only available from hubs. If a device (like a keyboard or display) has Type A ports for additional devices to connect to, it must have an internal hub. This information is good to know when you need to identify, map out, and troubleshoot hub and device connectivity.

Note: USB ports, cables, and plugs are often labeled with the standard USB symbol shown in the following illustration.



Figure 4: Standard USB Symbol





- Hubs, which serve as connection points for devices. Hubs also provide device detection, speed matching, and power control. Hubs connect to the host using the 12 Mbps connection speed. Hubs may be “bus-powered” by the USB, or be “self-powered” by an external power source (like an AC adapter). Only hubs can connect to the host. Hubs can also connect to other hubs, providing expansion to the 127 device limit (see the example tree diagram below). Hubs can be freestanding, or embedded in other items (displays, keyboards, etc.). Most freestanding external hubs provide 4 Type A ports, but this is not always the case.

Note: Remember when troubleshooting power errors that bus-powered hubs can't be connected to bus-powered hubs, since not enough power is provided to power the device ports. Instead, to extend the USB properly, users should alternate self-powered and bus-powered hubs as necessary.






- Devices, which connect to hubs and provide expanded functionality to the computer. Devices connect to the host using either the 1.5 or the 12 Mbps connection speed. Like hubs, devices may be “bus-powered” by the USB network, or be “self-powered” by an external power source. Devices can only connect to hubs. Devices cannot connect directly to devices, but looks can be deceiving, since some devices are combined with hubs in the same physical case.

The following tree diagram shows an example of a USB network:

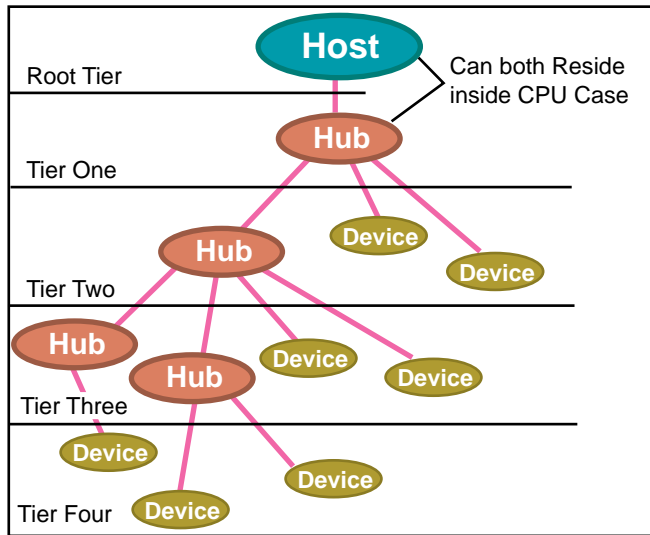

**Figure 5: USB Network Tiers**



Connectivity Rules

Following are the rules for USB connectivity:

- The maximum number of devices that can be connected to a single USB hub is 127 devices. (Note: A keyboard with a built-in trackball counts as two devices.)
- The maximum number of tiers allowed is six. This can be tricky to track sometimes, since hubs can be hidden in CPU cases, displays, keyboards, etc.
- Bus-powered hubs can't be connected to bus-powered hubs due to power limitations. A keyboard with an internal hub is a good example of a bus-powered hub.
- The maximum cable length allowed for 12 Mbps devices is 5m, and the cable must be shielded. The maximum cable length allowed for 1.5 Mbps devices is 3m, and the cable is typically unshielded.





Installing and Using a USB Device on a USB-Capable Mac OS Computer

Carry out the following steps to install and use a USB device on a USB-capable MacOS computer:

- 1 Make sure your device is Mac-OS approved. Although USB devices should all conform to the USB specification, some developers' devices do not follow spec. As a result, they need specially written drivers. Also, the current version of Mac OS support for USB does not yet support USB devices like microphones and speakers. In any case, customers should purchase only USB devices that have the Mac-OS seal of approval:
- 2 If necessary, run the installer for the device driver. Check the instructions that came with the device for details.
- 3 Provide external power if needed for the device. Check the instructions that came with the device for details.





- 4 Plug the device in to an available hub port. The device should be sensed automatically, the driver should automatically load, and the device should then be ready for use. When you are finished using the device, you can leave it plugged in, or unplug it to free up the port.



10/100 BaseT Ethernet Support

The iMac features 10/100 BaseT ethernet support built-into the logic board. The specifications for the 10/100 BaseT ethernet support are as follows:

- Open Transport: Mac OS 8.1 or later, AppleShare, AppleTalk, NetWare for Macintosh, TCP-IP
- Connector: RJ-45 (for 10BaseT and 100BaseT)
- Media, 10BaseT: Cat 3, 4, or 5 UTP on 2 pairs up to 100M
- Media, 100BaseT: Cat 5 UTP on 2 pairs up to 100M
- Bus interface: PCI revision 2.0 and 2.1, share interrupt A
- Channel speeds: IEEE Auto Negotiation of 10BaseT and 100BaseTX
- Communications: IEEE 802.3u 100BaseTX; IEEE 802.3i 10BaseT
- Power: 1.2A @ 5V typical
- Controllers: DECchip 21140, 32-bit internal processor per channel





Infrared Communication

The iMac comes with built-in 1-megabit infrared technology for easy, wireless LAN access and file sharing with similarly equipped systems. The iMac logic board has one IrDA (Infrared Data Association) compliant connector that offers a maximum transfer speed of 4 MB/sec (AppleTalk and TCP/IP).

The iMac also allows users to switch to the IRTalk protocol by using the Infrared Control Panel. The iMac can therefore communicate with other IRTalk-capable devices (such as Macintosh PowerBooks) using the IRTalk protocol at a speed of 230 kB/second (AppleTalk Only).

For information about whether or not iMac computers can communicate with HP printers, contact Hewlett Packard. For information about whether iMac computers can communicate with other third-party IrDA compliant devices, contact the manufacturer of the third-party device.





The iMac supports the following Apple devices on the IrDA channel:

- PowerBook 2400 and 3400
- Macintosh Powerbook G3


IrDA vs. IRTalk

There are two main differences between IRTalk and IrDA:

- 1 IrDA is an industry standard, while IRTalk is an Apple-only technology.
- 2 IrDA supports TCP/IP and AppleTalk, whereas IRTalk only supports AppleTalk.

The Infrared Control Panel will give information about any Infrared connections that are established as well as what type of infrared the iMac is currently set to use. In the window below, IrDA is selected and there are no other Infrared devices in range.




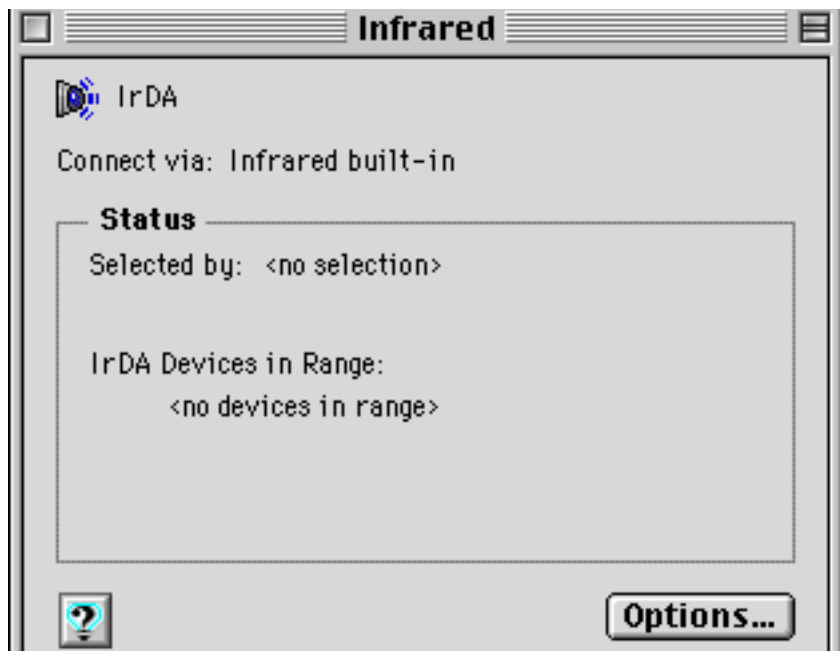



The options button will present a new window (shown on the next page) that allows you to select the type of infrared connections you want. You can also select whether or not you are notified if the connection is interrupted. This checkbox will only be available for IrDA and not IRTalk.



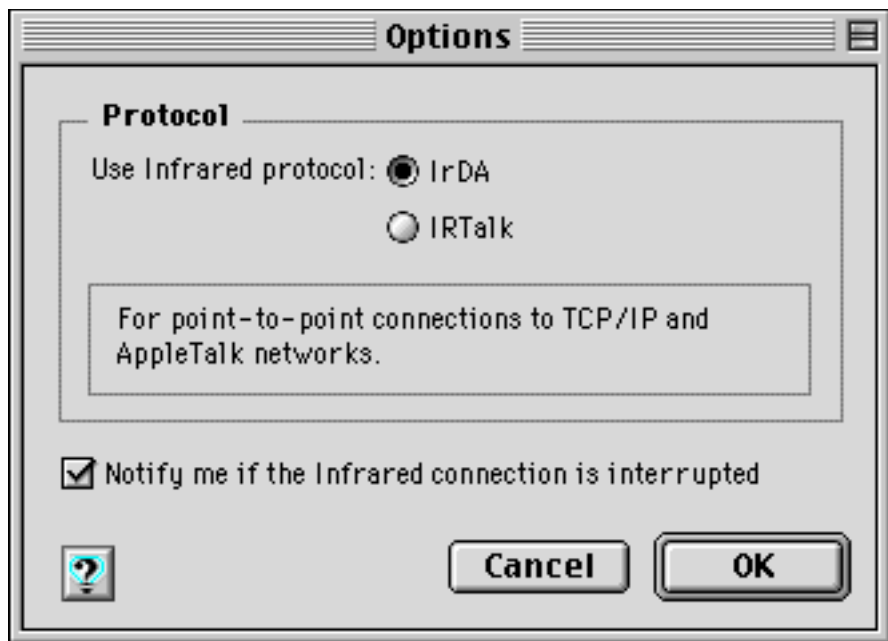



For infrared options to work there are three drivers (which are normally installed) that must be in the Control Panels or Extensions folder. They are:



Infrared Control Panel



IrDALib Extension



IrLanScannerPPC Extension





If these icons are not present or disabled, you will not be able to make infrared connections from the iMac.

If you have used infrared communications with other Apple products, you will notice a difference with iMac. The lens in the rear of the iMac has been updated to support IrDA. The new lens has about a 30 degree viewing angle. There is also a minimum 3-foot distance for recognizing other Infrared devices.



Modem

The iMac computer features a built-in 56K hardware modem. This internal modem supports both K56-Flex and V.90 communications protocols.

Modem Performance Issues

To be able to accomplish 56K connections, your Internet Service Provider or service you are connecting to must have digital connections to the Telephone Company, and then install special 56K digital modems which can use these connections. By using a digital connection, a digital-to-analog-to-digital conversion can be eliminated at their end, which allows support of a higher speed transmit protocol from their site. This means that users will not get 56K connections if one user calls another user directly. Because





they lack the digital connections, they will connect at around 33.6 connections consistently.

If you have a modem that supports this higher speed protocol, you can download data at theoretically up to 56,000 bps. With these 56K protocols, however, your upload speed is still going to occur at V.34 speeds (up to 33.6) because the digital equipment is only on your ISP's end.

While the technology theoretically can achieve download speeds up to 56 kbps, current FCC rules limit the power output of modems such that you probably will not achieve that maximum speed. The maximum speed possible under this regulation is 53 kbps.

Users who have poorer phone lines are finding they still can't get speeds above what they were getting with their V.34 28.8/33.6 modem. Remember that your phone line quality is





the most important factor here, and many people who have poor quality telephone line conditions will almost always connect at 33.6 speeds or less.

Also, line noise will be a major factor on how fast your 56K modem connects. For 33.6 or slower modems, line noise is still a factor, but it is much less of an issue for achieving good connections.



CD-ROM Drive

The CD-ROM drive is located beneath the screen on the front of the iMac. To open the tray, press the button in the middle and carefully pull open the tray until it lightly clicks. To close the drive, push the tray until it is completely closed and locked into place.

CD Adapter Board

The CD adapter board screws onto the back of the CD-ROM drive. A ribbon cable attaches to the CD-ROM adapter board and plugs into connector J14 on the logic board.

The CD adapter board is part of the CD-ROM module and should not be removed or replaced.





Power Filter Board

The power filter board is an EMC filtering board, which is mounted on the logic board/mass storage chassis. It controls the DC power supply connection from the enclosure and sits between the power supply board and the logic board.

It is highly unlikely that the power filter board will ever fail, but information about this board is included in the “No Power” section of the Troubleshooting chapter.



Audio/Video Interconnect Board

The audio/video interconnect board provides a bridge between the logic board and the audio on/off, video, and IrDA boards. sits between the logic board and the logic board/mass storage chassis.

For example, one cable runs from the IrDA board to the audio/video interconnect board; then a separate cable runs from the opposite side of the audio/video interconnect board to the IrDA connector on the logic board. The same is true for connections between the logic board and the video and audio on/off boards.





Power Supply Board Fuse

There is a fuse on the AC line on the iMac power supply board. The fuse is located at F901 (near the bottom right corner of the installed power supply board as you are facing the back side of the board). This fuse is an orderable service part and can be replaced by Service Providers.

The fuse is included in the “No Power” section of the Troubleshooting chapter as a module to check if power problems occur in the system. Instructions for how to test the fuse are included in the “Testing for Power” section of the Troubleshooting chapter.






Unlocking the Apple USB Mouse

The Apple USB mouse can be locked so that the ball cannot be removed. To lock the mouse, insert a straightened paper clip into the hole on the inner plastic ring and press down on the paper clip while you turn the ring clockwise. Turn the ring a very short distance, until it stops. When the ring clicks into a position where it is at a slight angle to the rest of the mouse, the mouse is locked (as shown in the illustration on the following page).





Insert a straightened paper clip into this hole.

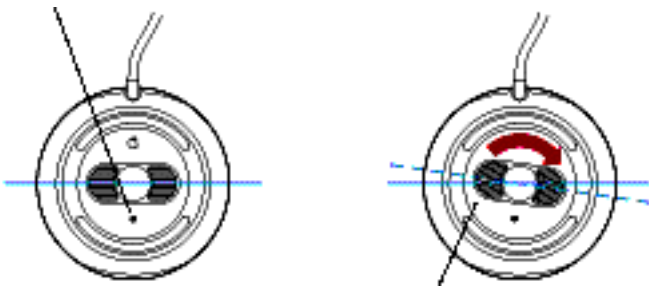

The mouse ring is locked when the ring clicks into a position where it is at a slight angle to the rest of the mouse.

To unlock the mouse, reverse the process above.



Graphics Support

The graphics subsystem on the iMac logic board is designed with the ATI Rage IIc graphics controller ASIC. The RAGE IIc ASI contains 2D and 3D acceleration engines, a bi-directional digital video port, a front-end scaler, a back-end scaler, CRT controller, and PCI bus master capability.

The graphics subsystem features an industry standard SGRAM SO-DIMM connector in addition to 2 MB of SGRAM soldered to the logic board. The SGRAM SO-DIMM can accommodate SO-DIMM sizes of 2 MB and 4 MB, for a total SGRAM capacity of 6 MB.





Sound

The 16-bit stereo audio circuitry provides high-quality sound input and output through the built-in microphone and speakers. The user can also connect external input and output devices by way of the sound input and output jacks.

The sound system supports sample sizes up to 16 bits at a sample rate of 44.1 kHz.

Sound Input

The sound system accepts inputs from three possible sources:

- built-in microphone
- external stereo sound input jack
- sound from internal CD player





Sound Output

The sound system sends computer-generated sounds to the built-in speakers, the sound output jack, and the headphone jacks. The sound system provides user-selectable SRS 3D stereo enhancement.





Video Display

The built-in video display uses a 15-inch CRT and supports three resolutions. The table below lists the resolutions and pixel depths supported with the standard 2 MB of SGRAM and with expanded SGRAM.

Resolution	Vertical rate	Pixel depth (2 MB SGRAM)	Pixel depth (4 or 6 MB SGRAM)
640 by 480	117.233 Hz	32 bits	32 bits
800 by 600	94.97 Hz	32 bits	32 bits
1024 by 768	75.03 Hz	16 bits	32 bits





Backside Cache

Backside cache is a significant architectural design change from earlier PowerPC processors. The main advantage of the backside cache architecture is the speed of the dedicated CPU-to-L2 cache interface. Using the dedicated bus allows the CPU to access the fast L2 cache storage through a high speed bus without addressing the slower system bus or competing with other devices attached to the system bus. In comparison, a “far-side” cache running on the system bus would limit that SRAM interface to 50MHz.

The PowerPC G3 microprocessor interfaces with SRAM storage via a dedicated bus running at various multiples of the core PLL CPU speed. With high speed L2 SRAM and a dedicated L2 bus, the CPU can access stored information up to the speed of the processor clock. L2 access is determined by the clock ratio setting. For example, with a





250MHz PowerPC G3, and a 2.5 L2 bus ratio, the backside cache bus speed will be 100MHz, twice the speed of the system bus.





SDRAM DIMMs

The iMac computer uses SDRAM in a SO-DIMM slot that is smaller than the RAM slots for previous desktop Power Macintosh computers. There are two SDRAM SO-DIMM slots. One is located on the bottom of the processor card and the other is located on the top portion of the same module. Any preinstalled RAM will be located in the bottom slot.

If a customer orders extra RAM via the build-to-order (BTO) program, that RAM will be installed in the upper slot. This means that a customer may get their iMac with both RAM slots populated. In addition, end users are permitted to install/upgrade their own RAM on the iMac computer. Therefore, you should not assume there is a free RAM slot in the customer's computer.

The maximum amount of SDRAM supported is 128 MB. This





can be achieved by installing a 64 MB module in the upper slot and a 64 MB module in the lower slot.

Any preinstalled RAM from Apple up to the amount of 64 MB will be installed on the lower slot as this slot is more difficult to access. If a BTO configuration is purchased with greater than 64 MB of RAM, the top RAM slot will also be used.

The lower RAM expansion slot will only accommodate SO-DIMMs which are 1.0 through 1.5 inches in height. A 2.0-inch DIMM will not physically fit into the slot and cannot be used. Electrically if a 128 MB DIMM existed which was smaller than 1.5 inches, it would work in the lower expansion slot.

EDO SO-DIMM RAM modules are not compatible with the iMac computers. If a customer uses an EDO SO-DIMM, the unit will boot fine but will not show any RAM increase in the "About this Computer" window.





Note: If EDO memory is mixed with SDRAM memory, the computer will sound two beeps at startup. (See “Power-On Self Test” in Troubleshooting for more information.)



SGRAM Video Memory


The iMac logic board comes with 2 MB of Synchronous Graphic RAM (SGRAM) video memory soldered on. The logic board also contains a video memory expansion slot that accepts a Small Outline DIMM (SO-DIMM) to increase video memory up to a maximum of 6 MB. Apple supports a 4 MB SGRAM SO-DIMM that is 32-bit wide, 144-pin, fast-paged, 83 MHz/12 ns cycle time or faster.

Important: Use only SGRAM SO-DIMMs. Never use the 256K or 512K video memory DIMMs used in older Macintosh computers.





iMac Logic Board

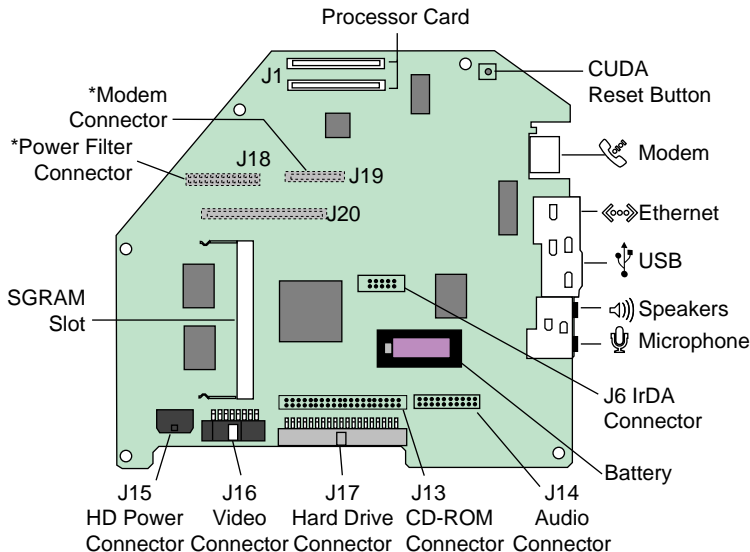


*(Connector on underside of Logic Board)





iMac I/O Panel

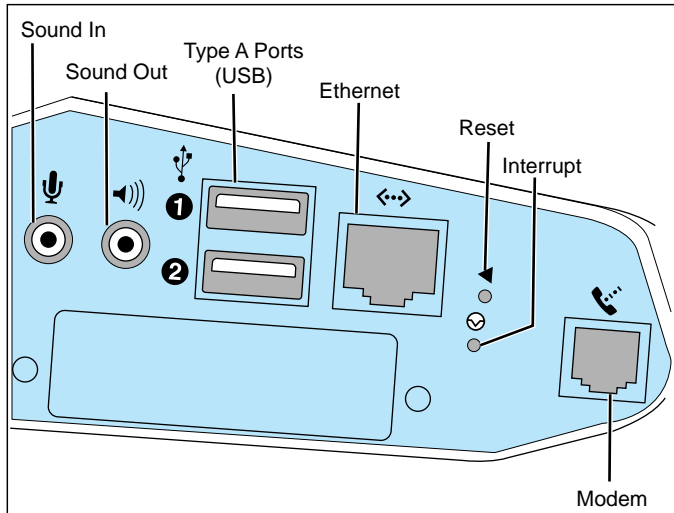



Repair Strategy

The iMac computer is to be serviced through module exchange and parts replacement. Apple Computer offers standard carry-in service only on the iMac computers (with the exception of US customers who purchase the AppleCare Service Plan, covered later in this section).

Ordering

Apple Service Providers planning to support the computer systems covered in this manual may purchase Service modules and parts to develop servicing capability. To order parts, use the AppleOrder (US only) or ARIS (Canada only) system and refer to the iMac “Service Price Pages.”





Large businesses, universities, and K-12 accounts must provide a purchase order on all transactions, including orders placed through the AppleOrder (US only) or ARIS (Canada only) system.

USA Ordering

US Service providers not enrolled in AppleOrder may fax their orders to Service Provider Support (512-908-8125) or mail them to

Apple Computer, Inc.
Service Provider Support
MS 212-SPS
Austin, TX 78714-9125

For US inquiries, please call Service Provider Support at 800-919-2775 and select option #1.





Canadian Ordering

Canadian Service providers not enrolled in ARIS may fax their orders to Service Provider Support in Canada (1-800-903-5284). For Canadian inquiries, please call Service Provider Support at 905-513-5782 and select option #3.

Warranty/AppleCare

Following are the details of the warranty/AppleCare program for the US and Canada.

US Only

The iMac computers are covered under the Apple One-Year Limited Warranty with carry-in service only. U.S. customers who wish to have on-site service can purchase one of three AppleCare Service Plans that provide one, two, or three year





warranties with the option of on-site or carry-in service. Service Providers are reimbursed for warranty and AppleCare repairs made to these computers. For pricing information, refer to “Service Price Pages.”

Canada Only

The iMac computers are covered under the Apple One-Year Limited Warranty with carry-in service only. If Canadian customers purchase one or more years of post-warranty on-site service, Apple will upgrade the remaining manufacturer's warranty service to on-site as well.

Stand-alone on-site warranty upgrades are not available from Apple Canada at this time. However, resellers may choose to sell their own on-site upgrades.

Note that although the iMac manufacturer's warranty is honoured in both Canada and the USA, the Extended AppleCare Service Plan is honoured only in Canada.





Specifications

iMac



Introduction

Specifications information for this product can be found in the Spec Database, which you can access in one of three ways:

- Launch it directly by double-clicking the Apple Spec Database runtime alias at the top level of the Main Service Source CD.
- Select "Apple Spec Database" from the Service Source drop-down main menu.
- Click the Acrobat toolbar icon for the database, which is near the right end of the toolbar with the letters "SP."





Troubleshooting

iMac



Introduction

This chapter contains basic theory of operations information as well as detailed Symptom/Cure tables, both of which should help you troubleshoot and repair the iMac system.

The Symptom/Cure tables are broken down into two sections: problems that can occur at startup time - before the Finder appears on the screen; and problems that can occur after a successful startup. Each major symptom has its own symptom/cure table.

In the left hand column of each table are the possible causes of the symptom, with the corresponding cures in the right hand column. You should also follow the tables in the order presented as they represent the most logical order for cause and cure. Verify whether or not the product continues to exhibit the symptom. If the symptom persists, try the next cure. (**Note:** If you have





replaced a module, reinstall the original module before you proceed to the next fix.)


For additional assistance, contact Apple Technical Support.





Block Diagram

The following illustration provides an overview of the iMac internal components and shows how they are connected.

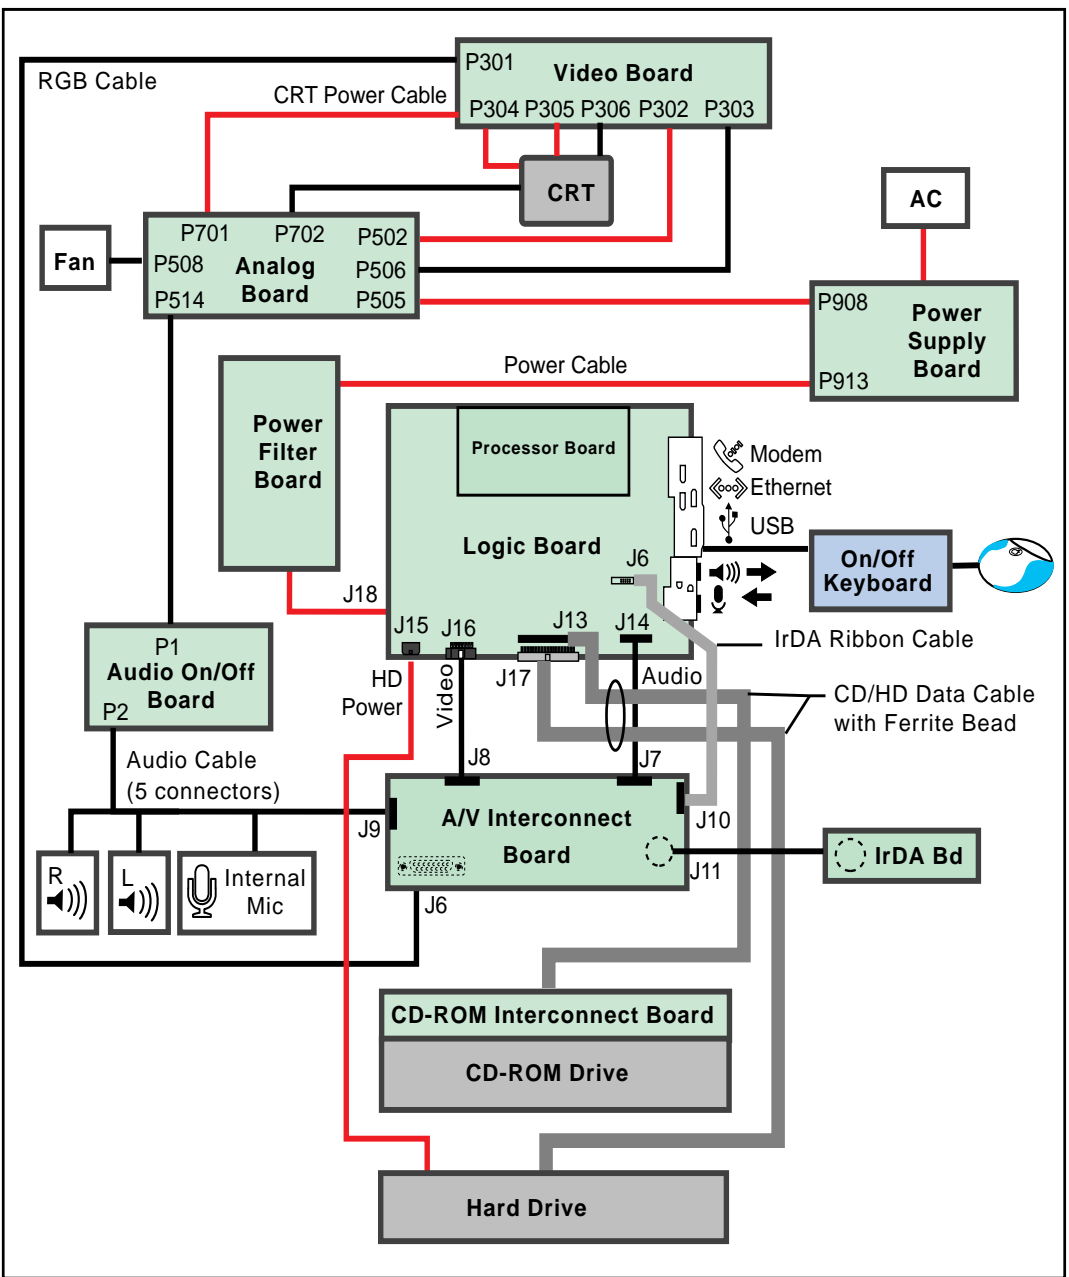



Power Flow

Power is controlled in the iMac system by the power supply board. Once the unit is plugged in, power flows from the AC outlet at the wall to the AC inlet on the power supply board. From there, the power flows through the power filter board and on to the analog/video board, the logic board and all its attached components.

Click on the icon below to see an animation of how power flows through the iMac.



movie.studio



Power Supply Board Fuse

There is a fuse on the AC line on the power supply board (at F901) that can be replaced if the computer has no power. (Refer to the “No Power” symptom for a full troubleshooting scenario.)

Before replacing the fuse, you should do a continuity test with an ohm meter. If the ohm meter registers “0”, the fuse is good. If the meter registers “infinite,” the fuse should be replaced.

Refer to “Testing for Power” later in this chapter for instructions on how to check the power supply board fuse. Refer to “Logic Board” in the Take Apart chapter to locate the fuse on the power supply board.





Testing for Power

The iMac requires “trickle” voltage (+5 TRKL) in order to power-on. If you are experiencing power problems in the iMac unit, you will want to test for trickle power at various points in the system to pinpoint the location of the problem and to determine whether or not the power supply is functioning normally. If you have trickle power in the system, the odds are your power supply is OK.

In general, you should test for power at the AC outlet first. Next, it is best to start at the end (in this case, the logic board) and trace power backwards through the system. In this way, you will be able to immediately pinpoint which component is failing. Note: It is highly unlikely that the power filter board will fail; therefore, you need not test for power at this component.





Following is the order in which you should test for power in the system: At the 1) AC outlet 2) logic board 3) power filter cable 4) power supply board 5) power supply fuse.

Testing for power requires that you remove certain parts from the computer. Refer to the Take-Apart chapter for instructions on removing parts.

At the AC Outlet

First, unplug the keyboard from the computer. Then, using a known-good power cord, power-on the system using the power button on the front of the computer. If the system powers on, you can assume the AC outlet is good and the problem is with the keyboard. If the system still won't power on, try connecting to a different AC outlet. If the unit powers on this time, you most likely have a problem with the AC outlet. If you still have no power, you will need to test for power at internal points inside the iMac.





At the Logic Board

With the iMac placed faced down on a soft surface, remove the bottom access cover and then remove the logic board/mass storage chassis to access the logic board.

Note: You will need a volt meter to test for power on the logic board. Refer to the picture on the next page to locate the necessary test point referenced in the following procedure.

Plug in the computer, but leave the iMAC powered OFF. Ground the black probe on the volt meter (by inserting it into the metal chassis). With one hand behind your back, touch the red probe on the volt meter to the positive lead of capacitor C28 on the logic board (see the photograph on the next page) to see if you have +5V on the logic board. A +5V reading on the logic board means the power supply is providing the necessary trickle voltage to the logic board.





Testing for Power at the Logic Board






At the Power Supply to Power Filter Cable

First remove the bottom access cover to reach the cables feeding into the logic board/mass storage chassis.

Note: You will need a volt meter to test for power at the power supply to power filter cable. Refer to the picture below to locate the necessary test point referenced in the following procedure.

Unplug the power supply to power filter cable from the back side of the logic board/mass storage chassis. Plug in the iMac, but leave it powered OFF. **Note:** You may need to unplug the RGB video cable to access the power cable.

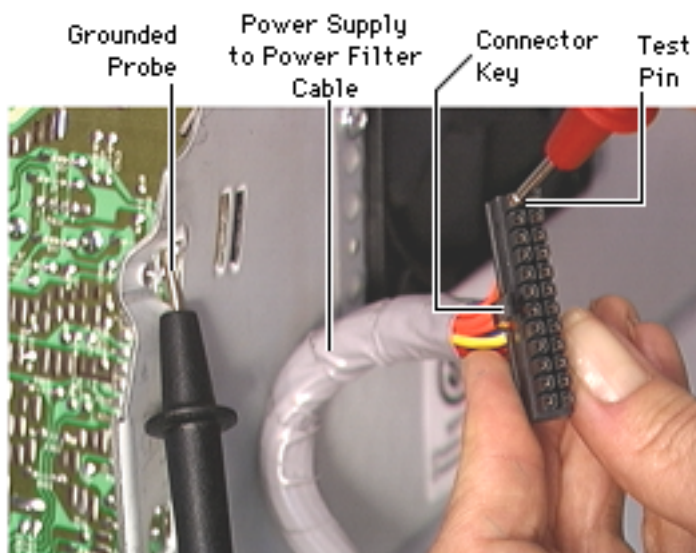

Testing for Power at the Power Supply to Power Filter Cable

Ground the black probe on the volt meter to the computer's metal chassis. Carefully touch the red probe to the first pin on the top right end of the power cable (the top being the side with the connector key on it). If you get a +5V reading, you know you have power from the power supply and that the power cable is likely OK. There still could be a problem with other pins on the cable, however.





At the Power Supply Board


First remove the top access cover and then remove the CRT EMI shield to reach the power supply board.

⚠ Warning: In this next procedure, the power supply will be exposed and the unit plugged in. Use extreme caution and avoid touching the exposed power supply to avoid any shock hazard when working on an open unit.

Note: You will need a volt meter to test for power on the power supply board. Refer to the picture on the next page to locate the necessary test point referenced in the following procedure.

Ground the black probe of a volt meter to the computer chassis. Plug in the iMac, but leave it powered OFF. Then, being careful not to short together any pins, touch the red probe on the volt meter to pin 24 on the power supply board and test for +5V.



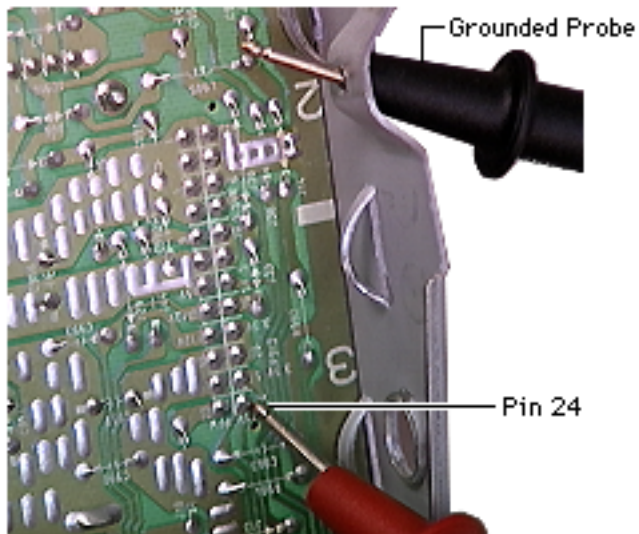

Testing for Power at the Power Supply Board





At the Power Supply Board Fuse

First remove the top access cover and then remove the CRT EMI shield to access the power supply board.

⚠ Warning: You must unplug the iMac to test do a continuity test at the power supply board fuse.

Note: You will need an ohm meter do a continuity test on the power supply board fuse. Refer to the picture on the next page to locate the necessary test point referenced in the following procedure.

Unplug the computer to take this reading. Using an ohm meter, touch the red and black probes to the two metal points at location F901 and check for continuity (reading of “0”). Any other reading than “0” indicates a bad fuse, which should be replaced. The figure on the following page shows how to take the reading.



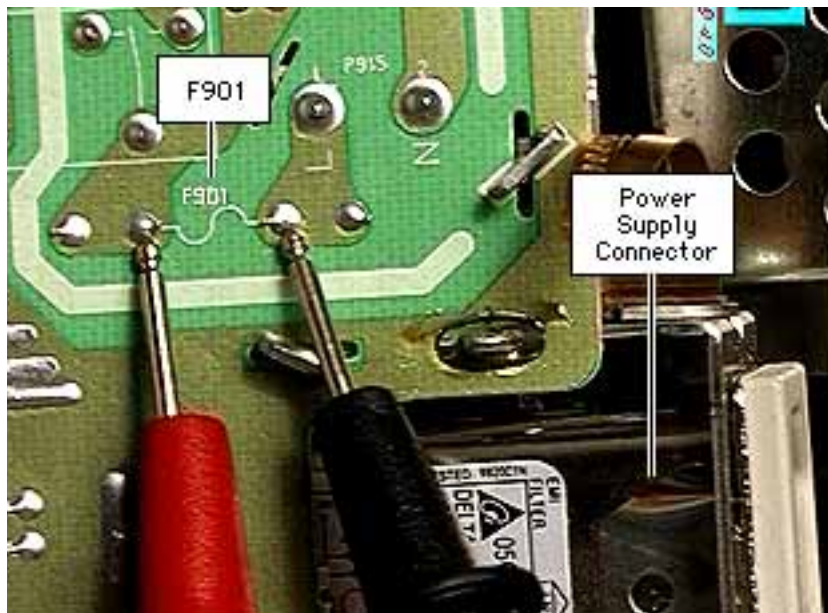


Figure 1: Testing the Power Supply Board Fuse





The Cuda Chip

The Cuda is a microcontroller chip. Its function is to

- Turn system power on and off
- Manage system resets from various commands
- Maintain parameter RAM (PRAM)
- Manage the real-time clock

Many system problems can be resolved by resetting the Cuda chip (see the Symptom/Cure tables for examples). Press the Cuda reset button on the logic board to reset the Cuda chip. (The Cuda reset button is located on the back edge of the logic board between the modem port and the processor module. Refer to the Logic Board Diagram in the Basics chapter for location information.) If you continue to experience system problems, refer to “Resetting the Logic Board” later in this chapter.





Resetting the Logic Board

Resetting the logic board can resolve many system problems (see the Symptom/Cure tables for examples). Whenever you have a unit that fails to power up, you should follow this procedure before replacing any modules.

- 1 Unplug the computer.
- 2 Disconnect the cable that runs from the power supply to the power filter board on the bottom side of the logic board/mass storage chassis.
- 3 Press the Power On button on the front of the unit.
- 4 Remove the logic board/mass storage chassis from the unit.
- 5 Remove the battery from the logic board.
- 6 Wait at least 10 minutes before replacing the battery.





- 7 Make sure the battery is installed in the correct +/- direction.
- 8 Reassemble the computer and test the unit.

Note: This procedure resets the computer's PRAM. Be sure to check the computer's time/date and other system parameter settings afterwards.



Power-On Self Test

There is a power-on self test that resides in the ROM of the iMac. This test automatically runs whenever the iMac is powered on after being fully shut down (the power-on self test does not run if the machine is only restarted).

If a problem is detected during the test, you will not hear a normal startup chime. Instead, the system will beep as explained below. Refer to “Error Beeps” later in this chapter for instructions on how to troubleshoot and repair an iMac that sounds error beeps at startup time.

Following is a definition of what the error beeps at startup time signify.

1 Beep: No RAM is installed or detected.





2 Beeps: EDO memory is installed. (The iMac ships with SDRAM SO-DIMMs and does not accept EDO memory).

3 Beeps: No RAM banks passed memory testing.

4 or 5 Beeps: Bad checksum for the remainder of the boot ROM. The ROM (which is located on the processor module) is bad.





Video Flow

Video signals begin on the logic board at connector J16 and travel to connector J8 on the A/V interconnect board. The video signals then travel out from connector J6 (on the opposite side of the A/V interconnect board) and continue on via the internal RGB cable to P301 on the analog/video board. From there, the signals are transmitted to the CRT where they are displayed on the screen.

Click on the icon below to see an animation of how the video signal travels through the iMac.



movie.studio





Sound In Flow

Sound coming into the iMac system originates at the internal microphone located in the top front area of the system, or through an external microphone connected to the logic board.

If the sound signals originate at the internal microphone, they travel along the long internal audio cable to connector J9 on the A/V interconnect board. The signal is then transmitted to connector J7 on the back side of the A/V interconnect board, travels via the short internal audio cable, and finally arrives at connector J14 on the logic board.

If the sound signals originate at an external microphone, they travel directly from the external microphone to the microphone (sound in) connector on the logic board.





Click on the icon below to see an animation of how the sound in signals travel through the iMac.



movie.studio



Sound Out Flow

The iMac has two sound out paths: via external speakers connected to the sound out connector on the logic board; or, via the internal speakers, which are located on the front of the unit directly beneath the display.

To transmit sound out the internal speakers, the sound signals must travel (via the short internal audio cable) from the J14 audio connector on the logic board to the J7 connector on the A/V interconnect board. From there, the signals are transmitted to the J9 connector on the other side of the A/V interconnect board. And then the sound out signals travel via the long internal audio cable to the internal speakers.

Sound that is transmitted to the external speakers travels directly from the sound out connector on the logic board to the external speakers via their external cable hookup.





Click on the icon below to see an animation of how the sound out signals travel through the iMac.



movie.studio



Processor Module

The iMac logic board comes with a removable processor module, which can be replaced. The processor should rarely fail and should be replaced only as a last resort. Processor modules can be ordered from Service.





Logic Board Battery

The battery on the logic board controls the stored system settings, such as date and time. It is important to note that the battery does not affect power at startup.

The battery should be replaced if your system loses date and time settings.

Note: The iMac uses a lithium battery which must be disposed of in accordance with hazardous waste regulations.





HFS+ Formatted Drives

The hard drive in the iMac is formatted with HFS+ (also referred to as Mac OS Extended format). It is important to note that Norton Utilities version 3.5 is not compatible with HFS+ (or Mac OS Extended format), and in fact, can destroy data on the hard drive.

Norton Utilities version 3.5.3 or 3.5.2 will not attempt to repair a drive formatted with Mac OS Extended format and versions 3.5.1 and earlier cannot recognize that a hard drive is in Mac OS Extended format and can result in hard drive corruption and loss of all data on the drive.

Note: When diagnosing hard drive problems, it is important to verify whether or not the customer may have used the wrong disk repair software for their drive before assuming that the problem is hardware related.





If you experience problems with a hard drive that has been formatted with HFS+, Apple Computer recommends using Disk First Aid 8.2 (which is included on the system software CD that ships with the iMac). Disk First Aid 8.2 can be used to recover data that may have been deleted by Norton Utilities. (See the Symantec Web site at <http://www.symantec.com/nu/num-hfs.html> for more information on Norton Utilities and Mac OS Extended format.)

Some other disk utility and disk locking programs are incompatible with Mac OS Extended format. Before you attempt to use a disk utility or disk locking program, make sure the version you have is compatible with Mac OS Extended format. Check the documentation that came with the program or contact the manufacturer or the vendor that supplied the program.

Use the Get Info command in system 8.1 to determine how a hard drive has been formatted. Drives formatted with HFS will appear





as “Mac OS Standard”, while drives formatted with HFS+ will appear as “Mac OS Extended.”

For more information on HFS+ formatting of hard drives, refer to the Technical Info Library, article # 30344.





Testing the Modem

The iMac ships with ClarisWorks (a.k.a. AppleWorks) software, which can be used to test the iMac modem connection. You should run this test if the modem is not able to dial out. To perform this test:

1. Locate and launch ClarisWorks. (Version 5.0 ships with the iMac computer.)
2. From the ClarisWorks New Document window, select Communications and click OK. You will be presented with an untitled communications document.
3. Click on the settings menu item and select Connection from the menu, which will bring up a new window. This window allows you to select the communications toolbox device to access the modem.





4. Click and hold the menu next to Method and select the Serial Tool from the options presented.
5. Click on the Internal Modem setting under the Current Port setting. After selecting the port, click the OK button. (You can ignore the rest of the settings.)
6. Open the serial port by selecting Open Connection from the Session menu.
7. Type “AT” into the Communications document. The modem should respond with an OK message.

This procedure verifies that the program is connecting with the modem and that the modem is responding. From here you can either quit ClarisWorks, or if you wish, you can issue any AT command to make modem settings or to check the modem settings.





A good test to see if the phone line is working is to type "ATDT", which will open the phone line. If the modem reports "NO DIAL-TONE", there isn't a valid analog line connected. If the phone line works, you will hear a dial tone until you press the Return key, at which time the modem will report "NO CARRIER". A No Carrier message means the phone line was successfully opened.

Other things that can be done here are:

- Call another modem to verify connections
- Call a working phone number to see if you can successful connect to an outside line
- Use the AT11-9 commands to check firmware versions and modem features
- Use ATZ to reset the modem back to its original configuration





Startup Problems Before Finder

If you have trouble starting up the iMac, and the problem occurs before the Finder appears on the screen, you may have either a software or a hardware problem.

Following are troubleshooting tables with problem symptoms that you may see before the Finder appears. Possible causes for each symptom can be found in the left-hand column with the corresponding fixes in the right-hand column. The troubleshooting information is presented in the order of the most probable cause and fix; therefore, Apple strongly recommends that you carry out the troubleshooting in the order in which it is presented.

(**Note:** If you are instructed to replace a module and this does not fix the problem, be sure to reinstall the original module before you proceed to the next fix.)





No Power

In a “No Power” situation, the system is completely dead. There is no LED, no fan, no hard drive power, and the screen is completely black. (Refer to “Testing for Power” earlier in this chapter for instructions on how to test for power at each component referenced in this procedure.)

Possible Cause	Possible Fix
Bad power cord, connection, or outlet.	<ul style="list-style-type: none">- Verify the power outlet is good.- Try a known-good power cord to determine if the existing power cord could be the problem. Make sure the power cord is connected securely at both ends.
Bad USB keyboard.	<ul style="list-style-type: none">- Verify the keyboard cable is connected properly to the computer.- Disconnect the keyboard and power-on the system via the button on the front of the computer. Do you have power to the system now? Yes: The keyboard is bad. Replace the keyboard. No: Go to next step.
The CUDA chip or logic board needs to be reset.	Reset the CUDA chip and try again. If the problem persists, reset the logic board. (See “The CUDA Chip” and “Restarting the Logic Board” earlier in this chapter for instructions.)
Bad logic board or on/off board.	<p>Check for trickle power on the logic board. Is there +5V power?</p> <p>Yes: Replace the logic board. If problem persists, replace the on/off board.</p> <p>No: Check for trickle power at the power supply to power filter cable. Is there +5V power?</p> <p>Yes: Replace the logic board. If problem persists, replace the power filter board.</p> <p>No: Go to next step.</p>
Bad power supply to power filter board cable.	<p>Check for trickle power at the power supply board. Is there +5V power?</p> <p>Yes: Replace the power supply to power filter cable.</p> <p>No: Go to next step.</p>
Bad power supply board or fuse.	<p>Verify fuse is good by checking for continuity at Fuse 901 on the power supply board. Do you get a “0” reading?</p> <p>Yes: Replace the power supply board.</p> <p>No: Replace the fuse on the power supply board. If the fuse blows again, replace the power supply board.</p>





No or Unstable Raster

In a “No or Unstable Raster” situation, the screen is either completely black, or you will see horizontal rolling lines, rescan lines, or the vertical/horizontal lines won’t hold (indicating a sync problem). There will be power to the system, however, which is evidenced by an illuminated amber LED, a running fan, etc. You will not hear any error beeps at startup with a “No Raster” problem. If you do hear error beeps, you should follow the “Error Beeps” troubleshooting scenario.

Possible Cause	Possible Fix
Corrupted PRAM.	Reset parameter RAM. Hold down <Command> <Option> <P> <R> during startup but before "Welcome to Macintosh" appears.
The CUDA chip or logic board needs to be reset.	Reset the CUDA chip and try again. If the problem persists, reset the logic board. (See “The CUDA Chip” and “Restarting the Logic Board” earlier in this chapter for instructions.)
Poorly seated processor module, bad processor module, or bad logic board.	Do you hear a normal boot chime at startup? Yes: Go to next step. No: Follow these steps to resolve the problem: 1. Reseat the SDRAM. 2. Reseat the processor module. 2. Replace the processor module. 3. Replace the logic board.
Bad video cable connection.	Verify that the following cables are attached securely: 1. Internal RGB cable that attaches to the A/V interconnect board at J6. 2. Internal video cable that attaches to the logic board at J16 and the A/V interconnect board at J8. 3. Internal RGB cable that attaches to the video portion of the analog/video board at board at P301.
Bad analog/video board.	Replace the analog/video board.
Bad internal video cable.	Replace the internal video cable that attaches to the logic board at J16 and the A/V interconnect board at J8.
Bad A/V interconnect board.	Replace the A/V interconnect board.
Bad logic board.	Replace the logic board.
Bad internal RGB cable.	Replace the internal RGB cable that connects at the A/V interconnect board at J6 and the analog/video board at P301.
Bad CRT.	Replace the CRT.





Gray Screen Raster

In a “Gray Screen Raster” situation, you will get a normal startup boot chime, the system will have a green startup LED, and the fan will be running. The display, however, will have a solid gray screen with no cursor or desktop displayed.

Possible Cause	Possible Fix
Corrupted PRAM.	Reset parameter RAM. Hold down <Command> <Option> <P> <R> during startup but before "Welcome to Macintosh" appears.
Corrupted system software.	Boot off the system CD that came with the unit. Do you see a normal screen display now? Yes: Reinstall system software. (You must use the system software CD that came with the unit to get the correct version of Mac OS 8.1 with the appropriate iMac enablers.) No: Go to next step.
Loose internal RGB cable.	Reseat the internal RGB cable that attaches to the A/V interconnect board at J6.
The CUDA chip or logic board needs to be reset.	Reset the CUDA chip and try again. If the problem persists, reset the logic board. (See “The CUDA Chip” and “Restarting the Logic Board” earlier in this chapter for instructions.)
Bad video cable connection.	Verify that the following cables are attached securely: 1. Internal video cable that attaches to the logic board at J16 and the A/V interconnect board at J8. 2. Internal RGB cable that attaches at the A/V interconnect board at J6 and the video board at P301.
Bad analog/video board.	Replace the analog/video board.
Bad internal video cable.	Replace the internal video cable that attaches to the logic board at J16 and the A/V interconnect board at J8.
Bad A/V interconnect board.	Replace the A/V interconnect board.
Bad logic board.	Replace the logic board.
Bad internal RGB cable.	Replace the internal RGB cable that connects at the A/V interconnect board at J6 and the video board at P301.
Bad CRT.	Replace the CRT.





Error Beep(s)

If you hear from one to five error beeps at startup **with no boot chime**, you have a hardware problem. The table explains how to troubleshoot and repair an iMac unit that sounds one or more error beeps at startup.

Possible Cause	Possible Fix
No DRAM is installed or detected.	<p>Do you hear one error beep at startup?</p> <p>Yes: Follow these steps to resolve the problem:</p> <ol style="list-style-type: none">1. Reseat the SDRAM and try again.2. If no SDRAM is present, install a known-good SDRAM SO-DIMM in the top slot and try again.3. If DRAM is present, replace it (one DIMM at a time, starting with the top DIMM slot) with a known-good SDRAM SO-DIMM. <p>No: Go to next step.</p>
Incompatible RAM is installed.	<p>Do you hear two error beeps at startup?</p> <p>Yes: Verify that only SDRAM SO-DIMMs are installed and not EDO memory. (The iMac ships with SDRAM SO- DIMM memory and is not compatible with EDO DIMMs.)</p> <p>No: Go to next step.</p>
Bad RAM.	<p>Do you hear three error beeps at startup?</p> <p>Yes: Replace the existing SDRAM one DIMM at a time (starting with the top DIMM slot) with known-good SDRAM SO-DIMMs.</p> <p>No: Go to next step.</p>
Bad ROM.	<p>Do you hear four or five error beeps at startup?</p> <p>Yes: Follow these steps to resolve the problem:</p> <ol style="list-style-type: none">1. Reseat the processor module and try again.2. Replace the processor module and try again.3. Replace the logic board. <p>No: If you do not hear any error beeps at startup, you have a different problem and should refer to one of the other troubleshooting tables in this chapter.</p>





Flashing Question Mark

This problem refers to a flashing question mark that appears on the screen during startup.

Possible Cause	Possible Fix
Corrupted system software or software drivers.	<p>Boot from the system CD that came with the unit. Can you see the hard drive on the desktop?</p> <p>Yes: The system software is most likely the problem. Reinstall system software. (You must use the system software CD that came with the unit to get the correct version of Mac OS 8.1 with the appropriate iMac enablers.)</p> <p>No: The hard drive or its software drivers are most likely the problem. Can you see the hard drive using Drive Setup?</p> <p>Yes: Use Drive Setup 1.5.1 to reinstall the software drivers for the hard drive. If the problem persists, use Drive Setup 1.5.1 to reinitialize the hard drive. (See TIL article #22206 for Drive Setup information.)</p> <p>⚠ Warning: you will lose all data on the hard drive when you reinitialize it. Backup the data first if possible.</p> <p>No: Go to next step.</p>
Bad cable connections, cables, or hard drive.	<p>If you don't see the hard drive using Drive Setup 1.5.1:</p> <ol style="list-style-type: none">1. Check all cable connections to and from the hard drive.2. Replace the hard drive/CD data cable.3. Replace the hard drive.4. Replace the hard drive power cable.



System Hangs During Boot

This problem refers to a system that begins a normal startup process with a boot chime and normal display, but then freezes before the Finder appears.

Possible Cause	Possible Fix
System extensions causing a conflict.	<p>Boot with Extensions off by holding down the Shift key during startup. (See TIL article #14343 for more information on possible Extension conflicts.) Does the system startup successfully with Extensions off?</p> <p>Yes: Begin adding back the system Extensions one at a time and starting up the system after each addition. If the system freezes again, you know that the last Extension you added is causing the problem.</p> <p>No: Go to the next step.</p>
Corrupted system software or bad SDRAM.	<p>Boot from the system CD that came with the unit. Does the system startup successfully?</p> <p>Yes: Reinstall system software. (You must use the system software CD that came with the unit to get the correct version of Mac OS 8.1 with the appropriate iMac enablers.) If the problem persists, go to the next step.</p> <p>No: Reseat the SDRAM. If the problem persists, replace the SDRAM (one DIMM at a time) with known-good SO-DIMMs.</p>
Bad hard drive.	<p>Can you see the hard drive using Drive Setup 1.5.1?</p> <p>Yes: Use Drive Setup 1.5.1 to reinstall the software drivers for the hard drive. If the problem persists, use Drive Setup 1.5.1 to reinitialize the hard drive. (See TIL article #22206 for Drive Setup information.) ⚠Warning: you will lose all data on the hard drive when you reinitialize it. Backup the data first if possible.</p> <p>No: Go to next step.</p>
Bad hard drive, cables, or cable connections.	<p>If you don't see the hard drive using Drive Setup:</p> <ol style="list-style-type: none">1. Check all cable connections to and from the hard drive.2. Replace the hard drive/CD data cable.3. Replace the hard drive.4. Replace the hard drive power cable.



This problem refers to a system that begins a normal startup process with a boot chime and normal display, but then freezes before the Finder appears.

Possible Cause**Possible Fix**

External device is bad.

Disconnect all external devices (USB and Ethernet). Then begin reconnecting these devices one at a time (beginning with the keyboard and then the mouse) and start up the computer after each device is connected to see if one of the external devices is causing the problem. If the problem occurs after you connect a particular external device, replace the device in question.



System Problems After Startup

If you experience system problems after a successful startup (i.e., after the Finder appears on the screen), most likely the problem is not with the iMac hardware (with the exception of some possible RAM issues).

Following are troubleshooting tables with problem symptoms that you may see after the Finder appears. Possible causes for each symptom can be found in the left-hand column with the corresponding fixes in the right-hand column. The troubleshooting information is presented in the order of the most probable cause and fix; therefore, Apple strongly recommends that you carry out the troubleshooting in the order in which it is presented.

(**Note:** If you are instructed to replace a module and this does not fix the problem, be sure to reinstall the original module before you proceed to the next fix.)





System Hangs

Refer to this table if your system intermittently hangs (freezes) during normal operation. (Note: if your system only hangs when using a specific application, the problem is most likely with the application and not with your iMac hardware or system software.) If this table does not solve the problem, refer to the “Software Troubleshooting” manual on Service Source (under the Troubleshooting Tab) for more comprehensive information.

Possible Cause	Possible Fix
System extensions causing a conflict.	Boot with Extensions off by holding down the Shift key during startup. (See TIL article #14343 for more information on possible Extension conflicts.) Does the system startup successfully with Extension off? Yes: Begin adding back the system Extensions one at a time and starting up the system after each addition. If the system freezes again, you know that the last Extension you added is causing the problem. No: Go to the next step.
Corrupted system software.	Boot from the system CD that came with the unit. Does the problem recur? Yes: Go to next step. No: The system software is most likely the problem. Reinstall system software. (You must use the system software CD that came with the unit to get the correct version of Mac OS 8.1 with the appropriate iMac enablers.)
Bad USB device.	Turn off the computer and disconnect all USB devices. Next, power on the system using the power button on the front of the unit, and begin adding back the USB device one at time, beginning with the keyboard and then the mouse, and so on. If the system hangs only after you reconnect a particular USB device, replace that USB device.
Bad memory.	Run MacTest Pro in loop mode overnight to test for bad memory. If MacTest Pro finds a bad memory module, or other hardware, replace the hardware in question with a known-good module.
Bad logic board.	Replace the logic board.
Bad processor module.	Replace the processor module.





Distorted Video

“Distorted Video” refers to a problem with the screen geometry or focus.

Possible Cause	Possible Fix
System is out of focus.	Adjust the focus using the Display Adjustment Utility on the MacTest Pro CD. (See “Focus” in the iMac Adjustments chapter for instructions.)
Screen geometry is off adjustment (display is off center, sides or top of the screen are not straight, etc.).	Adjust the screen geometry using the Display Adjustment Utility on the MacTest Pro CD. (See “Geometry” in the iMac Adjustments chapter for instructions.)
Screen cutoff or white balance is out of adjustment.	Adjust the cutoff or white balance using the Display Adjustment and Display Service Utilities on the MacTest Pro CD. (See “Video” in the iMac Adjustments chapter for instructions.)



Tinting Video

“Tinting Video” refers to a predominant color tint or color covering the screen.

Possible Cause	Possible Fix
Environmental causes.	Verify that the iMac unit is not near other equipment (such as speakers, radios, phones, fluorescent lighting, magnets, or other electronic equipment) that could affect the video display. If necessary, move the iMac computer to another area and restart the unit.
Color is out of adjustment.	Adjust the white balance using the Display Adjustment and Display Service Utilities on the MacTest Pro CD. (See “Video” in the iMac Adjustments chapter for instructions.)
Loose RGB cable.	Reseat the internal RGB cable at J6 on the A/V interconnect board and at P301 on the analog/video board.
Bad analog/video board.	Replace the analog/video board.
Bad RGB cable.	Replace the internal RGB cable that runs between J6 on the A/V interconnect board and at P301 on the analog/video board.



Garbage Video

“Garbage video” refers to erroneous text or characters that appear on the screen.	
Possible Cause	Possible Fix
Corrupted system software.	<p>Boot from the system CD that came with the unit. Open the Monitors and Sound control panel and change the Maximum Resolution and Color Depth to their maximum settings. Restart the unit. Does the screen display appear normal now?</p> <p>Yes: Reinstall system software. (You must use the system software CD that came with the unit to get the correct version of Mac OS 8.1 with the appropriate iMac enablers.)If the problem persists, go to the next step.</p> <p>No: Go to next step.</p>
Bad VRAM.	<p>Remove any VRAM DIMMs and restart the unit. Does the screen display appear normal now?</p> <p>Yes: Replace the existing VRAM DIMMs with known-good VRAM DIMMs.</p> <p>No: Go to next step.</p>
Bad logic board.	Replace the logic board.



Memory Error Dialog

If you see a error dialog message pertaining to memory after you have a successful startup sequence (that is, a normal boot tone with no error beeps and proper video display, etc.) then refer to the table below to troubleshoot the problem.

Possible Cause	Possible Fix
Dialog message reads “The built-in memory test has detected a problem. Please contact a service provider for assistance.”	Run Mac TestPro to locate the bad SDRAM. Replace the SDRAM with a known-good SO-DIMM.



Network Problems

Refer to this troubleshooting table if you are unable to switch to the Ethernet network option in the control panel or if you are unable to see any network devices. **Note:** if you are able to see most network devices, but one particular device does not show up in the Chooser, troubleshoot the device in question. You most likely do not have a network problem.

Possible Cause	Possible Fix
Wrong option selected in the control panel.	Open the Network control panel and select the Ethernet option. Are you able to select the Ethernet option? Yes: Verify that you can now see devices on the network. If the problem persists, go to the next step. No: Go to next step.
Corrupted PRAM.	Reset parameter RAM. Hold down <Command> <Option> <P> <R> during startup but before "Welcome to Macintosh" appears.
Corrupted system software.	Boot from the system CD that came with the unit. Open the Network control panel and switch to Ethernet. Are you able to switch to Ethernet and see Ethernet devices on the network now? Yes: Reinstall system software. (You must use the system software CD that came with the unit to get the correct version of Mac OS 8.1 with the appropriate iMac enablers.) If the problem persists, go to the next step. No: Go to next step.
Bad Ethernet cable.	Replace the Ethernet cable with a known-good cable.
Bad Ethernet port at the wall or hub.	Try connecting to a different Ethernet port at the wall or external hub. Are you able to switch to Ethernet and see Ethernet devices on the network now? Yes: The original Ethernet port is bad. Contact your network administrator. No: Go to next step.
The entire network is down.	Are other users experiencing the same problem? Yes: There is a network-wide problem. Contact your network administrator. No: Replace the logic board.





CD-ROM Problems

CD-ROM problems are defined by the inability to see the CD-ROM drive on the desktop or to open a CD disc that is loaded into the drive. Note: a certain amount of CD-ROM drive vibration is normal. If the drive is functioning properly, the vibration is not causing a problem.

Possible Cause	Possible Fix
Bad CD-ROM disc.	Try using a known-good compact disc.
Corrupted system software.	<p>If the CD-ROM drive fails to mount, boot off the system CD that came with the unit. Do you see the CD-ROM drive on the desktop now?</p> <p>Yes: Reinstall system software. (You must use the system software CD that came with the unit to get the correct version of Mac OS 8.1 with the appropriate iMac enablers.)</p> <p>No: Go to next step.</p>
Loose cable.	Check all cables running to and from the CD-ROM drive at both ends and make sure they are attached securely.
Dirty CD lens.	Clean the CD-ROM drive lens.
Bad CD-ROM drive.	Replace the CD-ROM drive.
Bad CD-ROM cable.	<ul style="list-style-type: none">- Replace the hard drive/CD data cable.- Replace the CD-ROM power cable.
Bad logic board.	Replace the logic board.





Hard Drive Problems

Hard drive problems include a hard drive that doesn't operate (it doesn't spin) or a hard drive that doesn't mount (it doesn't appear on the desktop).

Possible Cause	Possible Fix
Corrupted drivers.	Can you see the hard drive using Drive Setup 1.5.1? Yes: Use Drive Setup 1.5.1 to reinstall the software drivers for the hard drive. If the problem persists, use Drive Setup 1.5.1 to reinitialize the hard drive. (See TIL article # 22206 for instructions.) ⚠Warning: you will lose all data on the hard drive when you reinitialize it. Backup the data first if possible. No: Go to next step.
Bad hard drive, cables, or cable connections.	If you don't see the hard drive using Drive Setup: 1. Check all cable connections to and from the hard drive. 2. Replace the hard drive/CD data cable. 3. Replace the hard drive. 4. Replace the hard drive power cable.



Sound Out Problems

Sound out problems refer to a lack of sound coming from the internal speakers (located on the front of the unit directly below the display), external speakers (connected via the I/O panel to the speaker connector on the logic board), or both.

Possible Cause	Possible Fix
Control Panel setting is incorrect.	<p>First, disconnect any external microphones, speakers or headphones. Next, Verify that volume setting in Control Panel is adequate and that mute is not checked. Test the for sound coming from the internal speakers. Do you have sound now?</p> <p>Yes: If the initial sound out problem was with the internal speakers, the problem is solved. If you reconnect the external sound out device and it is not working, the problem may be with the external device itself or its cable. Replace the external microphone, speaker, or headphone in question with a known-good device. If the problem persists, replace the logic board.</p> <p>No: Go to next step.</p>
Corrupted PRAM.	Reset parameter RAM. Hold down <Command> <Option> <P> <R> during startup but before "Welcome to Macintosh" appears.
Loose speaker connection.	Verify that both ends of the internal speaker cables are attached securely.
Bad logic board.	<p>Plug known-good headphones or external speakers into the external jack. Do you get sound?</p> <p>Yes: Go to next step.</p> <p>No: Replace the logic board.</p>
Bad cable.	<ul style="list-style-type: none">- Replace the audio cable that connects at J14 on the logic board and at J7 on the A/V interconnect board.- Replace the 5 connector audio cable that connects the internal speakers to the A/V interconnect board and audio on/off board.
Bad board.	<ul style="list-style-type: none">- Replace the A/V interconnect board.- Replace the audio on/off board.- Replace the logic board.





IrDA Problems

IrDA problems refer to the inability of two infrared-equipped units to communicate via their infrared communication panels to transfer data or commands.


Possible Cause	Possible Fix
Infrared device is dirty.	Clean infrared window with soft lint-free cloth.
Infrared units are too close or too far apart.	<ul style="list-style-type: none">- Make sure units are spaced greater than 3 feet but less than 6 feet and at less than a 20 degree angle.- Verify infrared signal is being received by host computer.
IrDA control panel is set incorrectly.	Open the IrDA control panel and make sure “Auto Connect” is selected.
Units are not compatible with one another.	Refer to the Basics chapter in this manual for an overview of IrDA compatibility with the iMac computer.
Bad IrDA board.	Replace IrDA board.
Bad IrDA cable connections.	<ul style="list-style-type: none">- Reseat the IrDA cable that connects the IrDA board to the A/V interconnect board.- Reseat the IrDA cable that runs between the A/V interconnect board and the logic board.
Bad external IrDA cable.	Replace the IrDA cable that runs between the IrDA board and the audio/video interconnect board.
Bad internal IrDA cable.	Replace the IrDA cable that runs between the audio/video interconnect board and the logic board.
Bad IrDA port on the A/V interconnect board.	Replace the A/V interconnect board.
Bad Logic board.	Replace the logic board.




USB Problems

USB problems refer to symptoms or issues that may occur with external USB devices that are attached to the iMac. This could include Apple and/or third-party USB devices.

Possible Cause	Possible Fix
Not enough power for the USB device to function.	The following error message will appear confirming that a device cannot function at all due to a lack of power. This lack of power (depending on the device) can be a result of a disconnected external power source, or not enough power available from the hub the device is connected to. The two corrective steps listed in the dialog box (shown on the next page) provide the user guidance in troubleshooting these conditions.

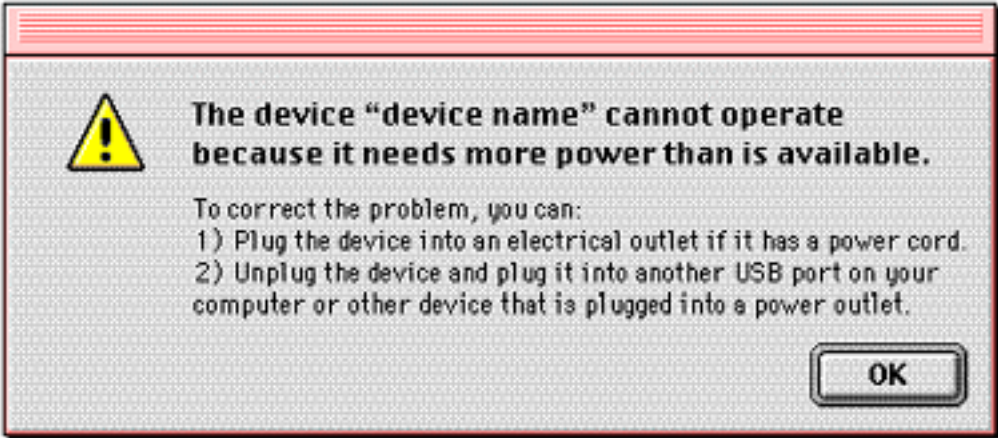


USB device experiencing a partial lack of power.	Similar to the first error message, this error message indicates a device may not completely function at all due to a partial lack of power and gives steps to remedy the problem.
--	--

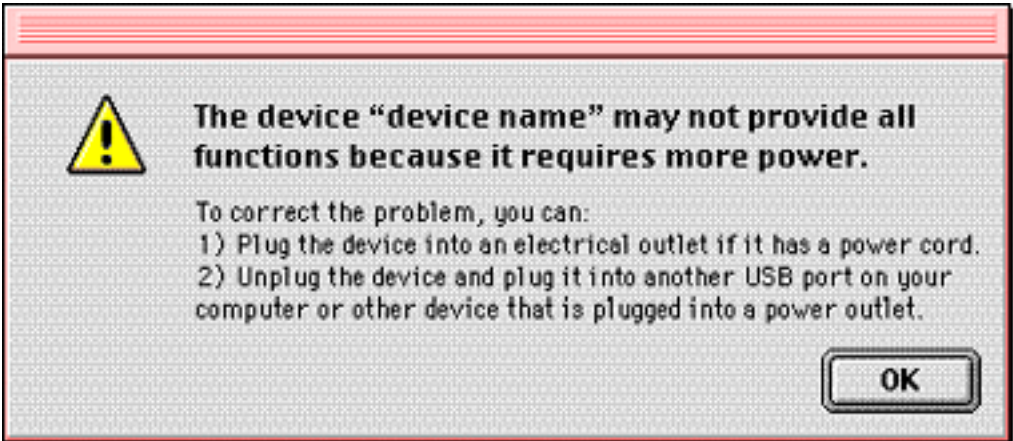



USB problems refer to symptoms or issues that may occur with external USB devices that are attached to the iMac. This could include Apple and/or third-party USB devices.

Possible Cause	Possible Fix
USB driver missing.	This error message indicates the device's driver is missing. Customers will need to check the instructions that came with the device and install the Mac OS driver.
<div><div><div><p>The software needed for “device name” cannot be found. Some or all of its features may not work. Please refer to the device documentation to install the necessary software.</p><div>OK</div></div></div></div>	
Bad USB connector.	Connect the problem device directly into one of the iMac USB ports or, if it’s already connected to one of the iMac USB ports, switch it to the other port.
Bad USB device.	Replace the USB device.
Bad Logic board.	Replace the logic board.



Cursor Problems (A)

The first section (A) of this table deals with a cursor that does not move on the screen; however, the keyboard is working and accepting commands. (See “Cursor Problems (B)” for additional troubleshooting information.)	
Possible Cause	Possible Fix
Bad mouse connection.	Verify that the mouse is connected securely to the USB keyboard.
Dirty mouse.	Inspect inside of mouse for buildup of dirt or other contaminants. Clean mouse if necessary.
Bad USB port on the keyboard.	If the mouse is connected to the keyboard, connect the mouse to one of the USB ports inside the iMac I/O panel instead. Does the cursor work now? Yes: Replace the keyboard. No: Replace the mouse.
Bad USB port on the iMac.	If the mouse is already connected to one of the USB ports inside the iMac I/O panel, switch it to the other USB port inside the I/O panel. If the cursor still doesn’t work, replace the logic board.





Cursor Problems (B)

This section of the “Cursor Problems” table (B) deals with a cursor that moves on the screen, but clicking the mouse has no effect or double-clicking the mouse does not open an application, disk or server.

Possible Cause	Possible Fix
Corrupted PRAM.	Reset parameter RAM. Hold down <Command> <Option> <P> <R> during startup but before "Welcome to Macintosh" appears.
Corrupted system software.	Boot off the system CD that came with the unit. Does the cursor work now? Yes: Reinstall system software. (You must use the system software CD that came with the unit to get the correct version of Mac OS 8.1 with the appropriate iMac enablers.) No: Go to next step.
Duplicate system folders in conflict.	Remove duplicate system folders.
Bad USB port on the keyboard.	If the mouse is connected to the keyboard, connect the mouse to one of the USB ports inside the iMac I/O panel instead. Does the cursor work now? Yes: Replace the keyboard. No: Replace the mouse.
Bad USB port on the iMac.	If the mouse is already connected to one of the USB ports inside the iMac I/O panel, switch it to the other USB port. Does the cursor work now? Yes: Replace the logic board. No: Go to next step.
Bad mouse.	Replace mouse.
Bad logic board.	Replace logic board.



USB Printer Problems

This troubleshooting table deals with an iMac that cannot print to an attached **known-good** USB printer.

Possible Cause	Possible Fix
Printer is not compatible with the iMac USB bus.	Verify with the manufacturer of the printer that it is iMac compatible.
Chooser is set incorrectly.	Open the Chooser and verify that you have the correct printer and printer driver selected.
Bad printer driver or hardware problem.	Use Apple System Profiler to see if it recognizes that a USB printer is connected. Yes: Reinstall the printer driver. No: The printer or its cable is malfunctioning. Replace the cable or printer.
Bad external USB port.	If the printer is connected to a third-party hub, switch it to one of the iMac ports in the I/O panel. Does the printer work now? Yes: You have a bad third-party hub. Replace the device that contains the problem USB port or refer to the third-party documentation for troubleshooting procedures. No: Go to next step.
Bad USB port on the iMac.	If the printer is already connected to a USB port on the iMac, switch it to the other USB port. Does the printer work now? Yes: Replace the logic board. No: Go to next step.
System software is corrupted.	Do a clean install of the system software using the Mac OS 8.1 CD that shipped with the iMac. (You must use the system software CD that came with the iMac in order to get the correct version of Mac OS 8.1 with the appropriate iMac enablers.)
Bad cable.	Replace the printer interface cable.
Bad logic board.	Replace the logic board.





Networked Printer Problems

This troubleshooting table deals with an iMac that cannot print to an attached **known-good** networked printer.

Possible Cause	Possible Fix
Bad network connections.	Check the network connections.
Wrong version of system software is installed.	Verify that you have the correct version of Mac OS 8.1 with the appropriate iMac enablers installed. If you are unsure, reinstall the system software using the original CD that shipped with the iMac unit.
Chooser is set incorrectly.	Open the Chooser and verify that you have the correct printer and printer driver selected.
System, network, or printer software is corrupted.	Do a clean install of the system software (you must use the system software CD that came with the iMac in order to get the correct version of Mac OS 8.1 with the appropriate iMac enablers) and/or the network and printer software.
General network problems.	Refer to the “Network Problems” troubleshooting table earlier in this chapter.
Bad logic board.	Replace the logic board.





Modem Not Recognized

This table should help you troubleshoot and fix problems where the internal modem is not recognized. Follow the instructions under the “Possible Fix” column to resolve the problem.

Possible Cause	Possible Fix
Modem is not Recognized: If the modem is not recognized or listed in the Application or OS, refer to this section of the table.	
Needed extensions or CCL files are not installed or are corrupt.	Are the correct CCL and extension files installed? (Note: You will need the iMac Modem Extension and the iMac internal modem CCL.) Yes: The CCL or extension may be corrupt. Reinstall the CCL and modem extension. If the problem persists, reinstall the system software and try again. No: Install the correct CCL and modem extension and try again.
PRAM is corrupt.	Zap PRAM by holding down the Option, Command, P, and R keys.
Serial Port Not Available Message: If the Modem Control Panel and/or ClarisWorks reports that the serial port is not available, refer to this section of the table.	
The modem card is loose, missing, or bad.	Is the modem card installed? Yes: Reseat the modem card and try again. If the problem persists, replace the modem card. No: Install a modem card and try again.



Modem Dialing Problems

If the modem is having problems dialing out, refer to the table below for possible fixes. The table is divided into different sections, each with its own symptom and cure(s). Find your symptom and then follow the instructions under the “Possible Fix” column to resolve the problem. **Note:** A good first step in troubleshooting a modem problem is to verify the modem connection as explained in “Testing the Modem” earlier in this chapter.

Possible Cause	Possible Fix
No Dial Tone Error Message: If the system gives you a “No Dial Tone” error message, refer to this section of the table.	
The phone line is not connected.	Is the phone line connected securely to the computer and to the wall jack? Yes: Go to the next step. No: Reconnect the phone line at both ends and try again.
The phone line is dead.	Plug a phone into that line. Do you get a dial tone? Yes: There does not appear to be a problem with the phone line. Test the modem as explained in “Testing the Modem” earlier in this chapter. No: Report the dead phone line to the phone company.
There is a problem with the modem card.	Reseat the modem card. If the problem persists, replace the modem card.
Modem Cannot Dial Out: If there is a dial tone, but the user cannot dial out with the modem, refer to this section of the table.	
The modem settings are incorrect.	Open the modem control panel and make sure the modem type selected is “iMac Internal 56K,” (or “Apple iMac internal modem” in the Earthlink setup screen) the sound is “on,” and the dialing is set to “tone.” At this point, leave the “ignore dial tone” setting unselected.
The incorrect CCL file is selected or it is damaged.	Verify you have the correct CCL selected. If the problem persists, reinstall the CCL file.
There is a problem with the phone line or dial tone settings.	Can you get a normal dial tone with the modem? Yes: Go to the next step. No: Some voice mail systems use a beeping dial tone to notify the user of waiting messages, which can affect the modem connection. Open the modem control panel and select “ignore dial tone”.
The modem card is loose or missing.	If you get an error message that the modem is not found, verify that the modem card is installed and properly seated. If the problem persists, replace the modem card.





If the modem is having problems dialing out, refer to the table below for possible fixes. The table is divided into different sections, each with its own symptom and cure(s). Find your symptom and then follow the instructions under the “Possible Fix” column to resolve the problem. **Note:** A good first step in troubleshooting a modem problem is to verify the modem connection as explained in “Testing the Modem” earlier in this chapter.

Possible Cause	Possible Fix
Modem Reports an Error When Dialing Out: If the modem is selected in the software but gives an error when you try to dial out, refer to this section of the table.	
The driver or CCL is corrupt or incorrect.	Make sure the correct driver is installed and the correct CCL is selected and that they are not corrupted. If necessary, reinstall the driver and/or CCL. If the problem persists, reinstall the system software.
Computer Freezes when Modem Dials: If the computer locks up whenever the modem is instructed to dial and the computer must be restarted, refer to this section of the table.	
Extensions are in conflict or the OS is corrupted.	Enable only the Mac OS files in the extensions manager and any modem drivers needed. If the problem persists, reinstall the system software.



Modem Not Connecting

This table should help you troubleshoot and fix a modem that is recognized and able to dial out, but is having trouble connecting. The table is divided into different sections, each with its own symptom and cure(s). Find your symptom and then follow the instructions under the “Possible Fix” column to resolve the problem.

(Note: It is a good idea to check the Activity Log (accessible via the Remote Access menu) to see if there is an explanation for the failed connection attempt.)

Possible Cause	Possible Fix
Error Launching a Browser: If the system returns an error message when you try to launch an internet browser, refer to this section of the table.	
Browser software is not installed correctly.	If more than one browser is installed, check to see if the problem occurs with both browsers. If necessary, reinstall the browser software. (Note: Internet Explorer 4 and greater needs to be installed and not just drag copied.)
Dialup Software Problem: If the dialup software will not initiate a connection, refer to this section of the table.	
Dialup software is installed incorrectly.	Make sure the software is fully installed and all required extensions are enabled. If necessary, reinstall the dialup software.
Can't Connect to Online Site: If the modem is dialing and is answered by another modem but then does not successfully connect to the online service, refer to this section of the table.	
The phone line may have too much noise.	If the user has a second line, try that one. The user should contact their local phone company and request their line be checked.
Can't Select Features or Access Sites or Error Connecting to Online Site: If the internet application is run but gives an error whenever it tries to connect to an online site or the user has connected to the online service but cannot select any features, refer to this section of the table.	
TCP/IP control panel is configured incorrectly.	Check to make sure the TCP/IP control panel is correctly configured for the user's Internet Service Provider. If the TCP/IP control panel is not configured correctly, it will connect but won't be able to access any sites.
The service may be down.	Sometimes online services use different servers for dialup/authentication and for services. If one server is down, users may be able to login but not access any services. Contact the online service for help.





This table should help you troubleshoot and fix a modem that is recognized and able to dial out, but is having trouble connecting. The table is divided into different sections, each with its own symptom and cure(s). Find your symptom and then follow the instructions under the “Possible Fix” column to resolve the problem.

(Note: It is a good idea to check the Activity Log (accessible via the Remote Access menu) to see if there is an explanation for the failed connection attempt.)

Possible Cause	Possible Fix
Can’t Connect to Remote Access Server or ISP: If the modem can’t connect to a particular remote access server or Internet Service Provider, refer to this section of the table.	
The phone number is wrong.	Verify the phone number of the server you’re trying to call. Dial the number using a regular telephone and listen for the “whistle” of a modem. Make sure you’re calling the type of server for which you’ve set up Remote Access.
You don’t have access to the server.	If you don’t have access to the server, you may get an “Authentication Failed” message. Make sure you are a registered user on the server or that the server is set up for guest access. If trying to connect as a registered user, verify that you’ve entered your name and password correctly. Some servers require passwords that are “case-sensitive,” meaning capitalization matters.
Pauses in dialing are required.	You may need to create pauses while the number is being dialed. Insert a comma between parts of the number where a pause might be needed. Inserting a comma lengthens the pause. For example, the following entries cause Remote Access to dial “9” to get an outside line and then pause before dialing the rest of the number: 9, 555-1234 9,, 555-1234



Modem Dropping Connection

This table should help you troubleshoot and fix a modem that is dropping its connection once it is established. The table is divided into different sections, each with its own symptom and cure(s). Find your symptom and then follow the instructions under the “Possible Fix” column to resolve the problem.

Possible Cause	Possible Fix
Modem Disconnects: If the user is disconnected after a few seconds/minutes of connection, refer to this section of the table.	
The phone line has noise that is causing the modems to renegotiate until they disconnect.	The phone line may be too noisy to handle the higher modem speeds. Try connecting at a slower speed or use a generic CCL file. (If you are familiar with the CCL script language, you can edit the modem script to force a connection at a lower speed.) If the problem continues, contact the phone company to report the bad phone line.
The user has call waiting on that phone line.	With call waiting active, an incoming call can interrupt the connection. Disable call waiting using AT commands placed in the init string of the dialup application. Usually the string is *70.
There is a problem with the server to which you are connecting.	Servers sometimes develop problems that disconnect users without explanation. Try calling back later or use an alternate number if one is available.
The modem is loose or bad.	Reseat the modem. If the problem persists, replace the modem.
User Disconnected After Period of Time: If the user leaves the computer for a while and the modem is disconnected, refer to this section of the table.	
Timed disconnect setting is causing the modem to disconnect.	Some services or software packages have a feature that will disconnect the user after a set period of time. Either increase this time setting or disable the feature if possible. Contact the ISP or network administrator for more information.
You are Left Waiting for a Callback: If you do not receive the required callback from the server to which you are trying to connect, refer to this section of the table.	
Your callback number is incorrect.	Contact the network administrator to verify the callback number you are using is correct and then try again.
You are using an incorrect modem script.	If there is an attempt to callback but the connection fails, verify you are using the correct modem script and then try again.





Modem Performance Issues

<p>This table should help you troubleshoot issues with the speed or response time of the modem. The table is divided into different sections, each with its own symptom and cure(s). Find your symptom and then follow the instructions under the “Possible Fix” column to resolve the problem.</p>	
Possible Cause	Possible Fix
Slow Response: If the user has connected to the online service and is experiencing very slow response to their actions or when accessing sites, refer to this section of the table.	
Too many people are using the ISP's Internet services.	When using an ISP, users need to remember that the ISP only has a limited amount of bandwidth to the Internet. If a large amount of people are dialing in, individual's speeds will be affected.
The quality of the phone line is limiting modem performance.	Refer to “Modem Performance Issues” in the Basics chapter for an overview of factors that can affect modem performance.



Take Apart

iMac



Tools

The following tools are recommended for procedures in this chapter:

- Spring hook removal tool (922-1547) to remove the processor card
- Plastic screwdriver (922-3504) to release tabs on plastic housing
- Jeweler's Phillips screwdriver, size 00 mm to remove CD-ROM bezel
- CRT discharge tool
- Nut driver or pliers to remove thumbscrews on the audio/video interconnect board
- Needlenose pliers
- Phillips screwdriver
- ESD mat

Note: For additional take apart assistance, reference the iMac screw matrix, located with the iMac exploded views.






Lower Access Cover


Note: Position the computer face down, resting the CRT on an ESD mat or other soft surface.



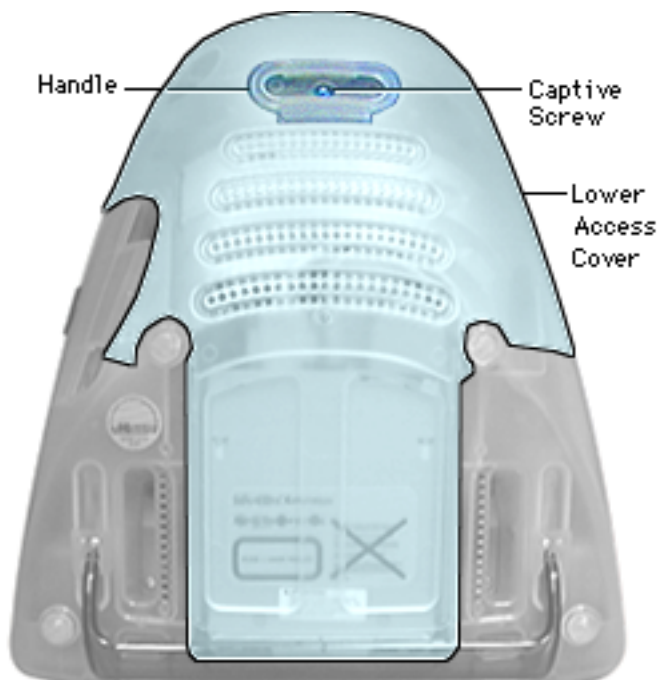

- 1 Loosen captive screw on access cover.



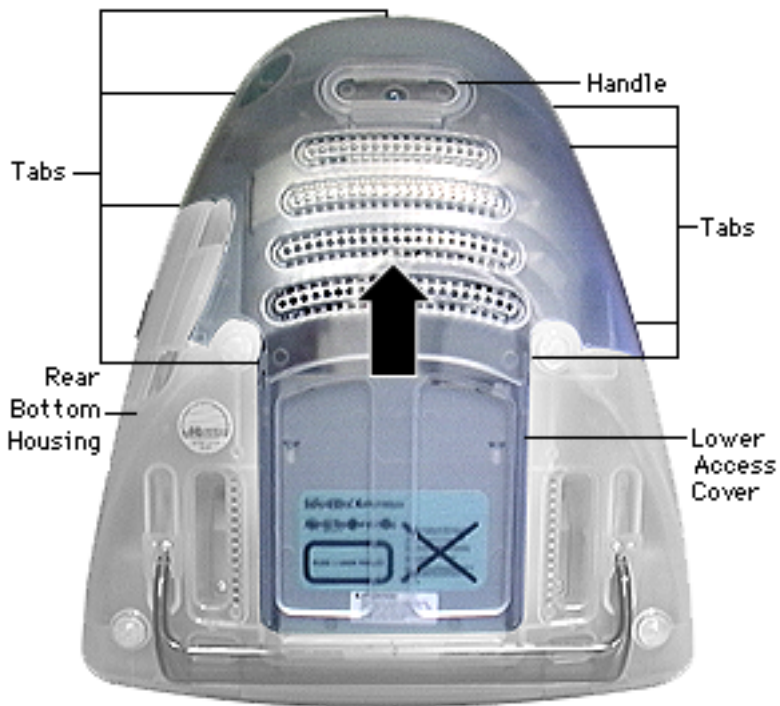

- 2 If necessary, pry tabs with a plastic screwdriver to release the cover from the rear bottom housing.
- 3 Using the handle, pull up and out on the lower access cover to remove it.




Logic Board/Mass Storage Chassis

Before you begin:


- Position the computer face down, resting the display on an ESD mat
- Remove the lower access cover



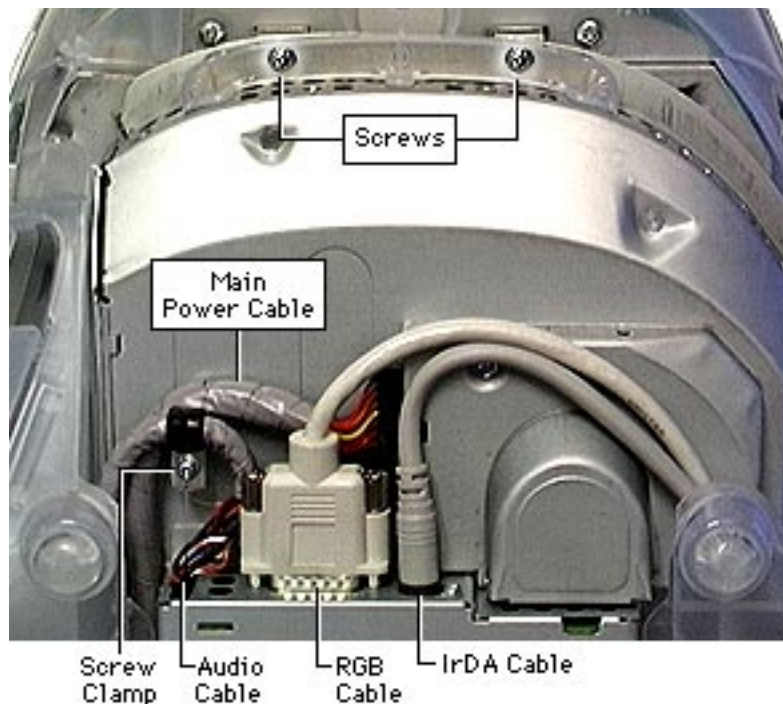

- 1 Remove the two screws at the top of the logic board/mass storage chassis.
- 2 Disconnect the screw clamp and the audio, RGB, main power, and IrDA cables.



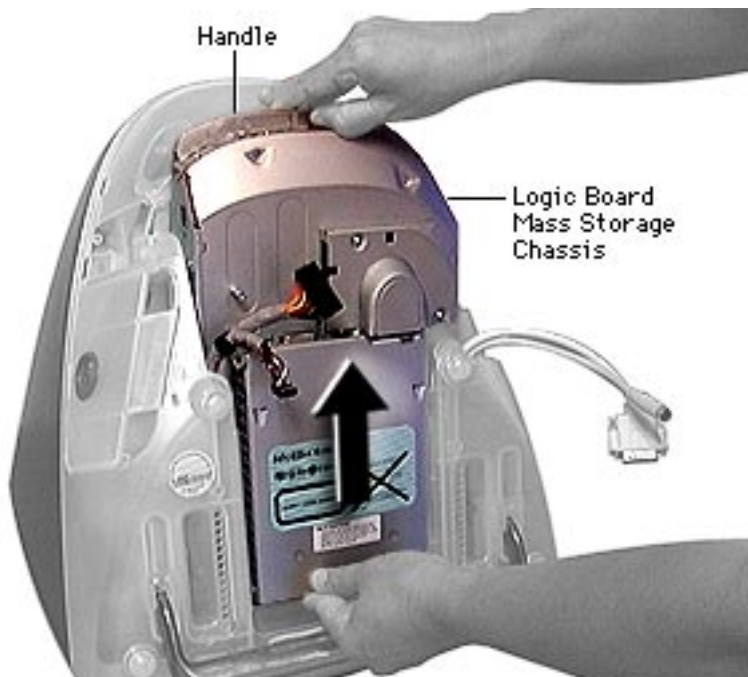


- 3 Using the handle, pull up on the chassis and slide the logic board/mass storage chassis out of the unit.



Logic Board


Before you begin, remove the following:

- Lower access cover
- Logic board/mass storage chassis

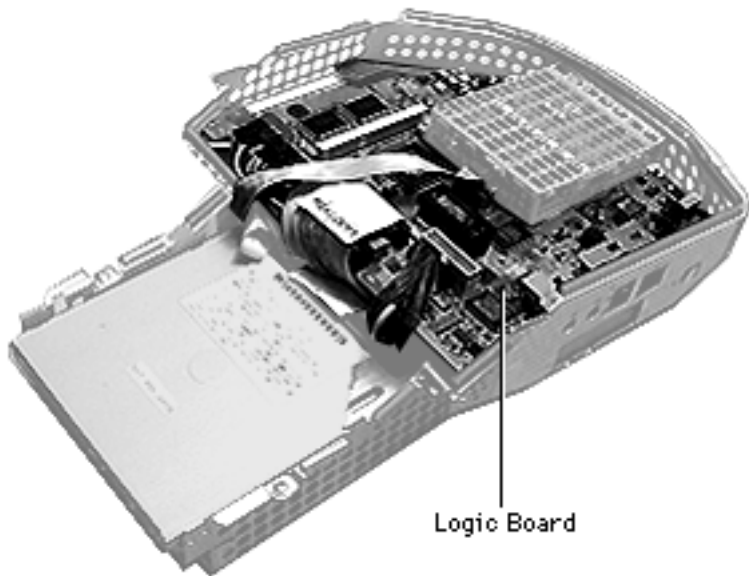


Logic Board



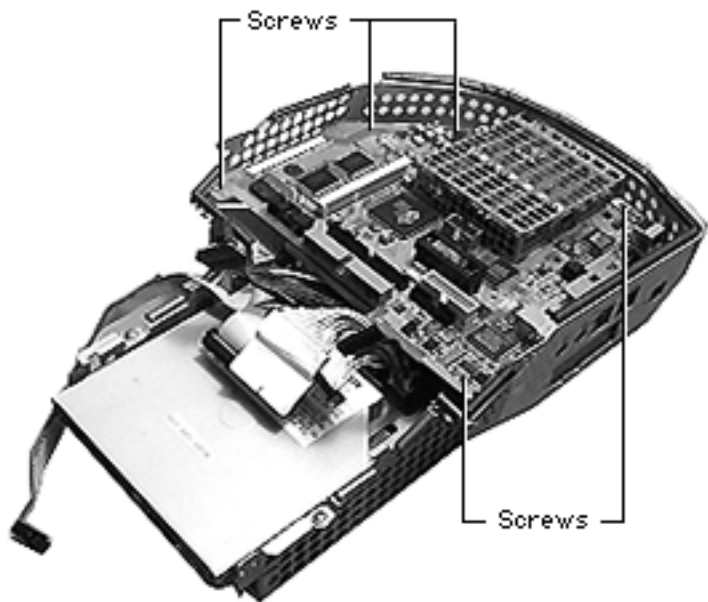

- 1 Disconnect all the cables on the logic board.
- 2 Remove the five screws that secure the logic board to the chassis.




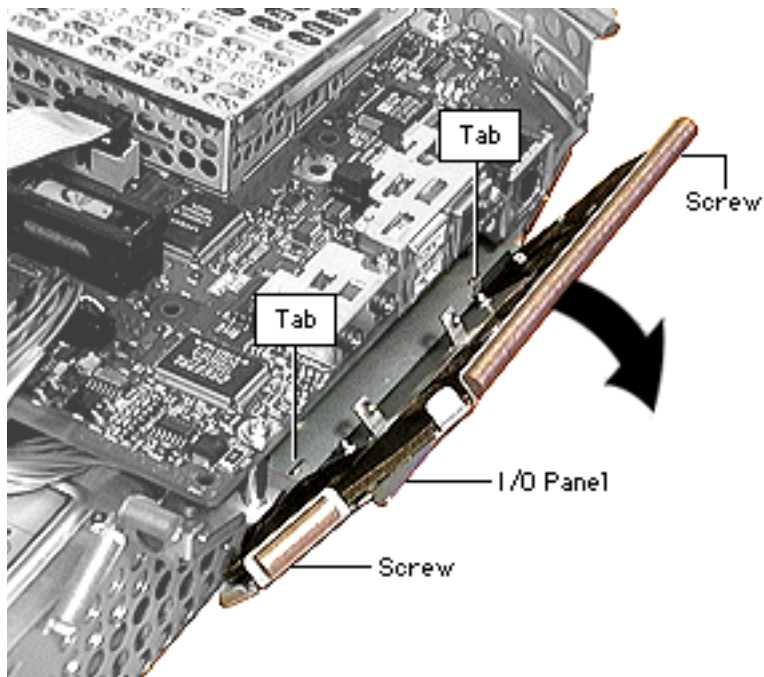

- 3 Remove the two flathead screws that secure the I/O panel to the chassis.
- 4 Tilt the I/O panel away from the chassis to remove the logic board.

Note: The metal tabs on the I/O panel hook into the chassis. These tabs allow the I/O panel to tilt.



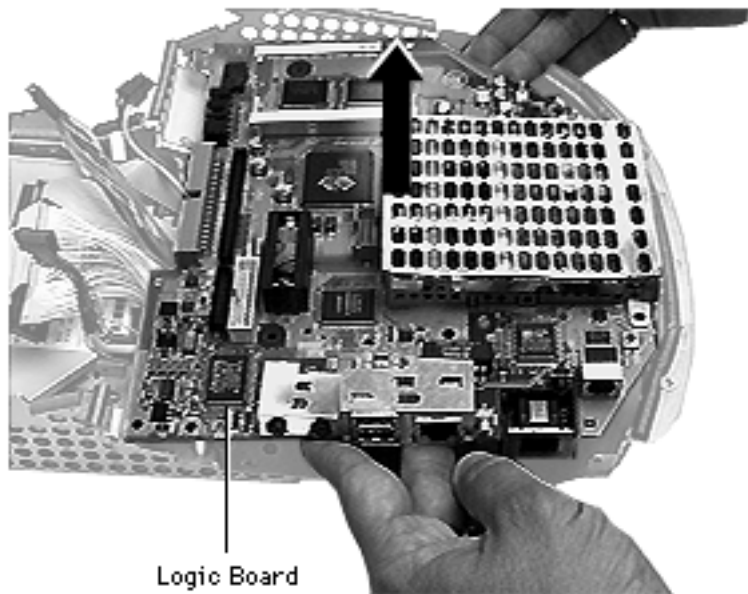


- 5 Holding the logic board by its edges, gently lift the logic board to disconnect it from the power filter board located underneath.

You may feel a slight resistance when you lift up the logic board if the power filter board is attached on the underside.

Note: If you replace the logic board, read the note on the next page about the Ethernet hardware ID label.



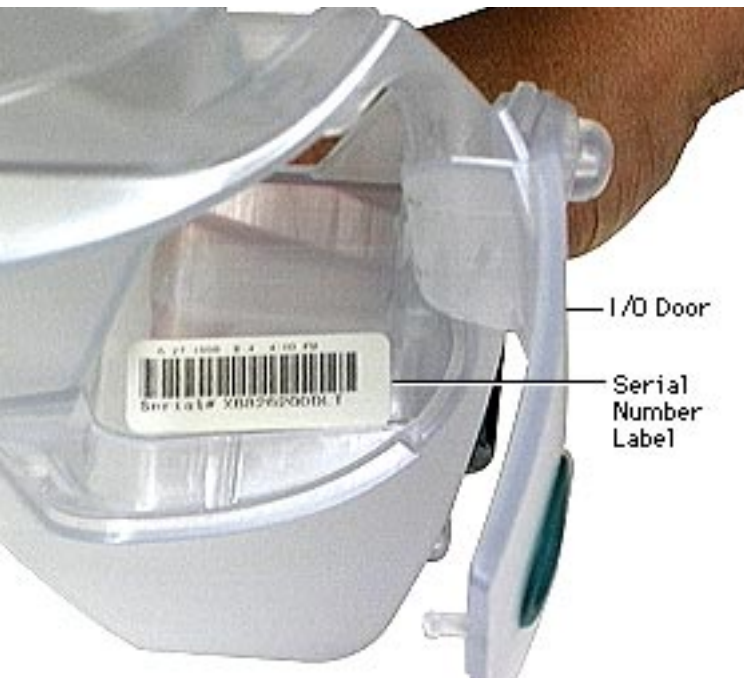


Note: The replacement logic board ships with an Ethernet hardware ID label. You must affix the new label over the existing Ethernet label, which is located above the serial number.

IMPORTANT: Do NOT cover up the serial number information that is printed on the existing Ethernet label.

Replacement Note: Before returning the logic board to Apple, remove the heatsink, cpu shields, processor card, modem card, plastic modem standoff.



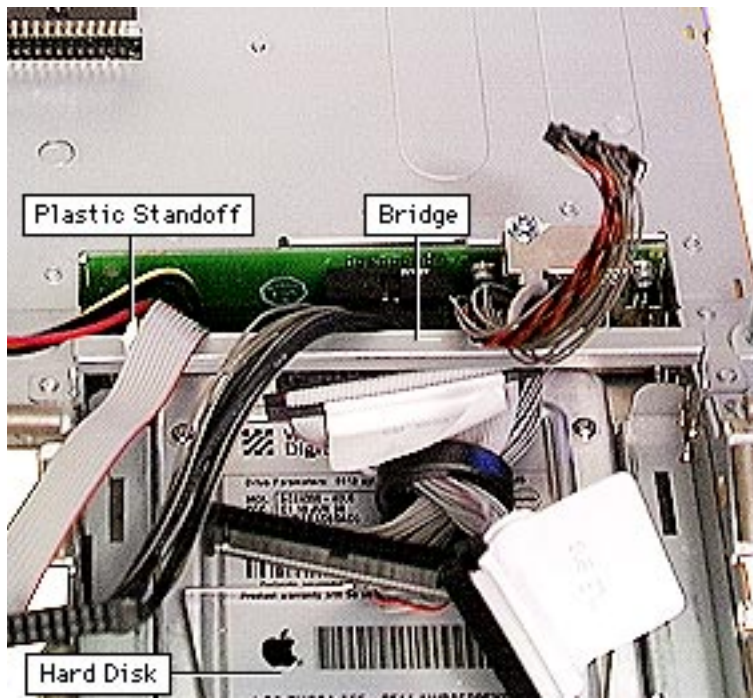

Routing Logic Board Cables

When reconnecting cables to the logic board, make sure the CD-ROM data cable runs underneath the metal bridge. The remaining cables rest on top of the metal bridge.







Modem

Before you begin, remove the following:

- Lower access cover
- Logic board/mass storage chassis
- I/O panel
- Logic board

Note: A pair of needlenose pliers is required to remove the modem from the modem standoff.

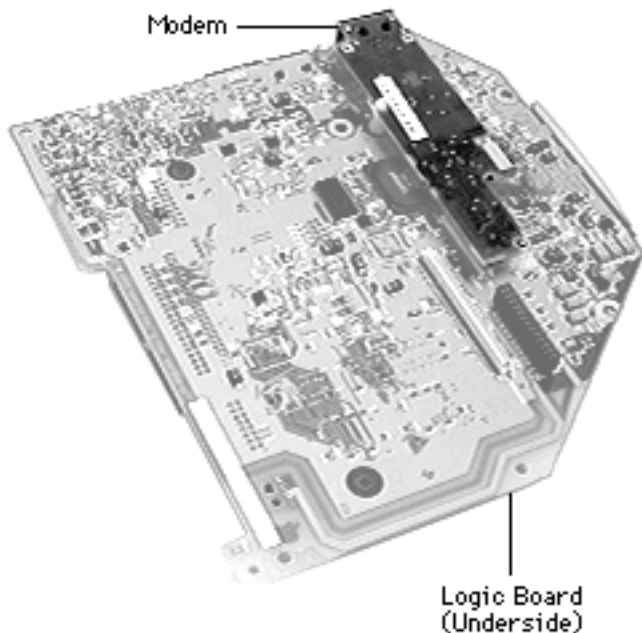

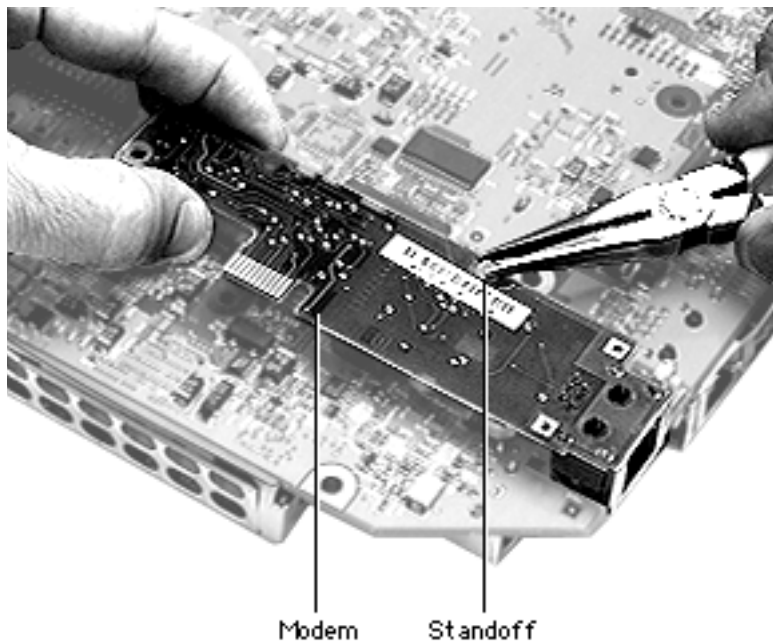


- 1 Turn the logic board over resting it on an ESD mat.
- 2 Squeeze the modem standoff with a pair of needlenose pliers to remove the modem from the logic board.

Note: If you are replacing the modem, keep the plastic standoff. Install the standoff on the replacement modem. If you are returning the logic board to Apple, remove the modem and the standoff. Install them on the replacement logic board.





Processor Card and Shield

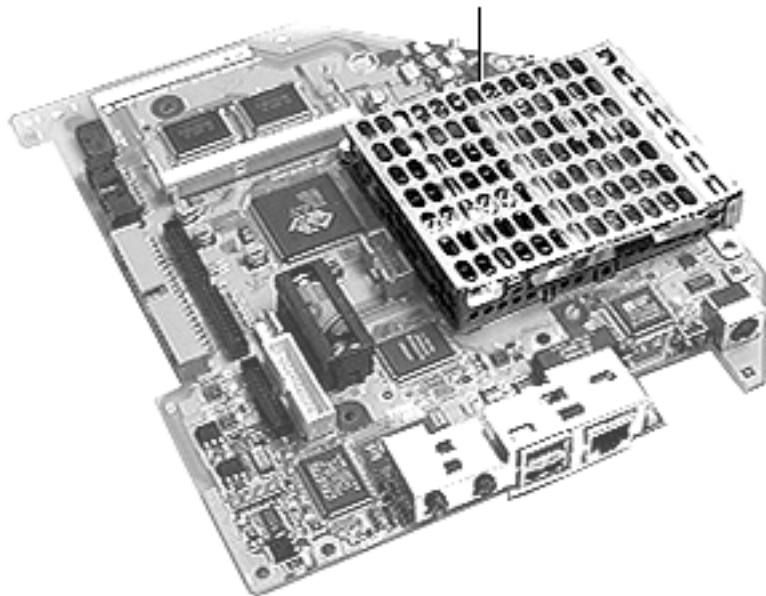

Processor Card


Before you begin, remove the following:

- Lower access cover
- Logic board/mass storage chassis






Processor Card Top Shield

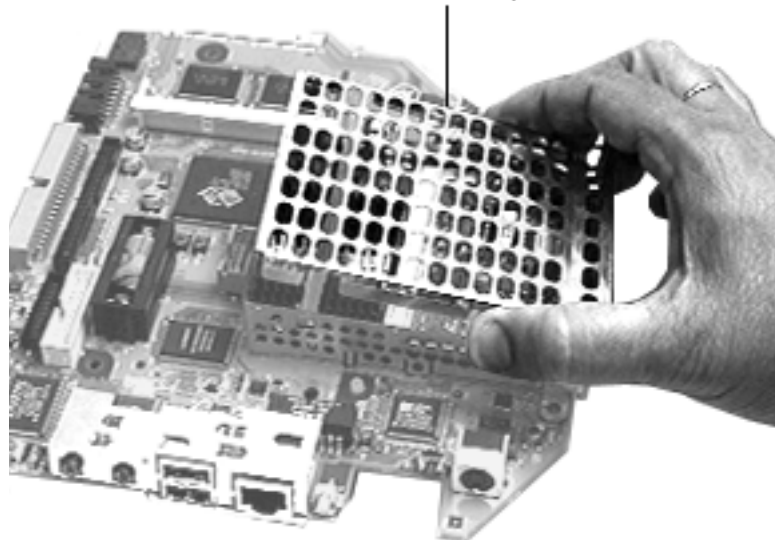


- 1 Remove the top shield from the processor card.

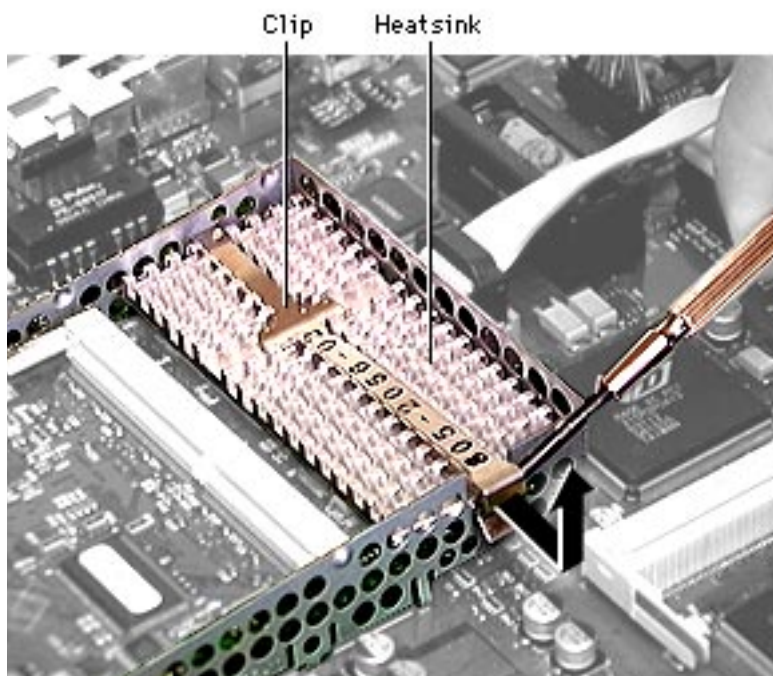

⚠ Warning: The heatsink may be hot to the touch.


- 2 Pry the heatsink clip off the processor shield frame.



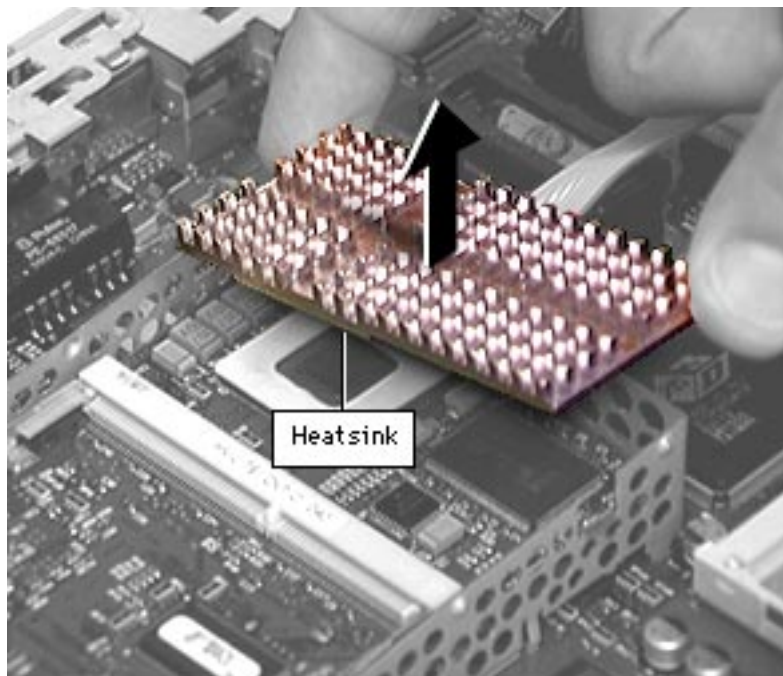

- 3 Lift the heatsink off the processor card.



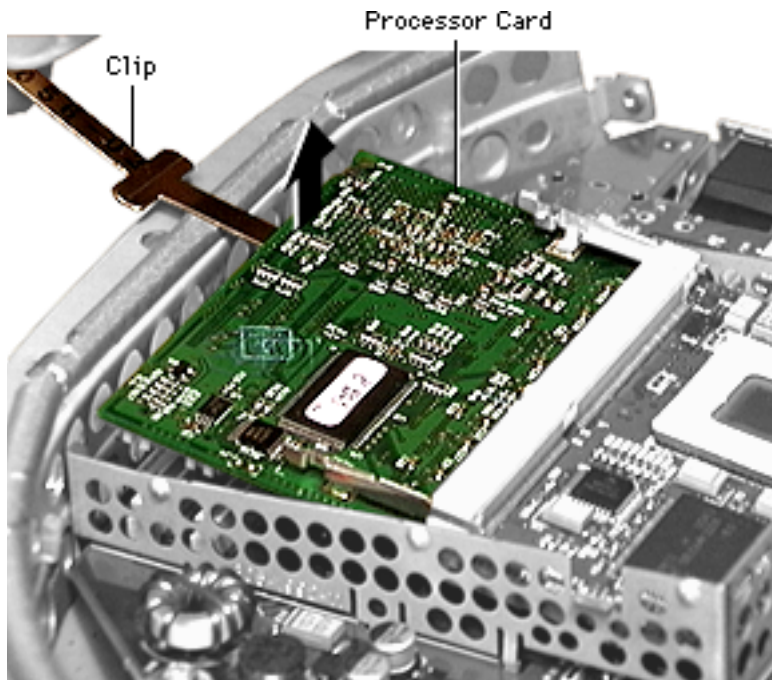

- 4 Pry the processor card up and away from the logic board connectors. This can be done with a spring hook removal tool or carefully with the heatsink clip as shown in the graphic.

Note: Remove the heatsink and SDRAM before returning the processor card to Apple. Do NOT remove the rubber gap filler on the microprocessor chip.






I/O Panel


Before you begin, remove the following:


- Lower access cover
- Logic board/mass storage chassis

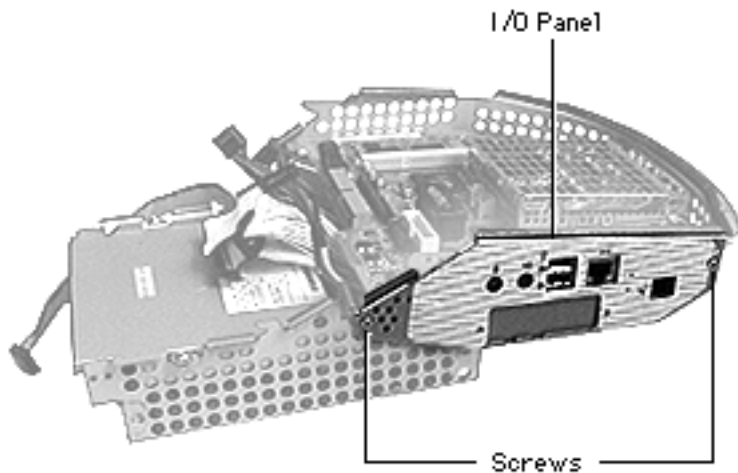




- 1 Remove the two screws that secure the I/O panel to the chassis.

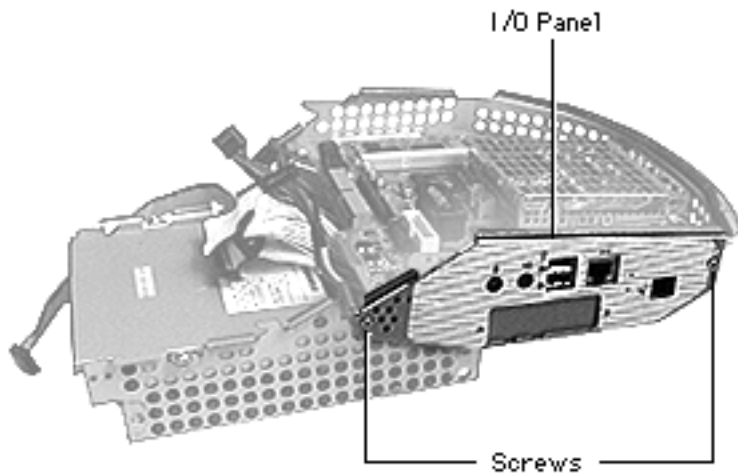

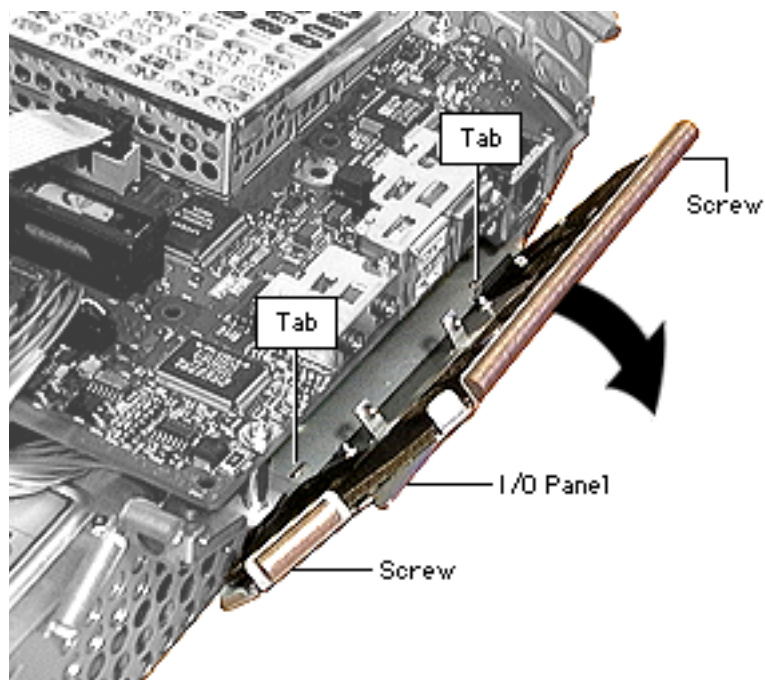

- 2 Tilt the I/O panel outward and unhook the I/O panel tabs from the chassis.

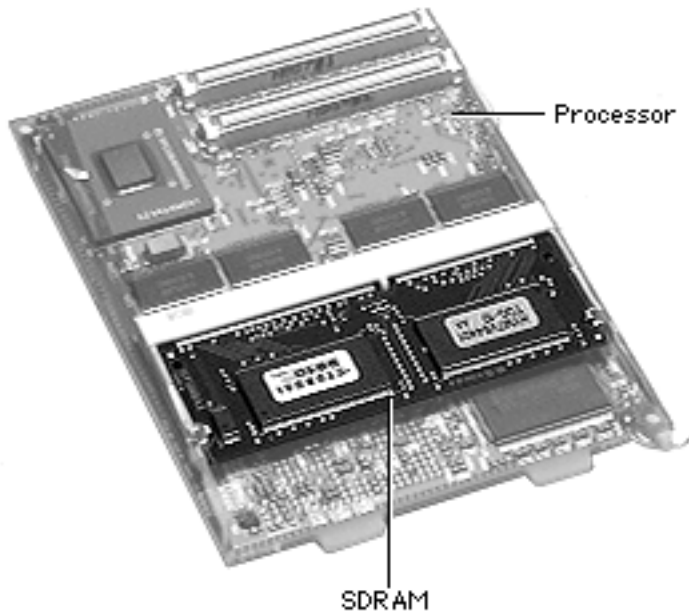

(Note: This is the underside of the Processor Card)


SDRAM

Before you begin, remove the following:

- Lower access cover
- Logic board/mass storage chassis
- Processor top shield
- Processor card

Note: There are two expansion slots (one on top and one underneath) for RAM modules on the processor card.



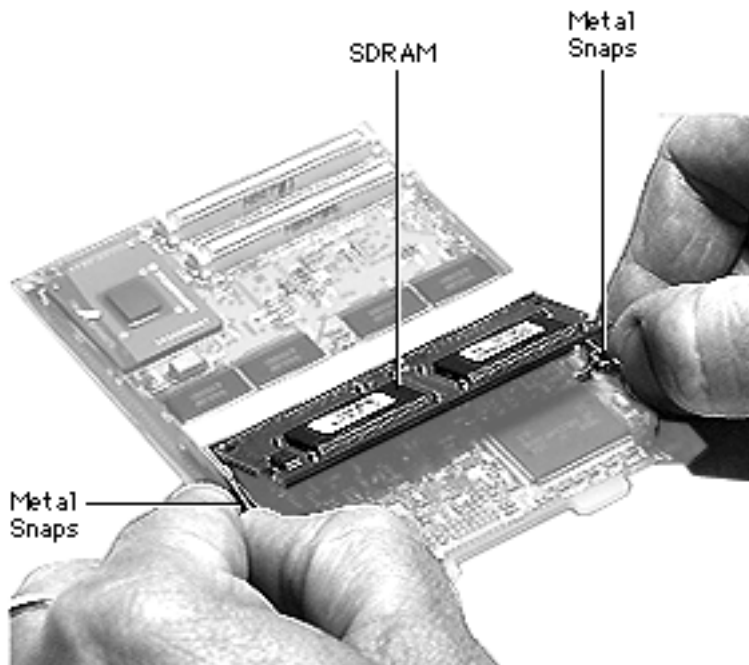

- 1 Pull the metal snaps on either side of the RAM DIMM to the sides. The connector will tilt up.
- 2 Pull the RAM DIMM out.

Note: Remove installed SDRAM from the processor card before returning the processor card to Apple.







Processor Shield Frame

Before you begin, remove the following:

- Lower access cover
- Logic board/mass storage chassis
- Processor top shield
- Processor card

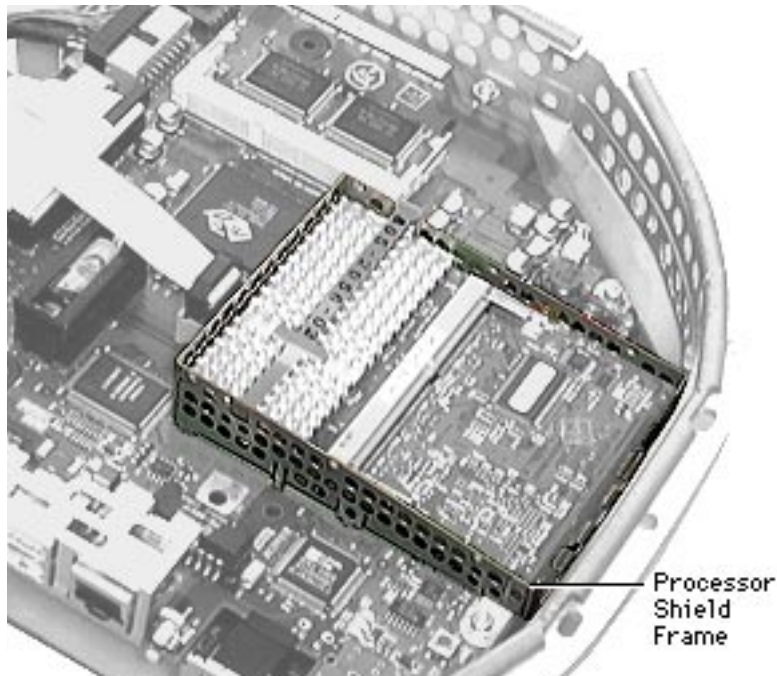

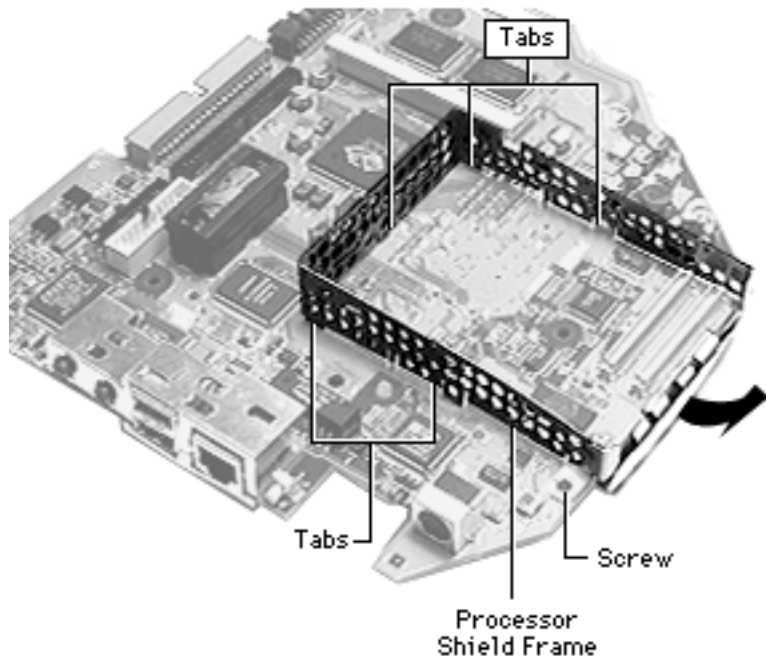

- 1 Remove the one screw that holds the shield frame to the logic board.
- 2 Unhook the tabs that attach the shield frame to the logic board. This may require jiggling the shield frame back and forth to unhook the tabs.

Note: Remove the processor shield frame, the processor top shield, the processor card, the modem, and modem standoff before returning the logic board to Apple.







CD-ROM

Before you begin, remove the following:

- Lower access cover
- Logic board/mass storage chassis

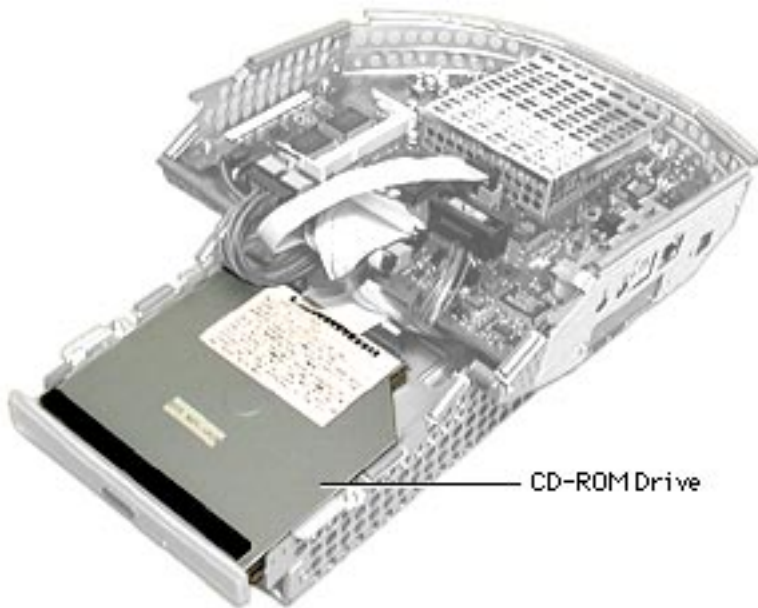

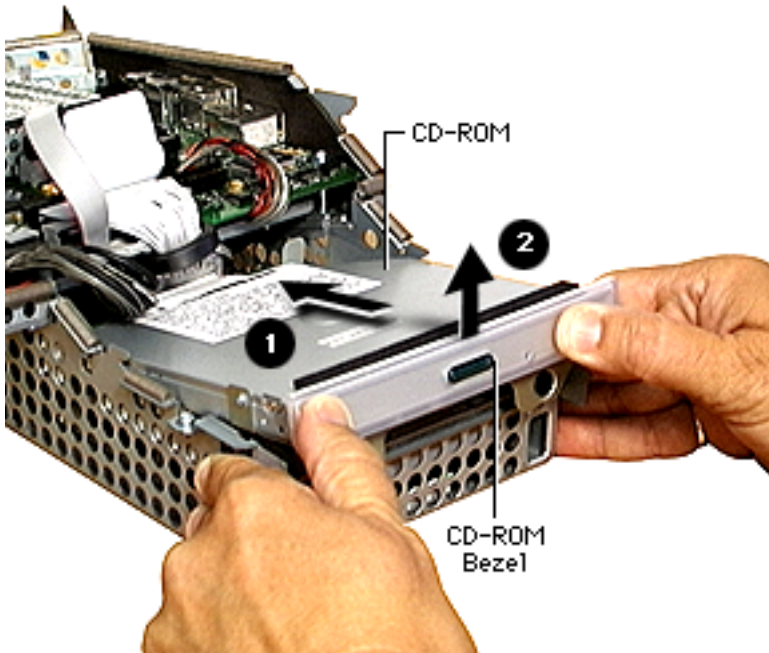

The CD-ROM drive is spring-loaded in the chassis.

- 1 Push the CD-ROM carrier back to release the tab from the spring on the underside of the CD-ROM drive.
- 2 Lift the CD-ROM drive out of the chassis.
- 3 Disconnect the CD-ROM data cable from the drive.

Note: The CD-ROM drive ships installed in its carrier with the front bezel and CD interconnect board attached.







CD-ROM Carrier Replacement

- 1 The spring catch on the back of the CD carrier has to hook on to the spring that rests on top of the hard drive.


Review the hard drive take-apart procedure in this chapter to see a photograph of the spring.

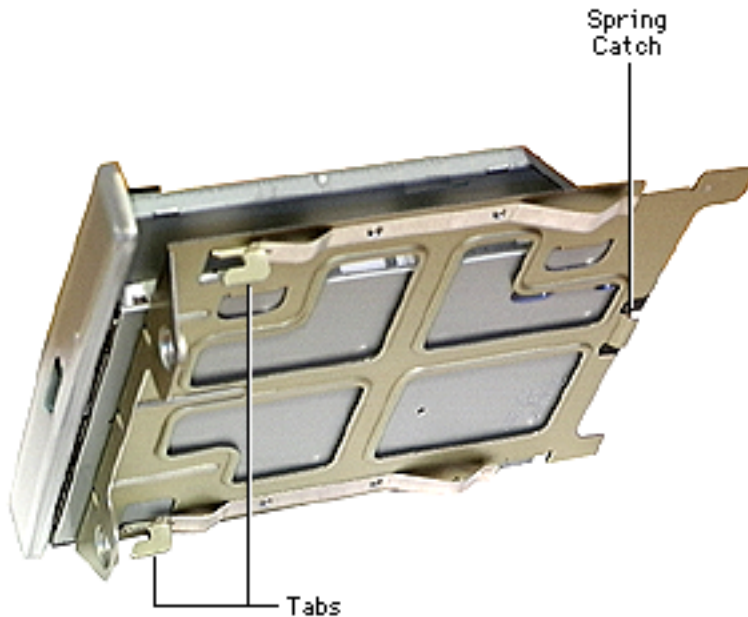

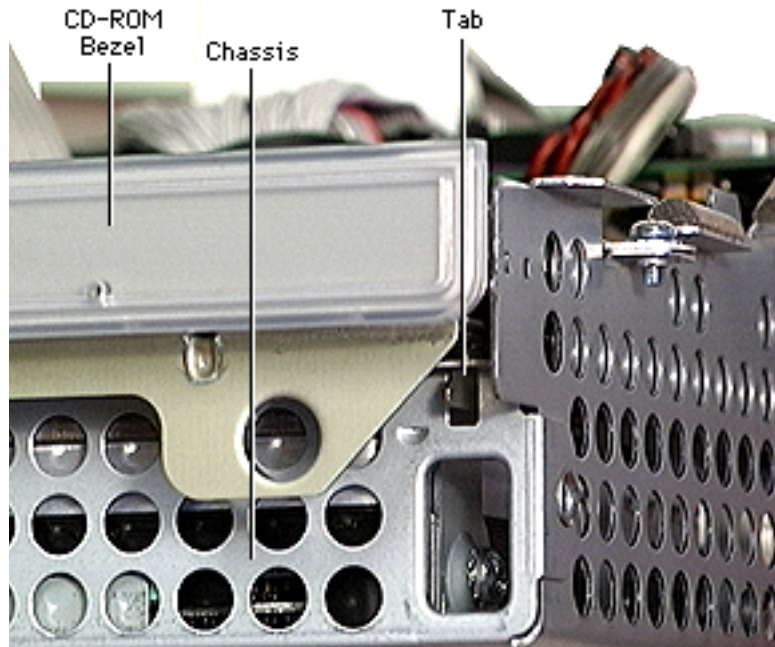

- 2 Ensure the metal tabs on the CD carrier feed into the front chassis holes to secure the CD-ROM drive in place.



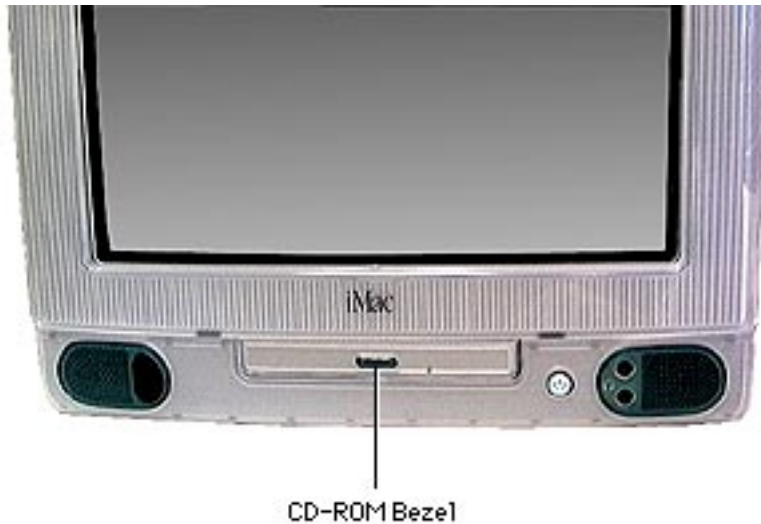


CD-ROM Bezel

No primary steps are required before you begin this procedure.

Note: The CD-ROM drive ships with the bezel attached and it should be returned to Apple with the bezel attached.


This procedure shows how to remove the bezel, just in case the bezel is changed.



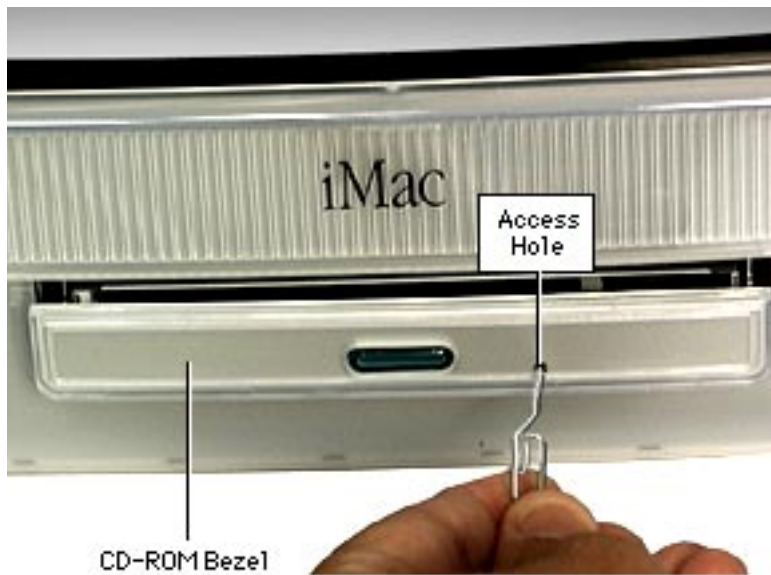

- 1 Open the CD-ROM drive drawer by gently pushing a paper clip into the access hole.



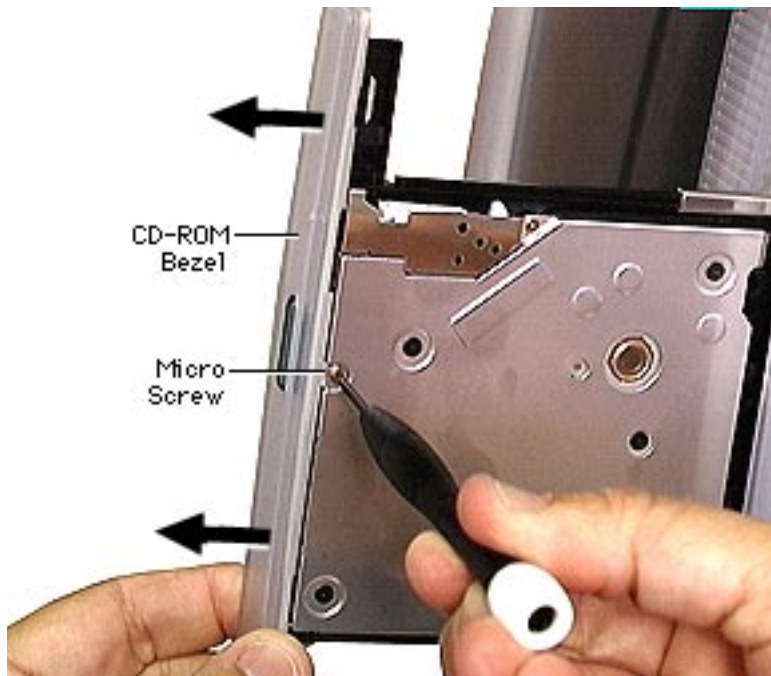

- 2 Rest the iMac on its side.
- 3 Pull the CD-ROM drawer out to access the micro screw on the underside of the CD-ROM drive.
- 4 Remove the micro screw.
- 5 **Note:** There are two plastic tabs that hold the bezel in place (and can't be seen in this photo). Starting at the top or bottom of the bezel, carefully pull the bezel away from the CD-ROM to remove.






Hard Drive

Before you begin, remove the following:


- Lower access cover
- Logic board/mass storage chassis

Note: The CD-ROM doesn't have to be removed completely to access the hard drive.

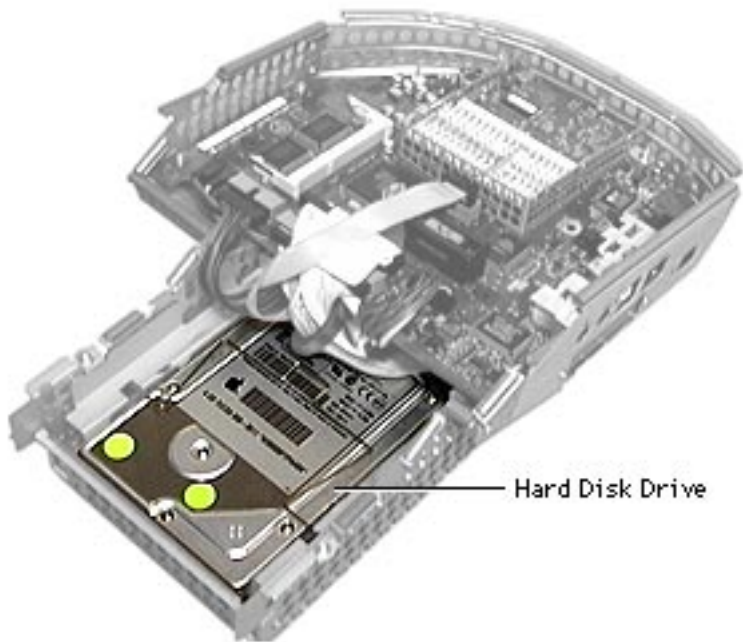

Hard Disk Drive



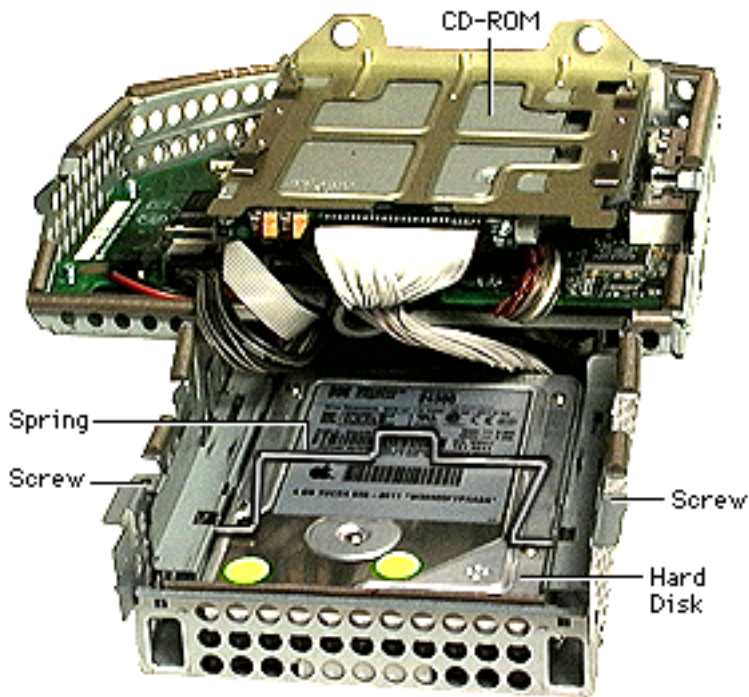


- 1 Remove the two screws securing the hard drive carrier to the chassis.

The CD-ROM doesn't have to be removed completely to access the hard drive, as shown in the photo.

Replacement Note:

Notice the spring resting on top of the hard drive. The CD-ROM carrier attaches to the spring, making the CD-ROM spring-loaded in the chassis.



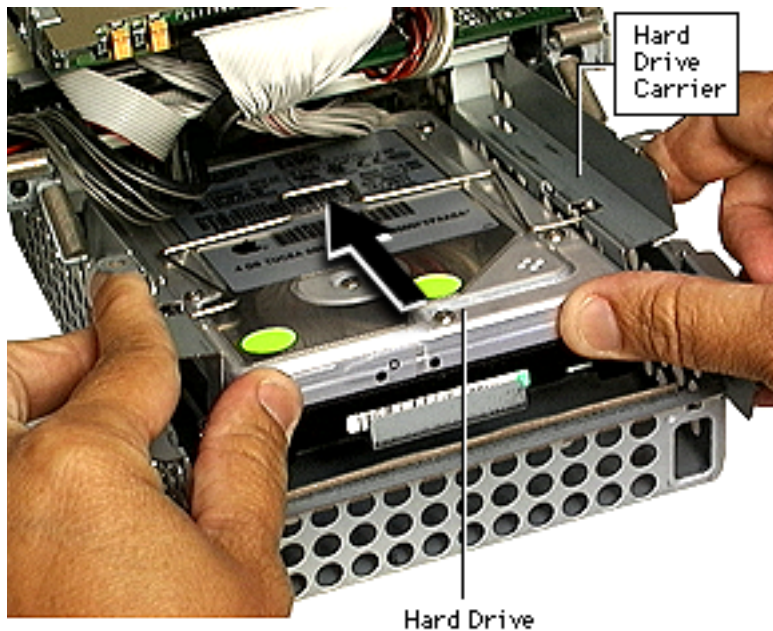

- 2 Holding on to the hard drive carrier, push the carrier back to free the carrier from the chassis.

Note: Pushing the carrier back releases two metal tabs on the underside of the hard drive carrier. Refer to “Hard Drive Carrier Replacement” for photo and information.


- 3 Lift the hard drive carrier from the chassis.
- 4 Remove the hard drive data cable, power cable, and four screws securing the HDA to the carrier.





Note: Return drives without cables or carriers. Exchange hard drive modules in Apple packaging. Failure to comply with this requirement may result in a packaging noncompliance charge. Refer to the parts database for more information.




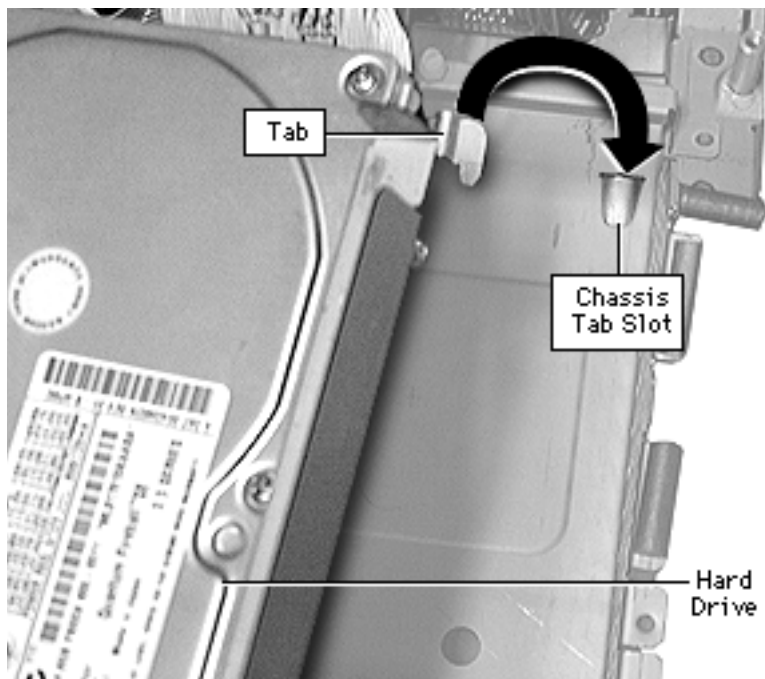

Hard Drive Carrier Replacement

- 1 Route the hard drive and CD-ROM cables under the metal support bridge on the chassis.
- 2 Slide the hard drive carrier tab (one tab on each side) into the chassis tab slot.
- 3 Pull the hard drive/carrier forward. Make sure both tabs slide into the tab slots on the logic board/mass storage chassis frame.



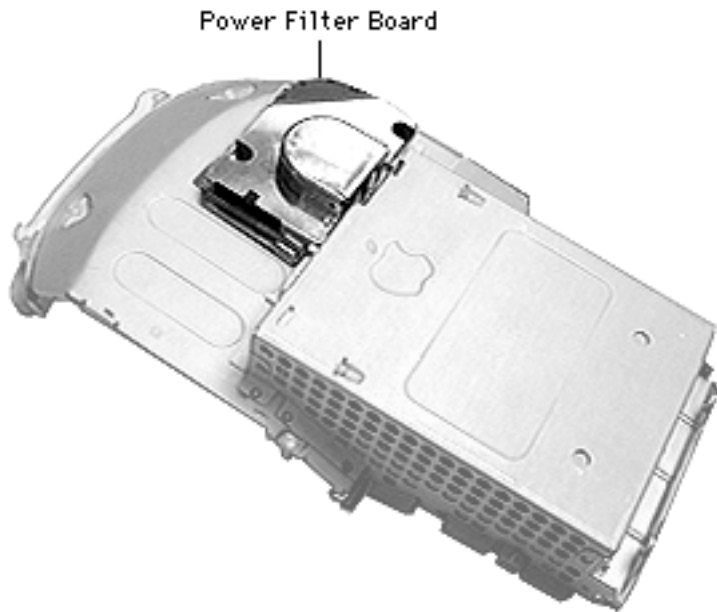


Power Filter Board

Before you begin, remove the following:

- Lower access cover
- Logic board/mass storage chassis




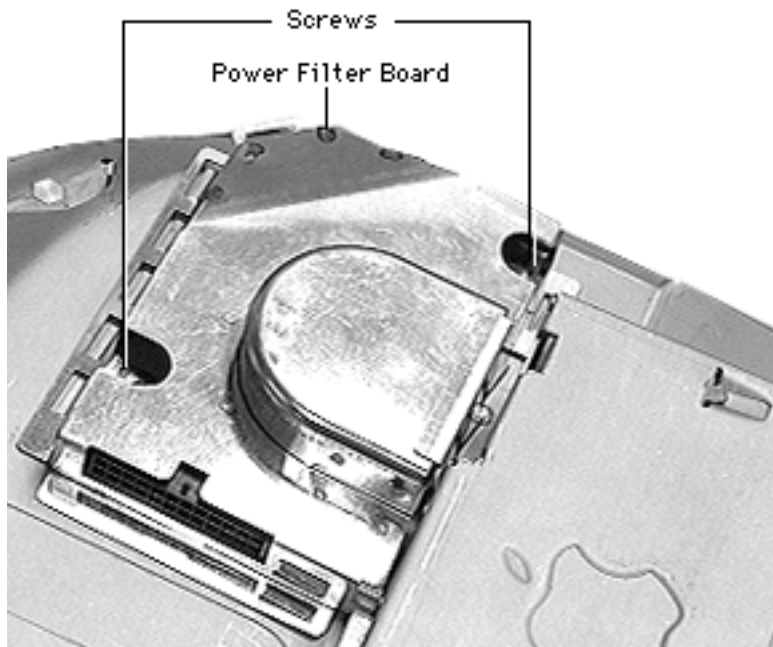

- 1 Remove the two screws on the power filter board.
- 2 Lift the power filter board off the chassis.

Note: If the logic board is still in place, you may feel resistance when prying the power filter board off the logic board connector.



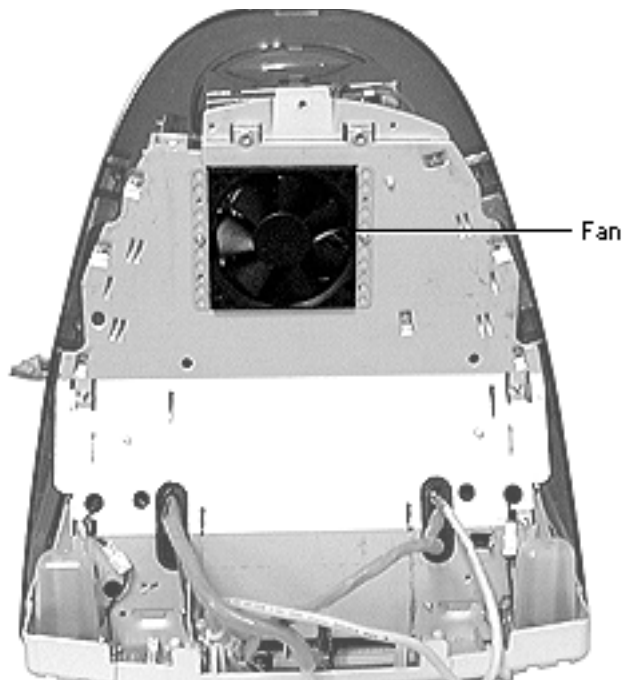


Fan

Before you begin, remove the following:

- Lower access cover
- Logic board/mass storage chassis

⚠ Warning: This product contains high voltage and a high-vacuum picture tube. To prevent serious injury, [discharge the CRT](#) and review CRT safety in Bulletins/Safety.



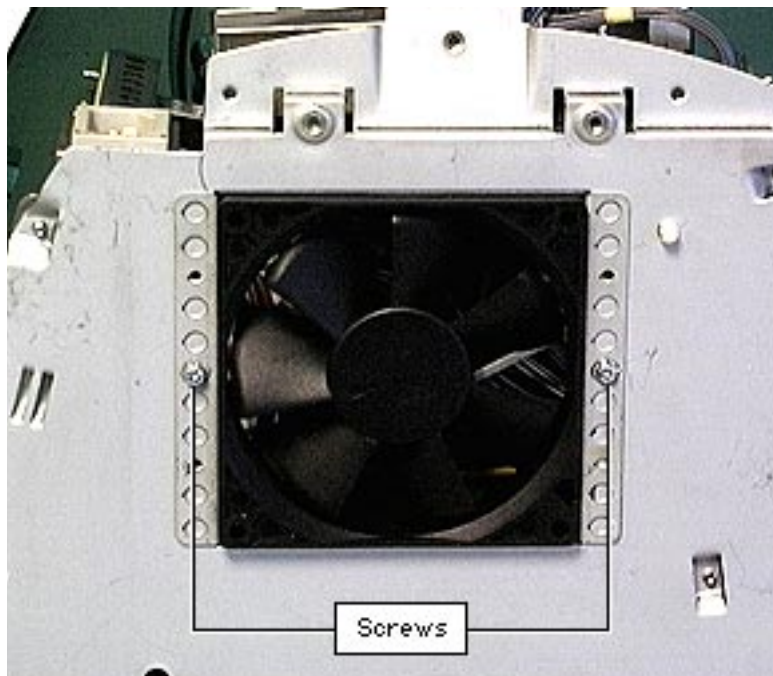

- 1 Remove the two screws from the fan bracket.






- 2 Disconnect the fan cable from the analog board.

Note: You have to stick your hand inside the chassis to disconnect the cable from the analog board.

- 3 Remove the fan from unit.

Replacement Note: Due to space constraints, the analog board will have to be removed to reconnect the fan at P508 (on the analog board). Also, install the fan so that the cable rests in the cut-out notch on the chassis.

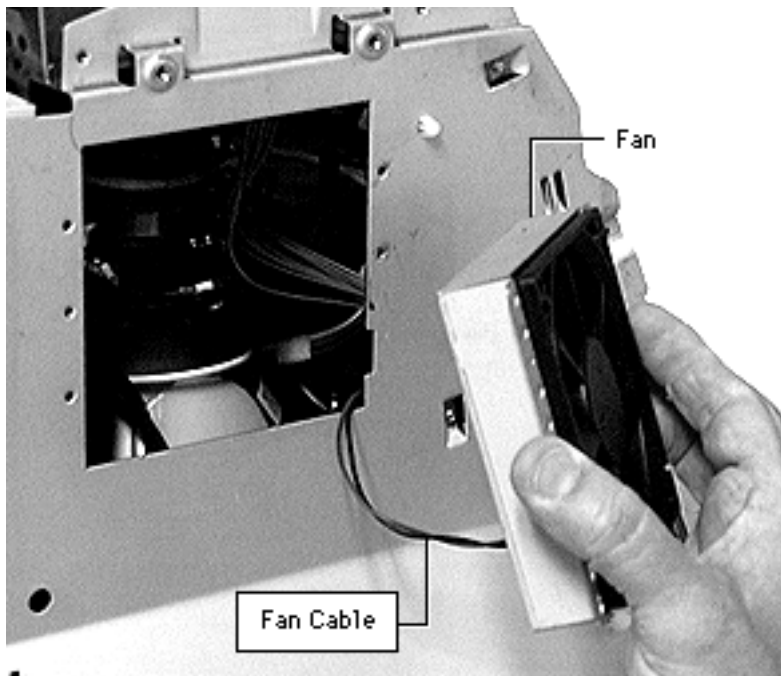




Audio/Video Interconnect Board

Before you begin, remove the following:


- Lower access cover
- Logic board/mass storage chassis
- Logic board
- I/O panel
- CD-ROM
- Hard Drive

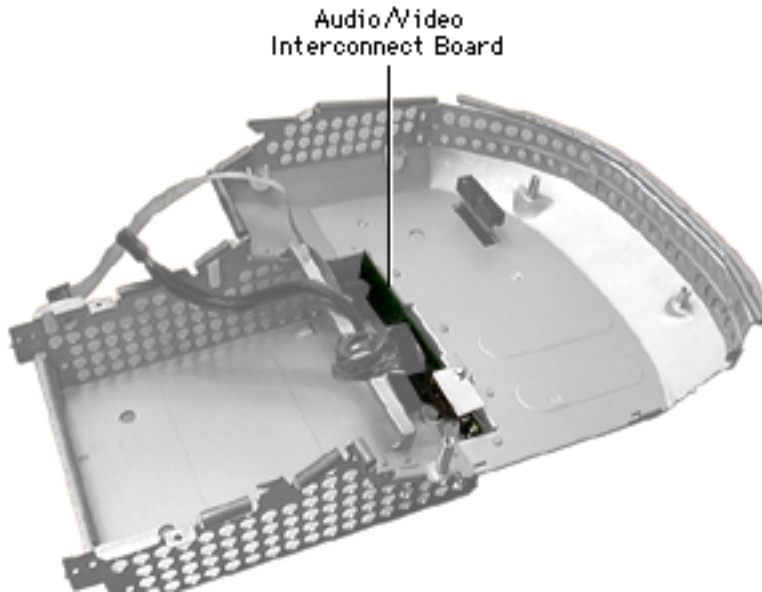




Audio/Video
Interconnect Board

Screw

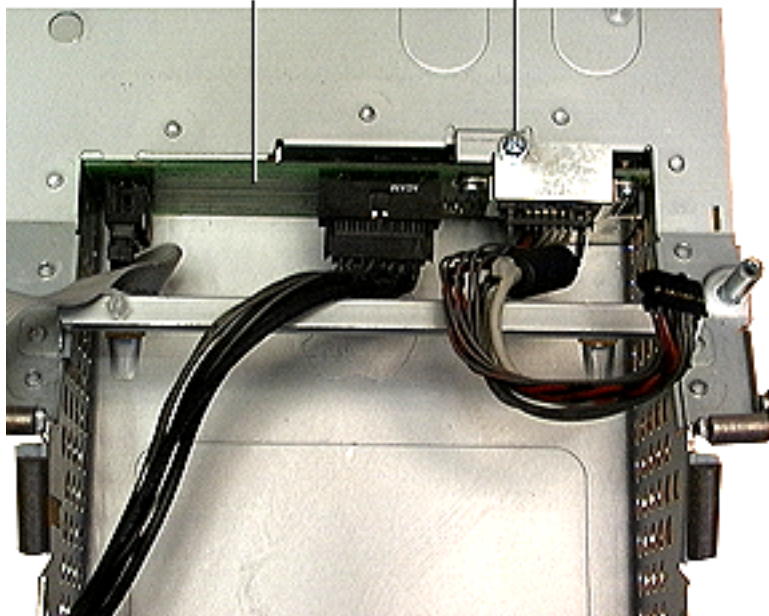

- 1 Remove the silver screw from the EMI shield on the audio/video interconnect board.



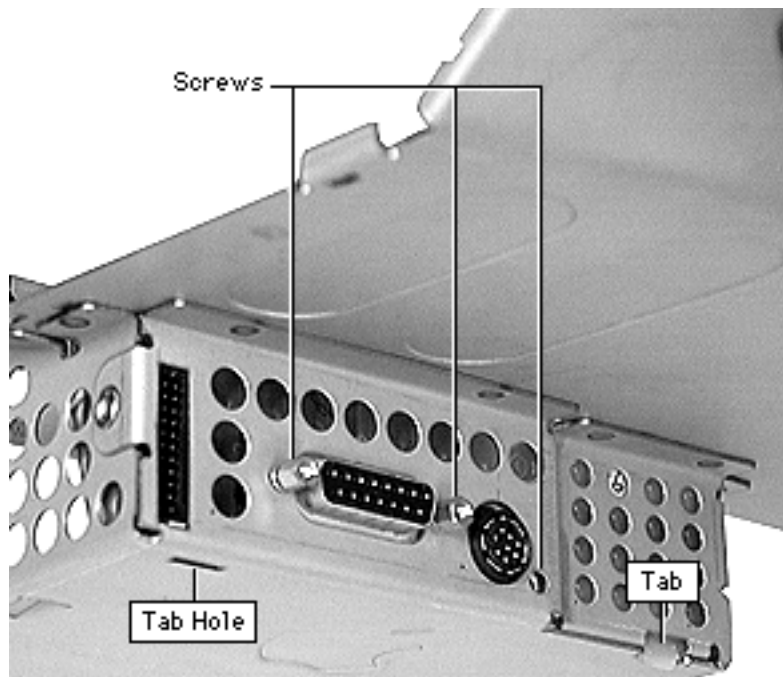


- 2 Remove the two thumbscrews and one phillips screw from the outside of the board.

Replacement Note:

Ensure that the audio/video interconnect board ports and tabs are positioned correctly into the chassis holes.



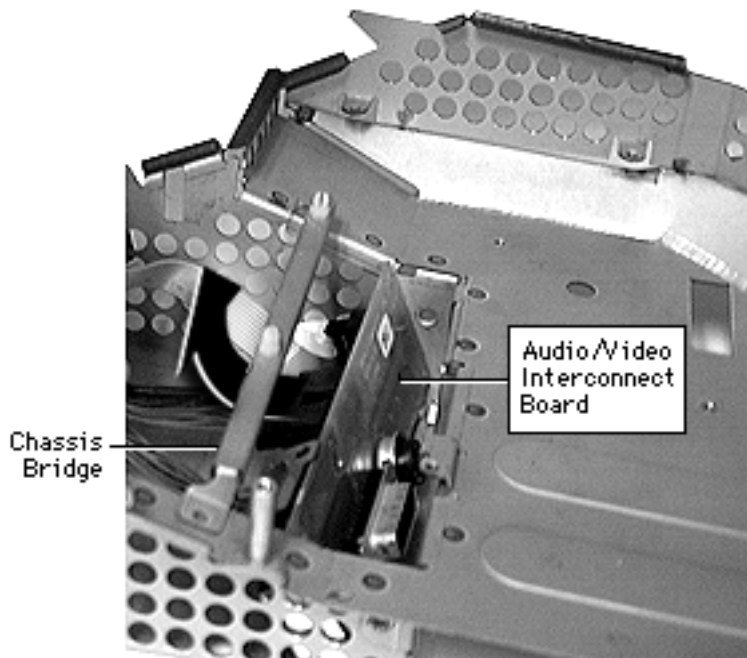

- 3 Disconnect the cables on the audio/video interconnect board.
- 4 Pull the board up and out of the chassis.

Note: Remove all cables before returning the board to Apple.






Bottom Rear Housing

Before you begin, remove the following:

- Lower access cover
- Logic board/mass storage chassis
- Front lower panel

Note: The bottom rear housing includes the flip foot. The computer should never be picked up by the flip foot. If needed, the flip foot is also available separately. Refer to the parts database.



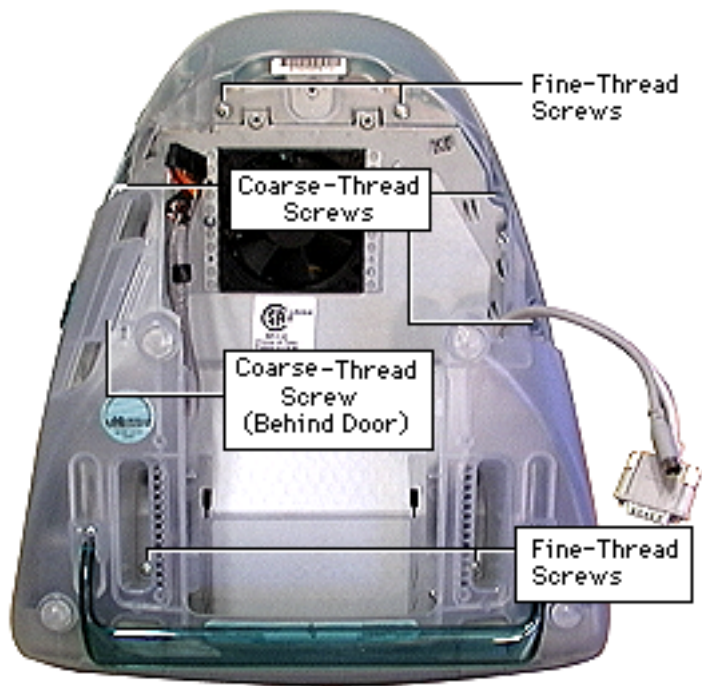


- 1 Remove the eight screws.

Note: Four screws are fine-threaded screws that screw into metal; the four other screws are coarse-threaded screws that screw into plastic.

One screw is located inside the I/O panel door.



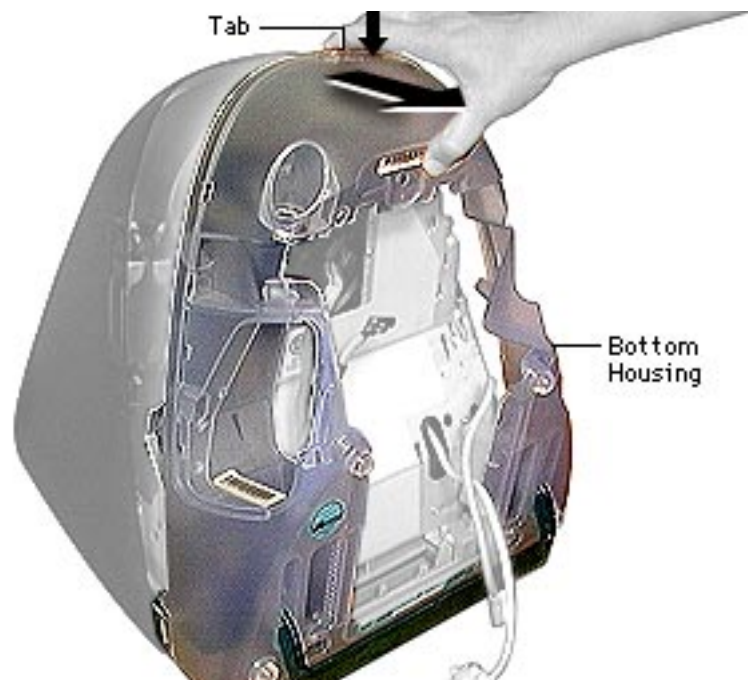

- 2 Press down on the tab and pull the bottom housing out and off the computer.



Front Lower Panel

Font Lower Panel

No primary steps are required before you begin this procedure.





- 1 Push in and pull out on the two tabs to release the front lower panel.







Speakers

Before you begin, remove the following:

- Lower access cover
- Logic board/mass storage chassis
- Bottom rear housing

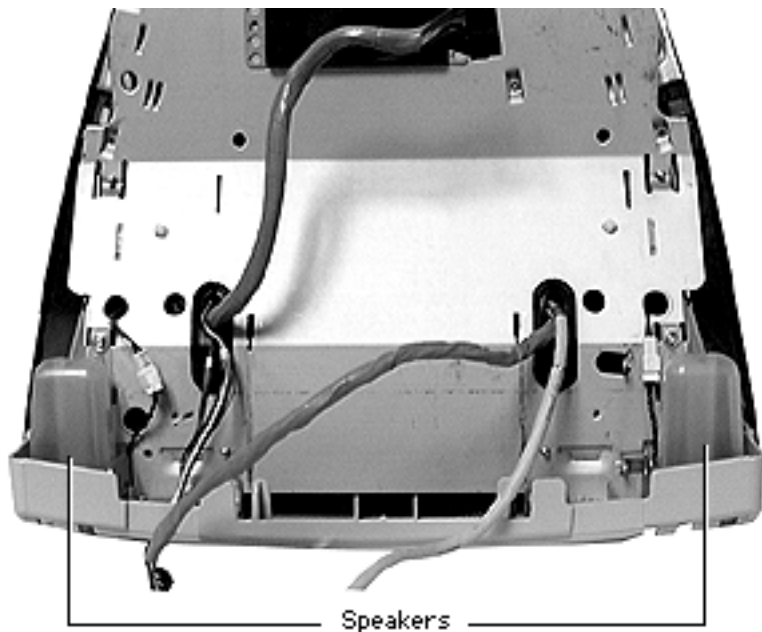

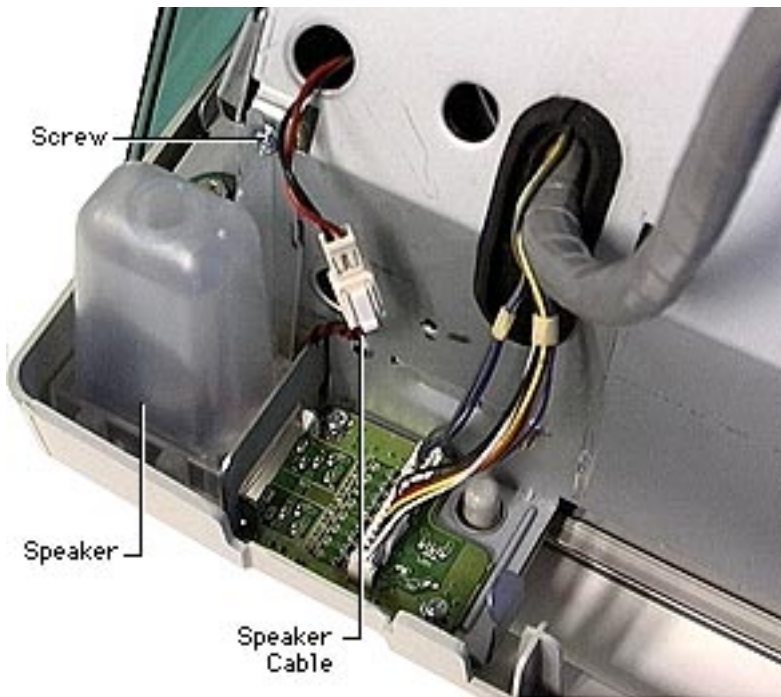

- 1 Remove the speaker screw.
- 2 Disconnect the speaker cable.
- 3 Lift speaker up and out to remove.

Note: The speakers are keyed left and right.

Replacement Note: Make sure the speaker cable is repositioned through the chassis hole if you removed or replaced internal chassis cables, the internal CRT chassis frame, or replaced the CRT.







IrDA Board

Before you begin, remove the following:

- Lower access cover
- Logic board/mass storage chassis
- Bottom rear housing

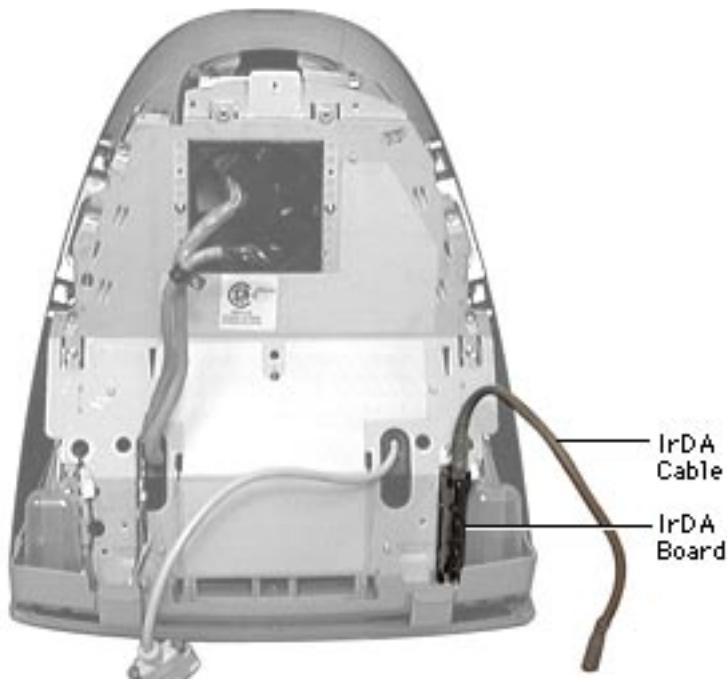

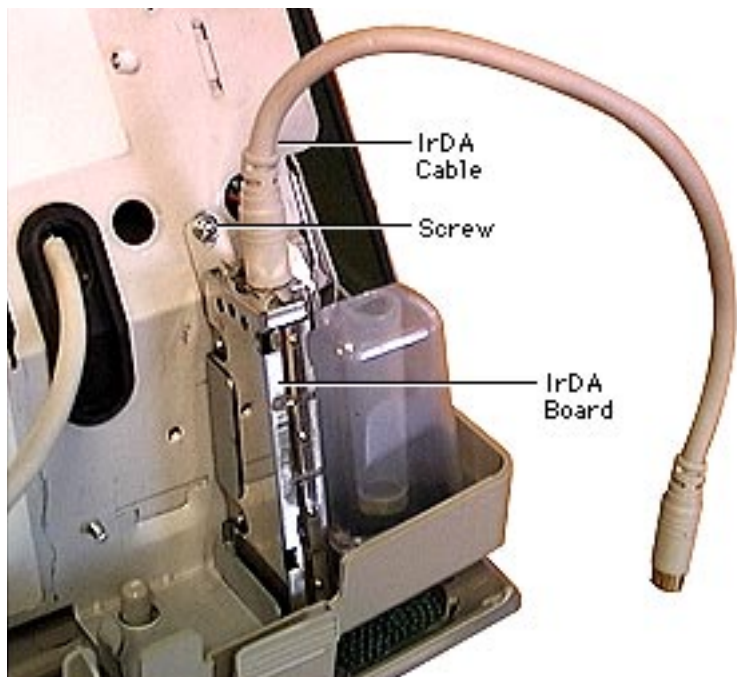

- 1 Remove the IrDA cable.
- 2 Remove the screw.
- 3 Lift the IrDA board up and out of the inner bezel.






Headphone/Power Board

Headphone/Power Board

Before you begin remove the following:

- Lower access cover
- Main logic/mass storage chassis
- Bottom rear housing
- Front lower panel



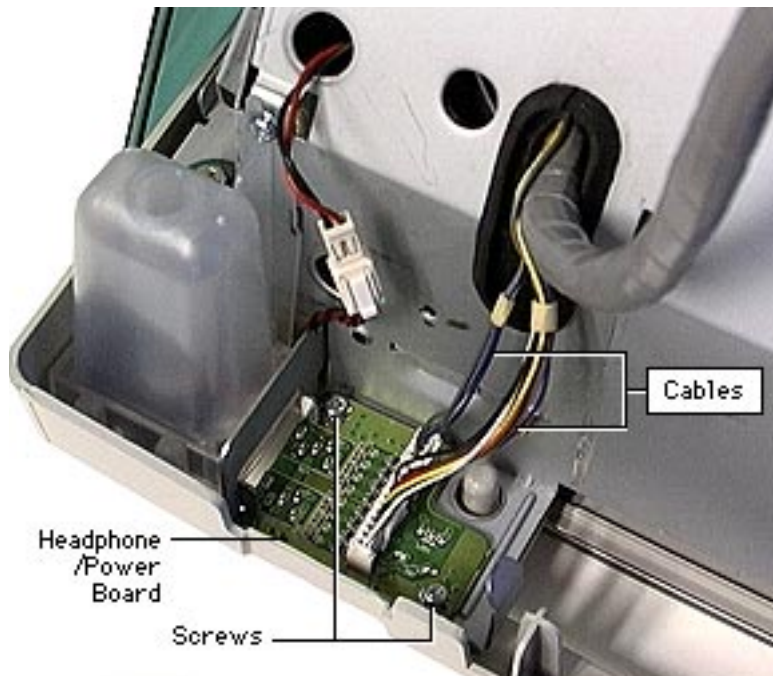

- 1 Disconnect the two cables (3-wire LED cable and multi-colored audio cable) from the headphone/power board.
- 2 Remove the two screws.
- 3 Lift the headphone/power board from chassis frame.

Note: You may have to wiggle the board a bit and assist from underneath by pushing the board up and out of the chassis frame.






Front Outer Bezel


Before you begin, remove the following:

- Front lower panel
- Bottom rear housing



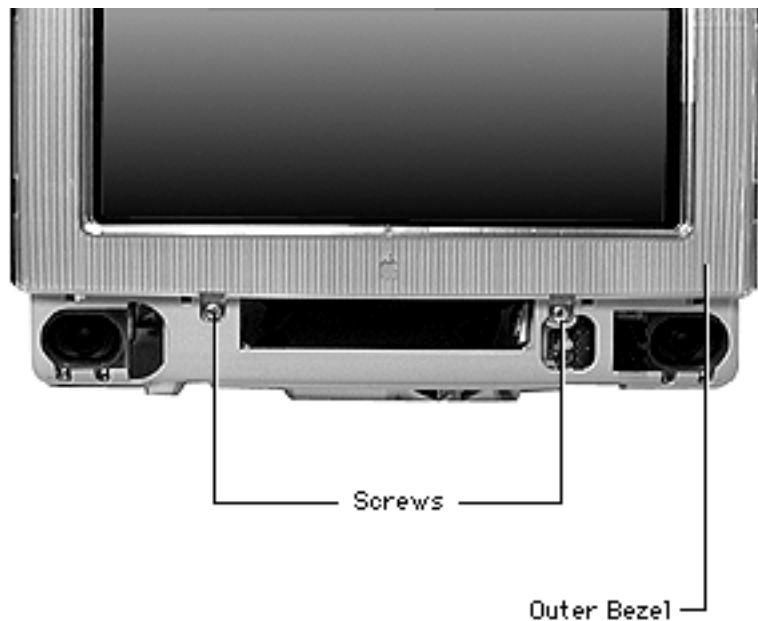

- 1 Remove two screws on the front outer bezel.

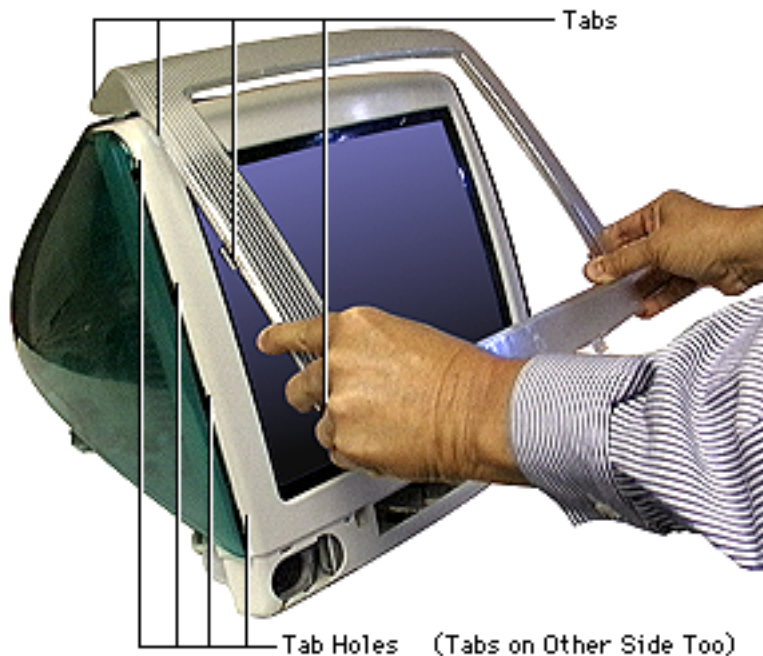

- 2 With the CRT facing you, use a plastic tool to push in the tabs on the left side and then on the right side to release the tabs from the bezel holes. Start pushing the tabs in from the bottom left corner and work your way to the top.

Note: Be careful not to damage the plastics.

- 3 Grab the bezel from the bottom, and pull the bezel forward and up to remove it.





Front Inner Bezel

Front Inner Bezel

Before you begin, discharge the CRT and remove the following:


- Lower access cover
- Main logic/mass storage chassis
- Bottom rear housing
- Front lower panel
- Front outer bezel
- Top rear housing
- CRT EMI shield
- Analog/Video Board
- Power Supply





Microphone
Connector

Screws

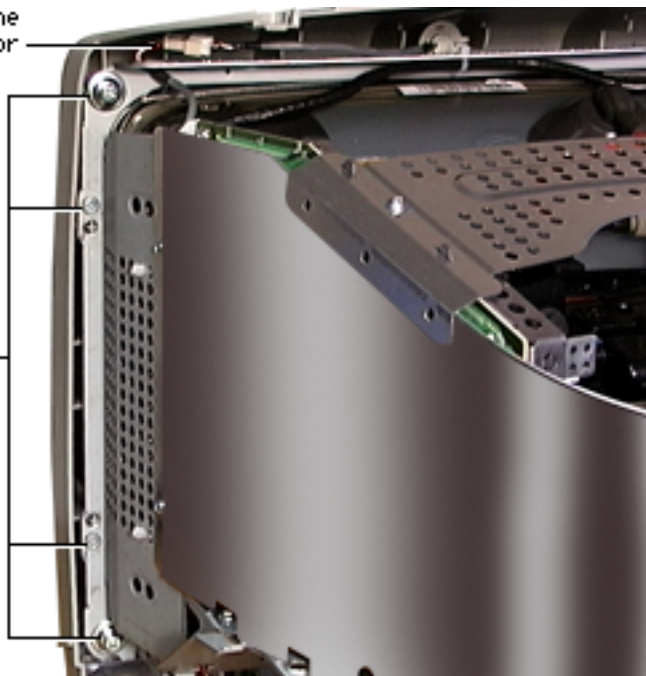


⚠ Warning: This product contains high voltage and a high-vacuum picture tube. To prevent serious injury, review CRT safety in Bulletins/Safety.


- 1 Remove the eight screws attaching the inner CRT bezel frame to the inner plastic bezel. There are four screws on each side.
- 2 Disconnect the microphone cable.





- 3 Lift the CRT bezel frame away from the inner bezel.

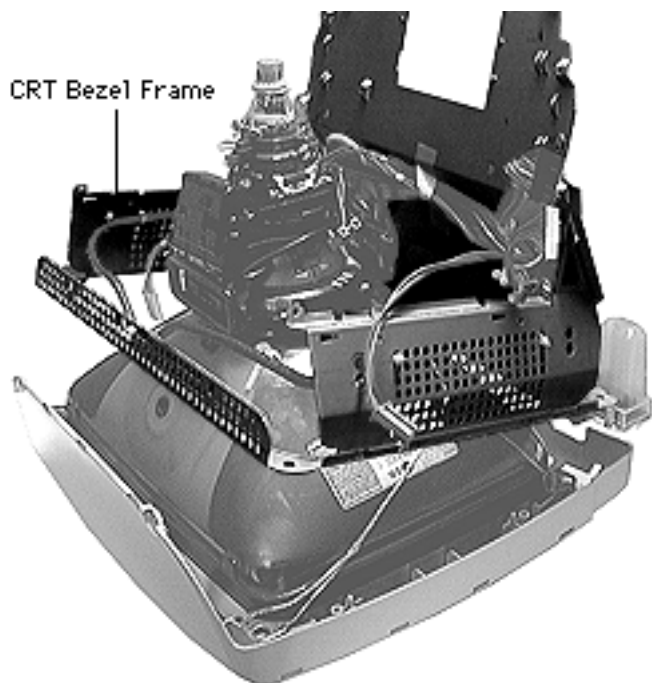

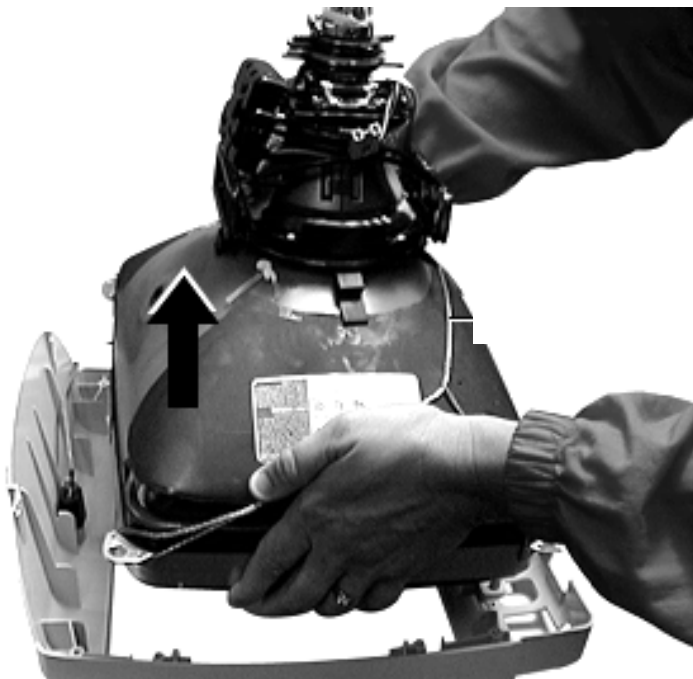

- 4 Lift the CRT off the front inner bezel.
- 5 The inner bezel and microphone remain. Remove the microphone from the front inner bezel.




Top Rear Housing

Before you begin, remove the following:


- Front lower panel
- Front outer bezel
- Bottom rear housing



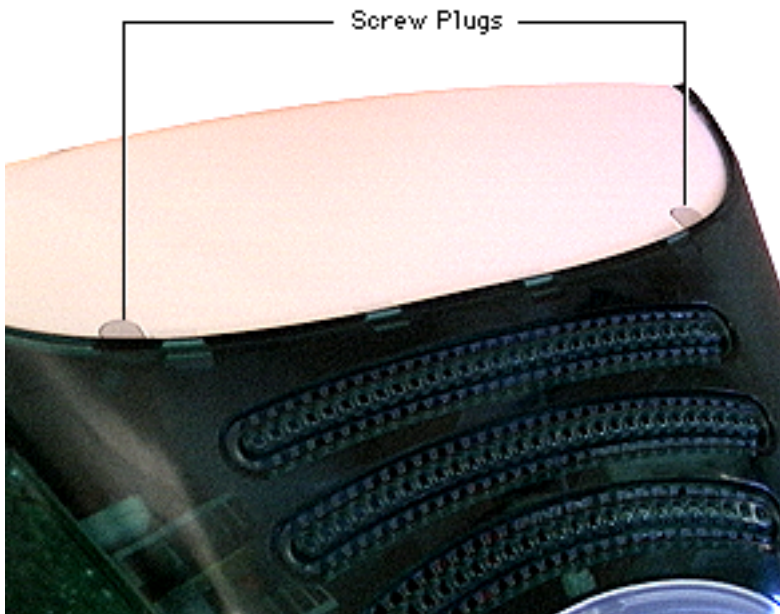

- 1 With a jeweler's screwdriver, pry off the two screw plugs on the top housing.
Note: The screw plugs are keyed right and left.
- 2 Remove the two silver screws under the screw plugs.



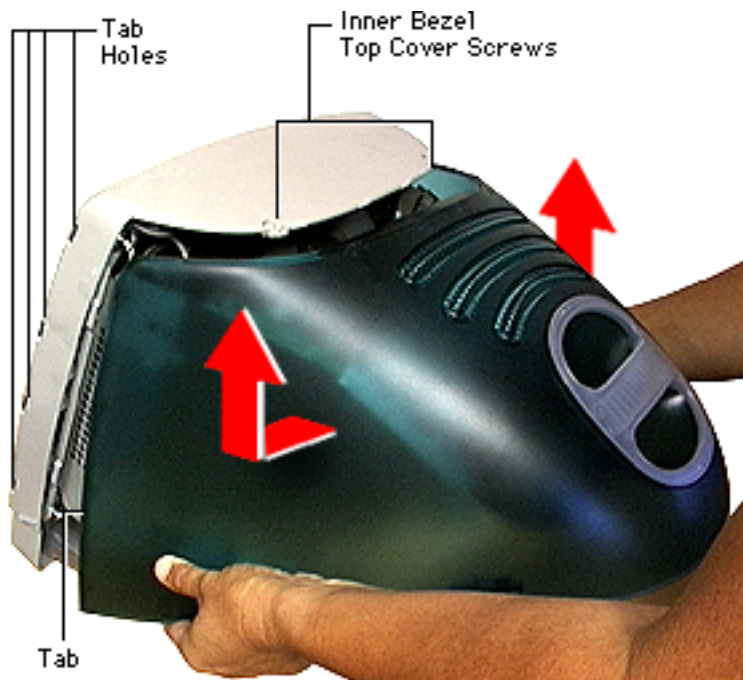

- 3 Pull the sides out to unhook the tabs from the tab holes.
- 4 Lift the top rear housing up and off the computer.




EMI Shield

⚠ Warning: This product contains high voltage and a high-vacuum picture tube. To prevent serious injury, review CRT safety in Bulletins/Safety.

Before you begin, [discharge the CRT](#) and remove the following:

- Lower access cover
- Main logic/mass storage chassis
- Bottom rear housing
- Front lower panel
- Front outer bezel
- Top rear housing




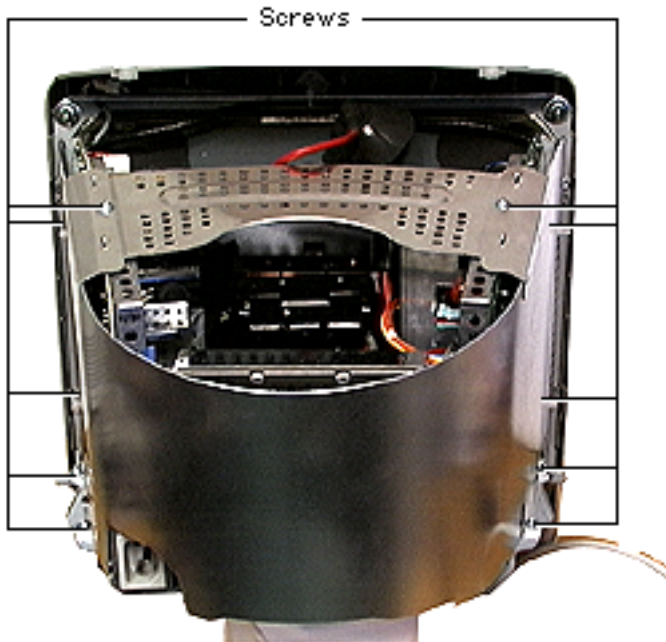

- 1 Remove the ten screws on the EMI shield.
- 2 Pull out and up on the EMI shield to remove it from the chassis.

Replacement Note: Position the tabs on the top of the the EMI shield first, then line up the remaining screws holes.



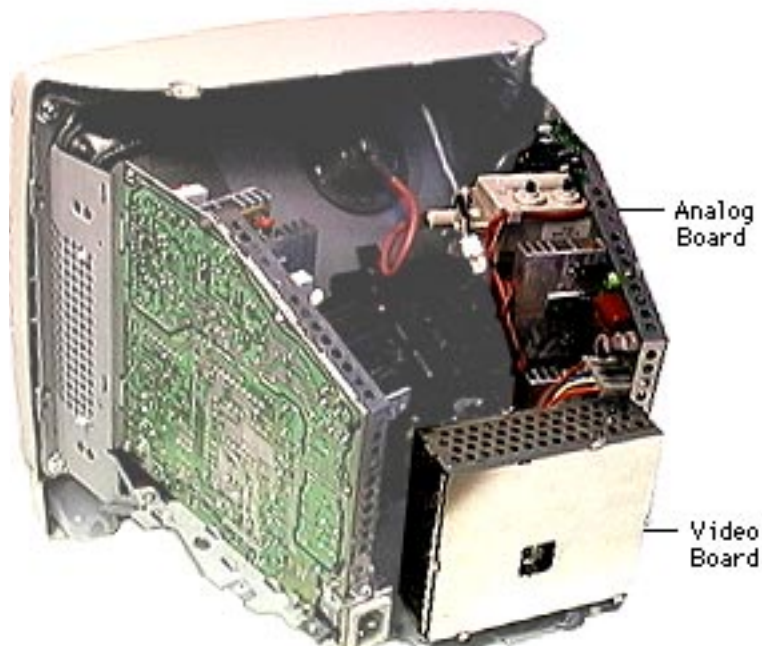

Analog/Video Board

⚠ Warning: This product contains high voltage and a high-vacuum picture tube. To prevent serious injury, review CRT safety in Bulletins/Safety.


Before you begin, [discharge the CRT](#) and remove the following:


- Lower access cover
- Main logic/mass storage chassis
- Bottom rear housing
- Front lower panel






- Front outer bezel
- Top rear housing
- EMI Shield

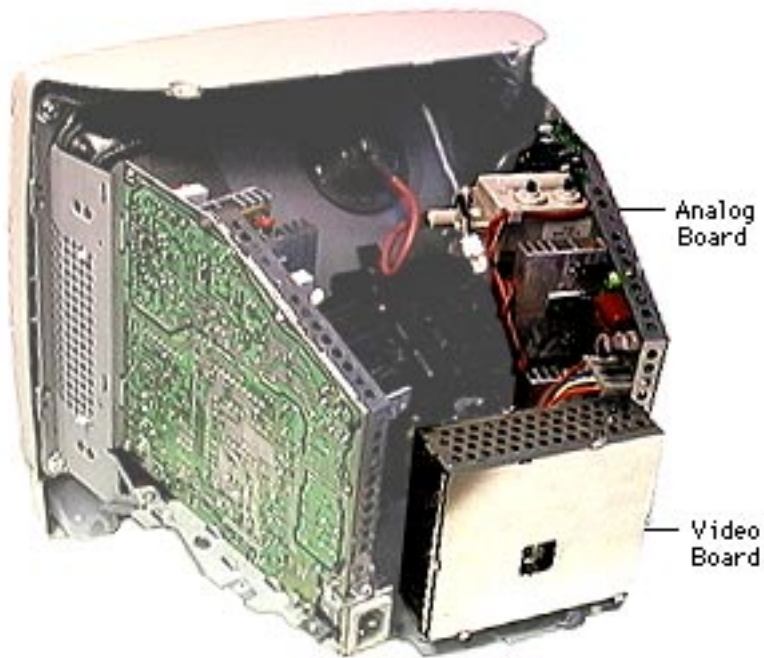

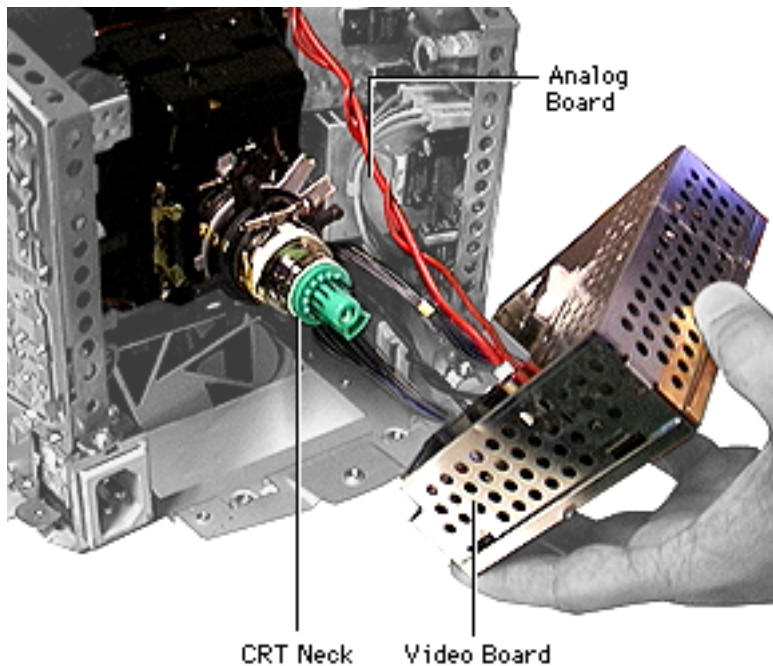


- 1 Gently pull the video board off the CRT neck.
- 2 Disconnect P301 (multicolored cable), P306 (2-pin black wire), and the ground wire (1-pin black wire) on the video board.
Note: Leave P302, P303, and the red wires connected to the video board.
- 3 Carefully pull the video board straight off the neck of the CRT.



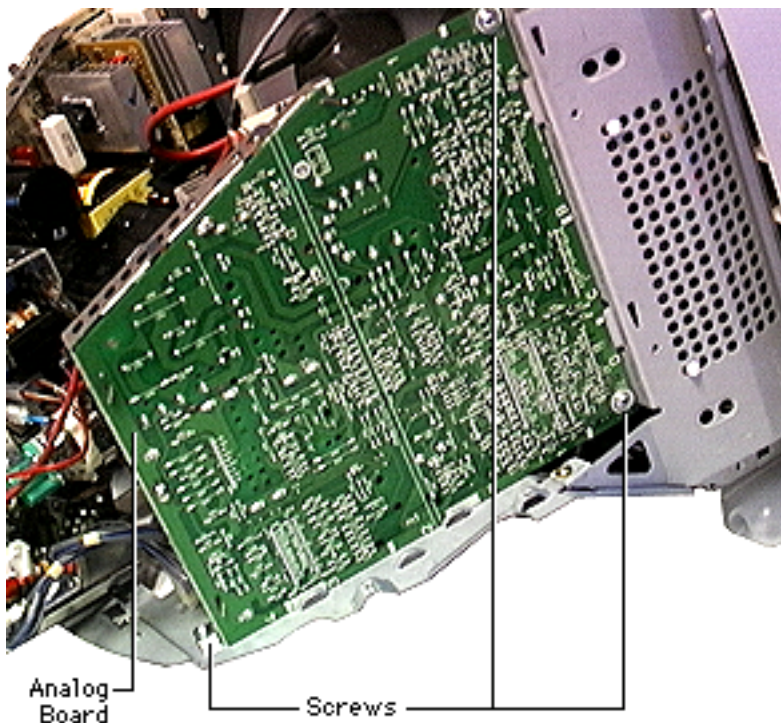

- 4 Remove the three silver screws on the analog board.

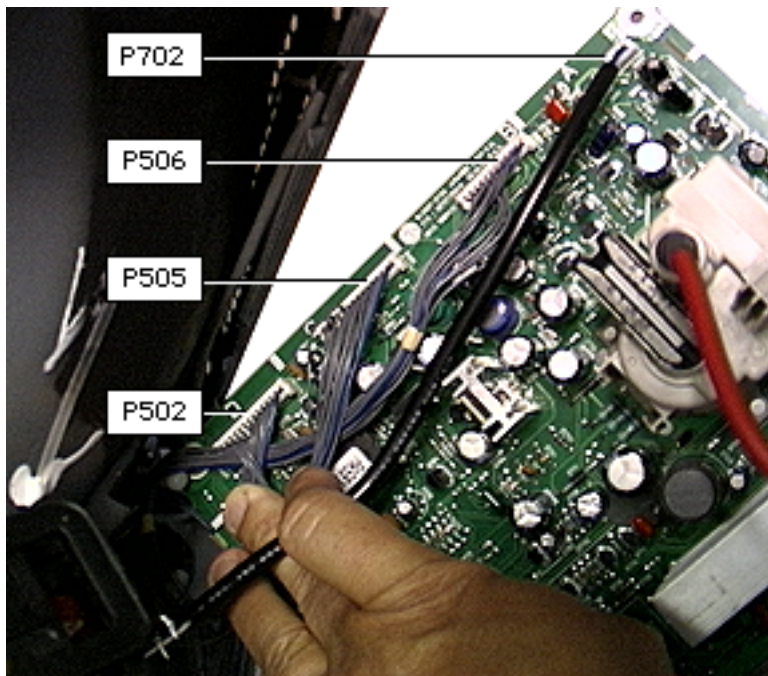

- 5 Lift the analog board out and disconnect P702, P505, P508 (2-pin fan connector not shown), P514 (3-pin connector located under fingers in photo, not shown), and a 4-pin multi-color CRT cable (not shown).

Leave P506 and P502 (gray cables) attached to the analog and video board.

Replacement Note: This board should have three cables on it when you return it to Apple: the





red permanent cable that connects the analog and video boards, and the two removable cables that connect at P502 and P506 on the analog board to P302 and P303 on the video board. Refer to the parts database for a photo and more information.





Power Supply Board

⚠ Warning: This product contains high voltage and a high-vacuum picture tube. To prevent serious injury, review CRT safety in Bulletins/Safety.

Before you begin, [discharge the CRT](#) and remove the following:


- Lower access cover
- Main logic/mass storage chassis
- Bottom rear housing
- Front lower panel






- Front outer bezel
- Rear top housing
- EMI Shield



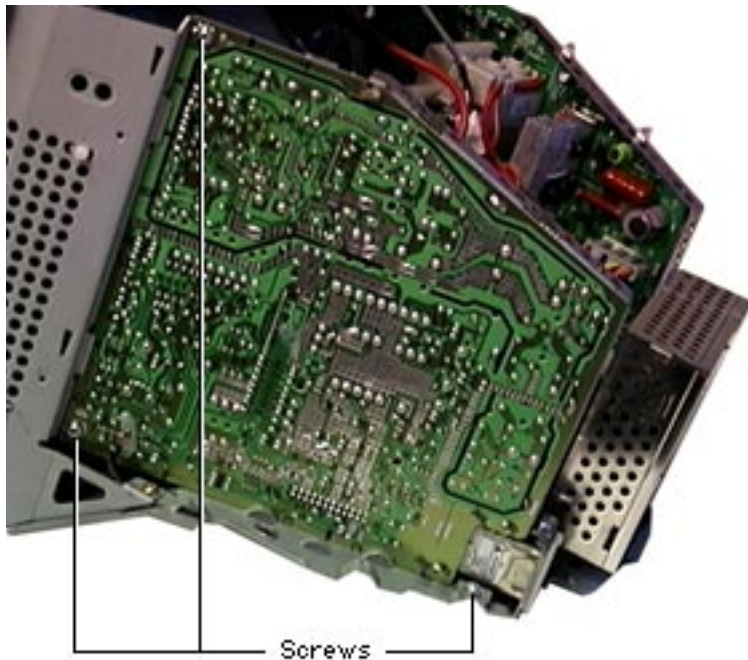

- 1 Remove the three silver screws on the power supply board.
- 2 Lift the board up and out of the chassis frame.



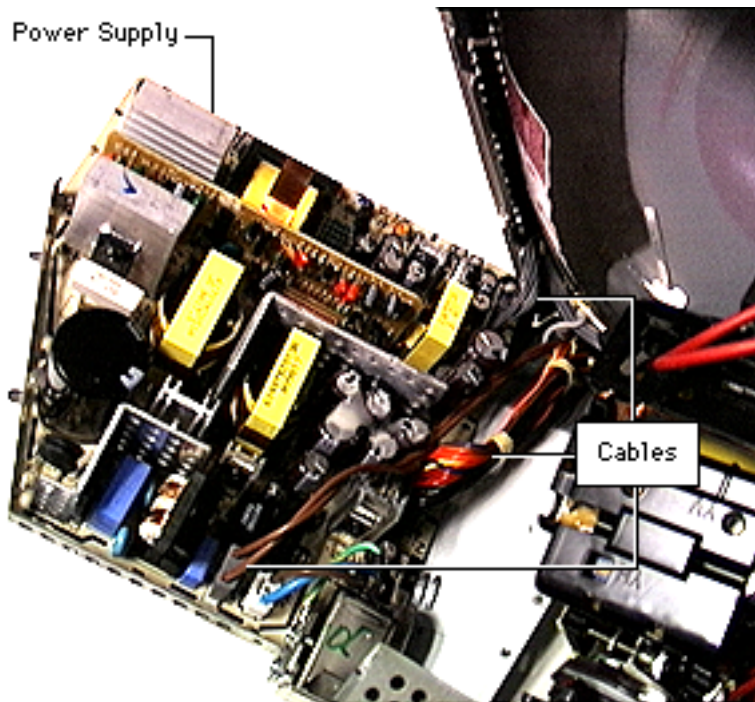

- 3 Disconnect the three cables (the brown 2-pin cable, the multi-colored power cable, and the gray cable that attaches to the analog board) along the bottom of the board.


Note: There is a fuse on the AC line on the power supply board. The fuse is located at F901 (near the bottom right corner of the installed power supply board as you are facing the back side of the board). Before replacing the power supply board, test the





fuse. Refer to the “Testing for Power” in the iMac Troubleshooting chapter for instructions on how to check the power supply board fuse. This fuse is an orderable service part and can be replaced by Service Providers.



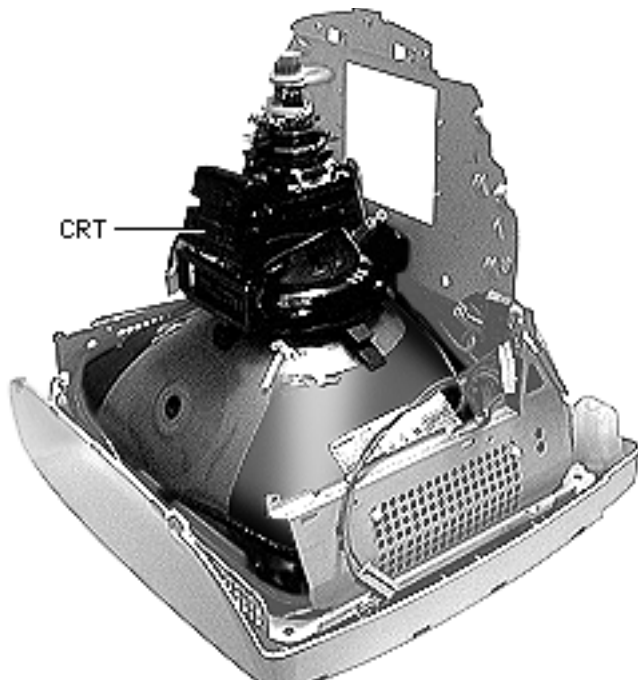

CRT

⚠ Warning: This product contains high voltage and a high-vacuum picture tube. To prevent serious injury, review CRT safety in Bulletins/Safety.

Before you begin, [discharge the CRT](#) and remove the following:


- Lower access cover
- Main logic/mass storage chassis
- Bottom rear housing
- Front lower panel





- Front outer bezel
- Top rear housing
- EMI Shield



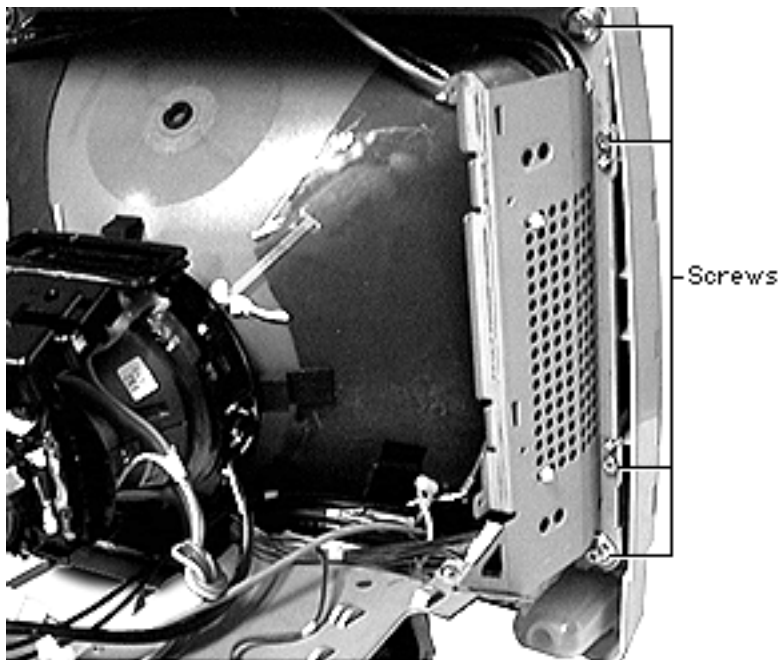


(Four on Each Side)

- 1 Remove the eight screws attaching the CRT frame to the inner plastic bezel. There are four screws on each side.

Note: This graphic shows the computer without an analog/video board attached. The CRT can be removed without removing the analog and power supply boards, see “Shortcut” on the next page.



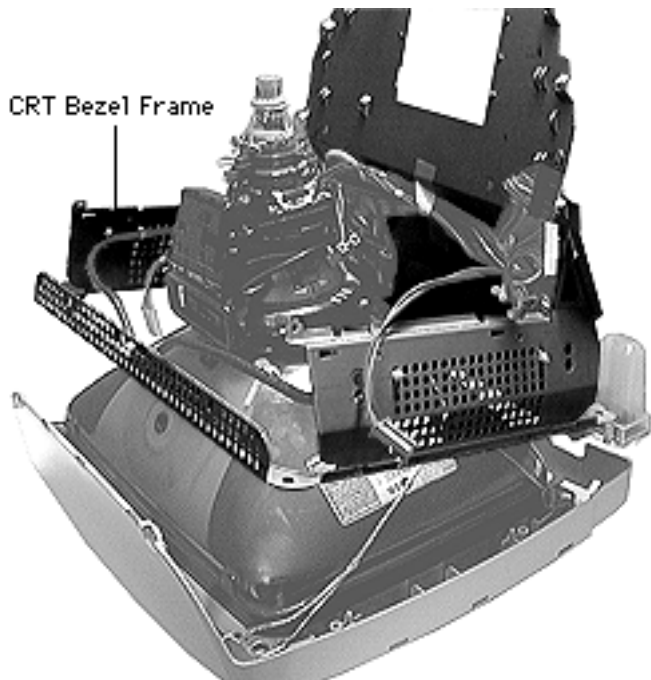

- 2 Lift the CRT bezel frame off the CRT.

Shortcut: With the analog and power supply boards in place, remove the video board off the CRT neck. Disconnect P701 (large 4-pin connector on the analog board), P702 (3-pin cable in the upper left corner of the analog board). Remove the anode cap, and disconnect the microphone cable. Lift the CRT bezel frame and the boards (intact) off the inner plastic bezel.






- 3 Lift the CRT off the front inner bezel.

Note: If you're replacing the CRT, the ground wire should be removed from the old CRT and placed on the replacement CRT.



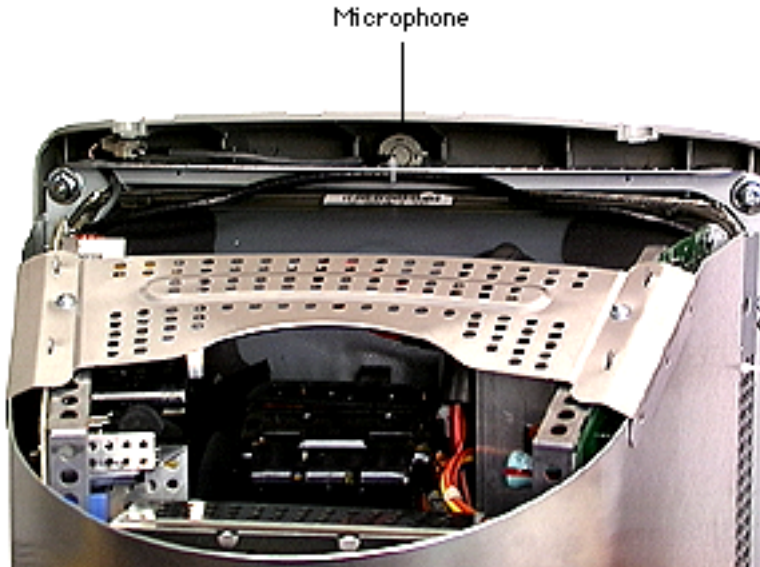

Microphone

Before you begin, [discharge the CRT](#) and remove the following:

- Lower access cover
- Front lower panel
- Bottom rear housing
- Front outer bezel
- Top rear housing
- CRT frame


⚠ Warning: This product contains high voltage and a high-vacuum picture tube. To prevent serious injury, review CRT safety in Bulletins/Safety.






Microphone
Connector

Screws

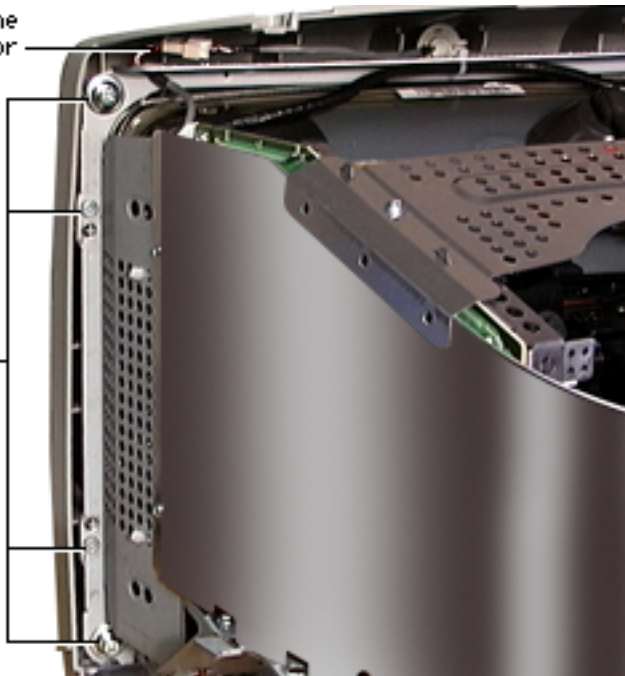


- 1 Remove the eight screws that attach the front inner bezel to the CRT frame. There are four screws on each side.



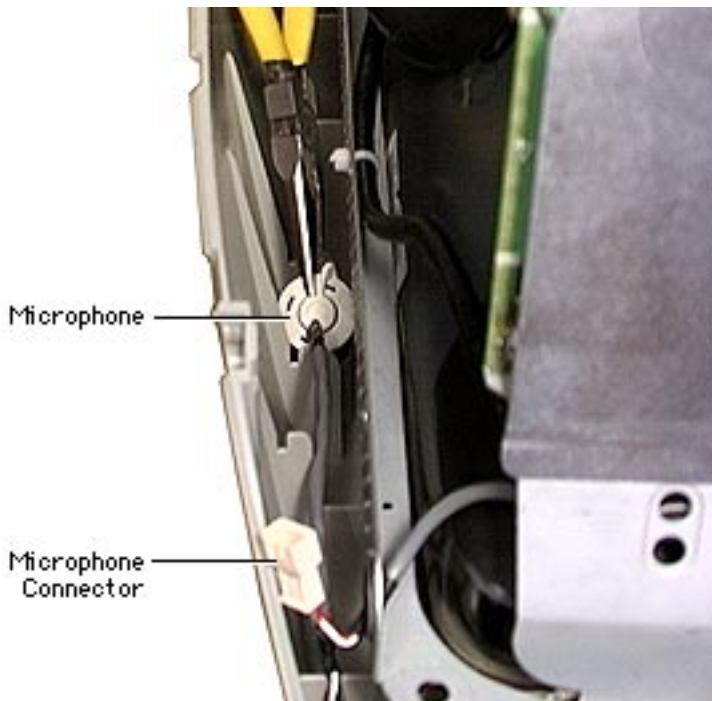

- 2 Disconnect the microphone connector.
- 3 Lift up on the CRT frame to access the microphone.
- 4 With needlenose pliers, gently pull the microphone from the inner bezel.

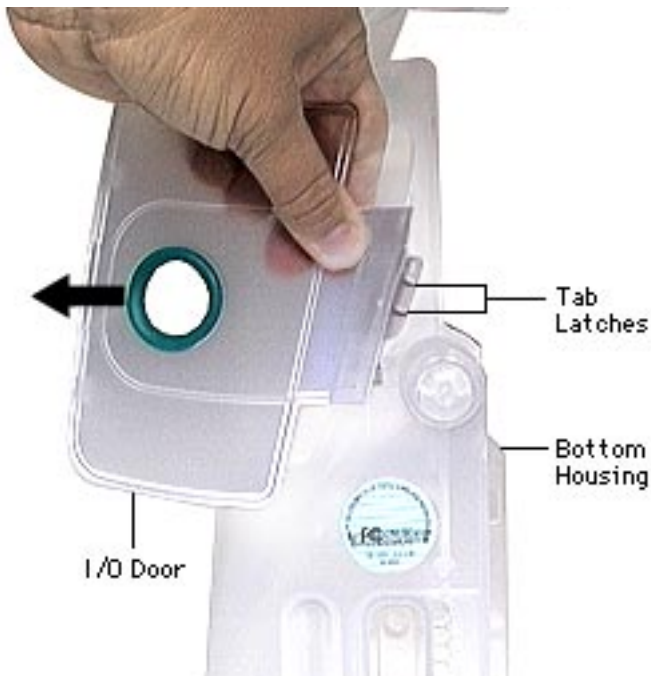


I/O Door

The I/O door is on the rear bottom housing.

To remove the I/O door, hold the door near the tab latches and pull to release.

Note: The I/O door can be tricky to remove. Don't hesitate to pull **hard** on the I/O door to unhook the tab latches.



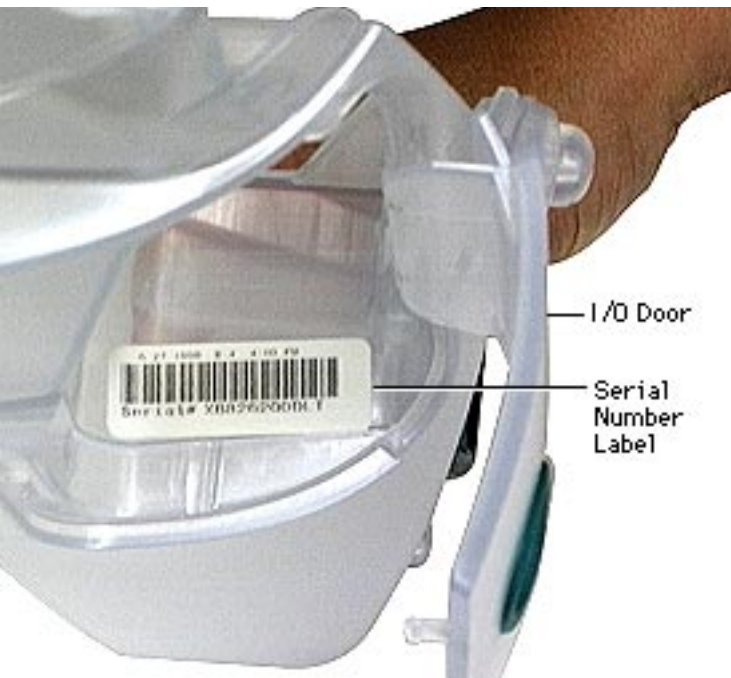


Serial Number and Ethernet Address

The serial number and ethernet hardware address are located on the inside panel of the I/O door.

Note: Replacement logic boards ship with an Ethernet label. If you replace the logic board, you must affix the new label over the existing Ethernet label (located on the I/O panel) above the serial number. **IMPORTANT:** Do NOT cover up the serial number information that is printed on the existing label.



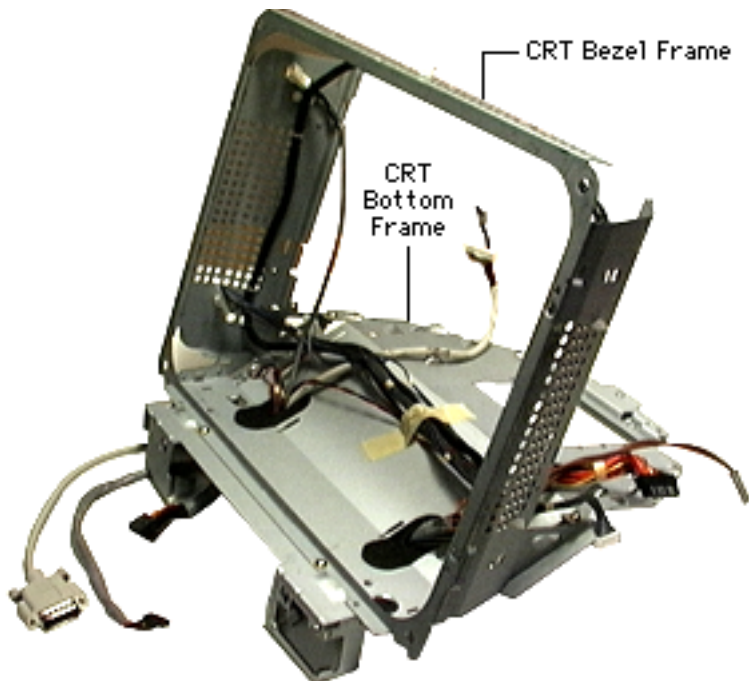


CRT Frame

The CRT frame consists of two separate parts; the CRT bottom frame and the CRT bezel frame (top piece). All the cables shown are offered separately except for the degaussing cable, which is not offered as a service part.

⚠ Warning: This product contains high voltage and a high-vacuum picture tube. To prevent serious injury, review CRT safety in Bulletins/Safety.




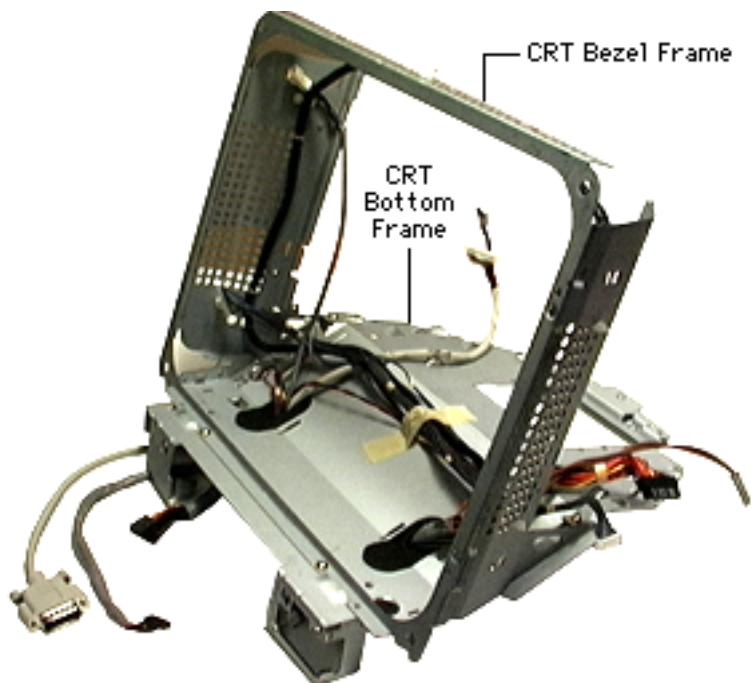

Before you begin, [discharge the CRT](#) and remove the following:

- Lower access cover
- Main Logic board/mass storage chassis
- Bottom rear housing
- Front lower panel
- Front outer bezel
- Top rear housing
- CRT EMI shield
- Analog/video board
- Power supply board
- CRT
- Speakers
- Headphone/power board
- IrDA board




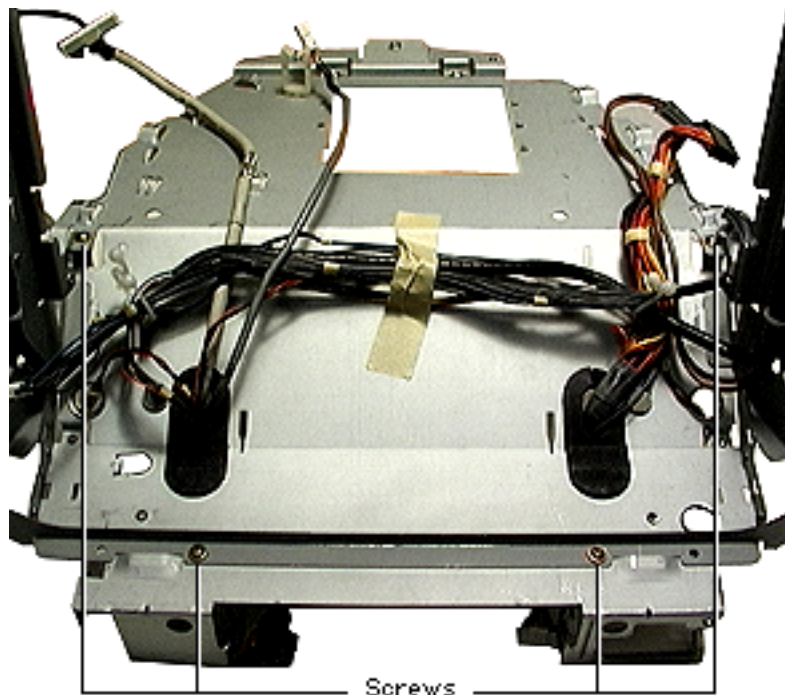

- 1 Remove the four brass-colored screws to separate the top frame from the bottom frame.


Note: Take note of the cable routing before removing/replacing any cables.



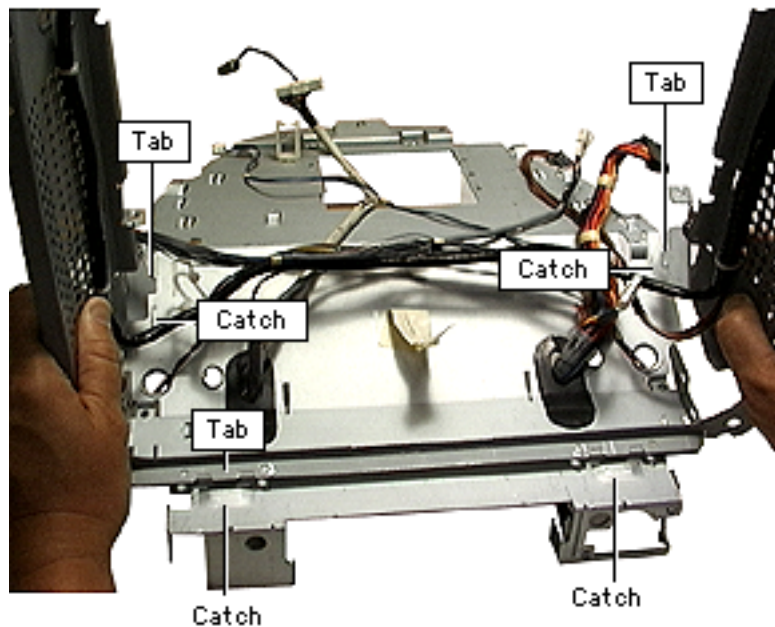

- 2 Pull the tabs out of the catches on the CRT frame.
- 3 Lift the top frame up and off the bottom frame.



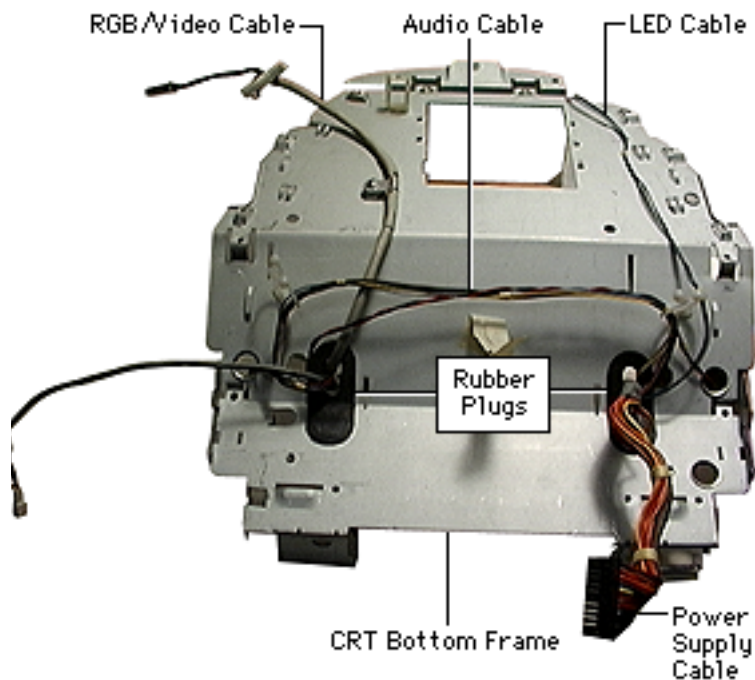

- 4 The remaining frame is the CRT bottom frame. It ships without the cables and rubber plugs.

Note: The cables and rubber plugs are offered separately.





Upgrades

iMac



SDRAM

Before you begin, position the iMac face down on an ESD mat.


- 1 Remove the lower access cover.





- 2 Remove the two screws at the top of the logic board/mass storage chassis and disconnect the cables and screw clamp.



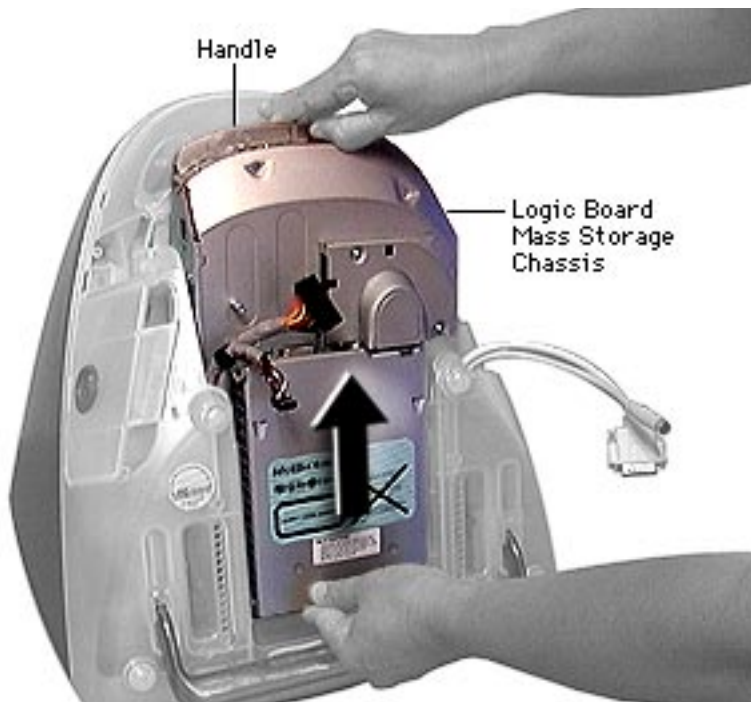


- 3 Using the handle, pull the main logic board/mass storage chassis from the unit.






- 4 Place the logic board/mass storage unit on an ESD mat.



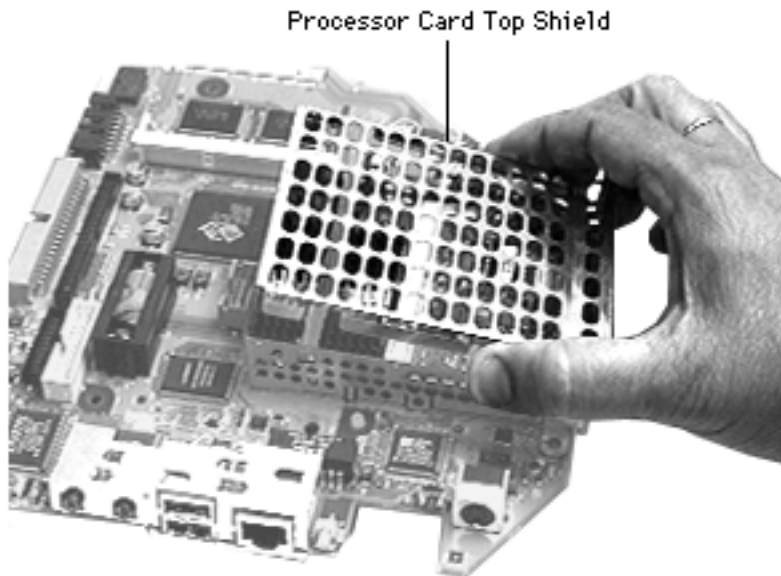

- 5 Remove the processor card top shield.



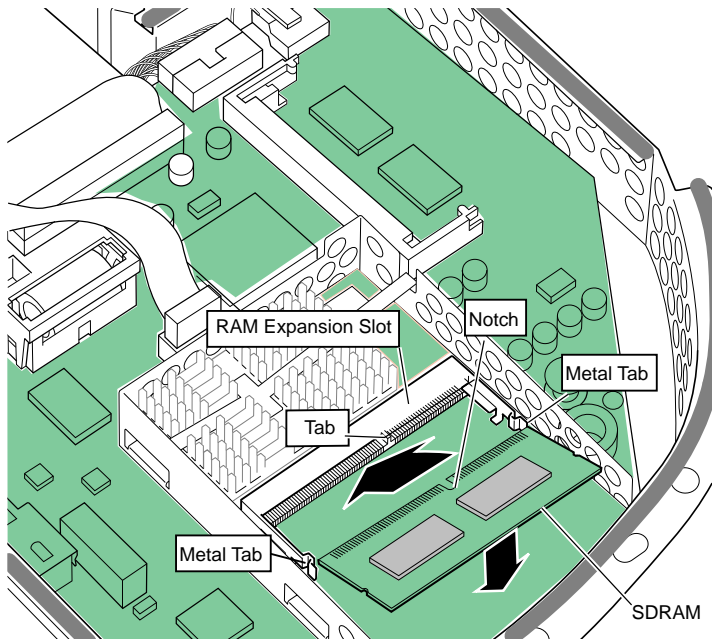

- 6 Line up the notch in the SDRAM DIMM with the small plastic tab in the SDRAM slot. Push in on the card and then down until the two metal snaps click into place.

Note: There are two expansion slots for RAM DIMM modules on the microprocessor board. One slot is on the top side of the processor card (as shown here) and one slot is on the underside of the processor card.





VRAM


Before you begin, position the iMac face down on an ESD mat.

- 1 Remove the lower access cover.






Logic Board
Mass Storage
Chassis

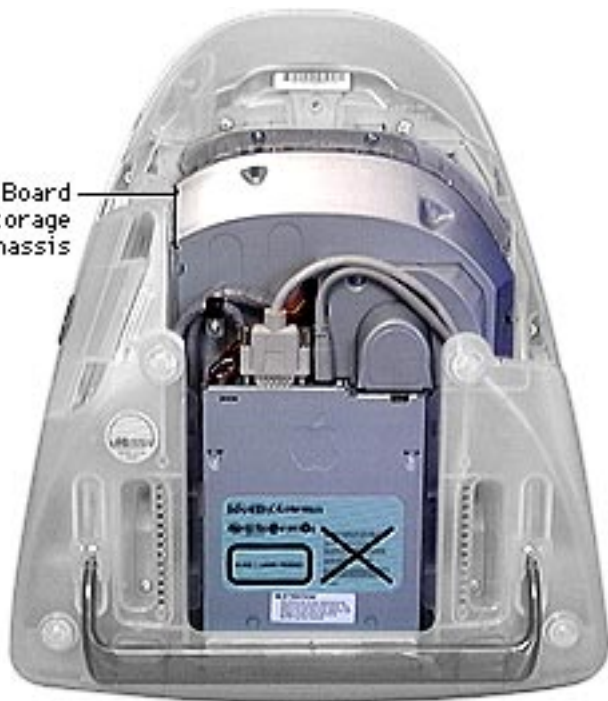

- 2 Remove the two screws at the top of the logic board/mass storage chassis and disconnect the cables and screw clamp.



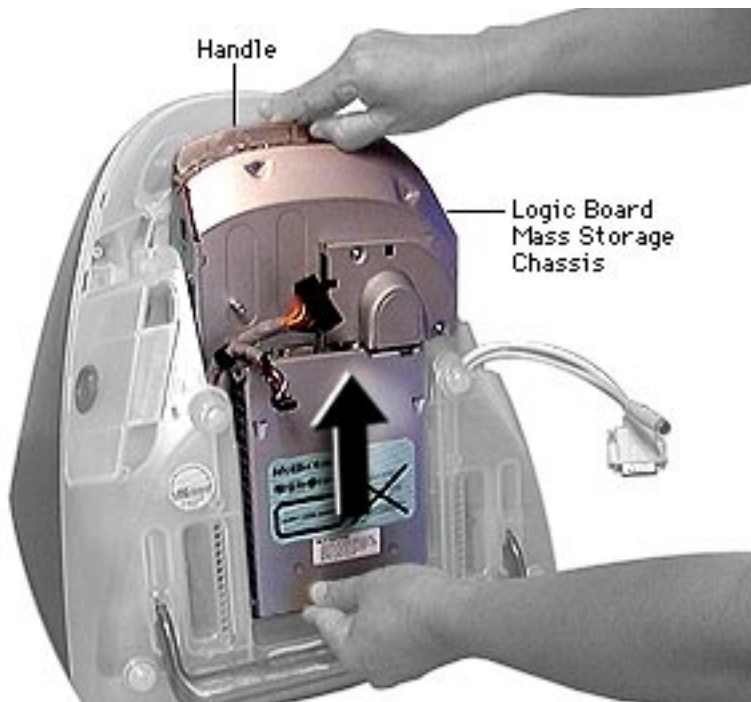


- 3 Using the handle, pull the main logic board/mass storage chassis from the unit.






- 4 Place the logic board/
mass storage chassis on
an ESD mat.



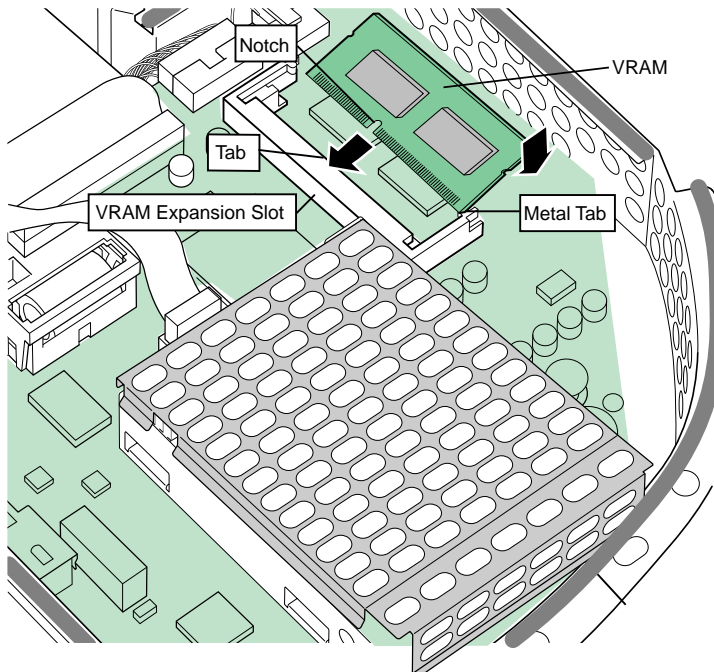

- 5 Line up the notch in the SGRAM DIMM expansion card with the small plastic tab in the VRAM expansion slot. Push in on the VRAM card, and then down, until the two metal snaps click into place.



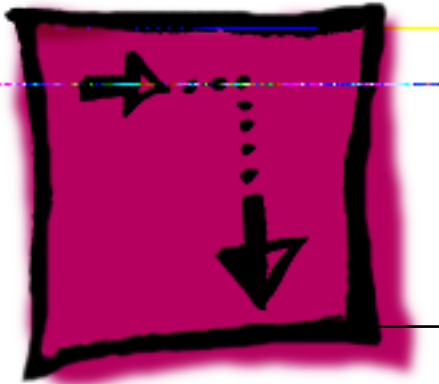

Adjustments

iMac



Light Meter Setup


This topic covers setup for three light meter models: R77, L-248, and 246. Model R77 (Apple part number 076-0310) is the newest model available.

Model R77

The R77 light meter is capable of reading luminance from 10 to 1,000 footcandles (fc).

Before you begin, remove the 10X multiplier plate from the lens.



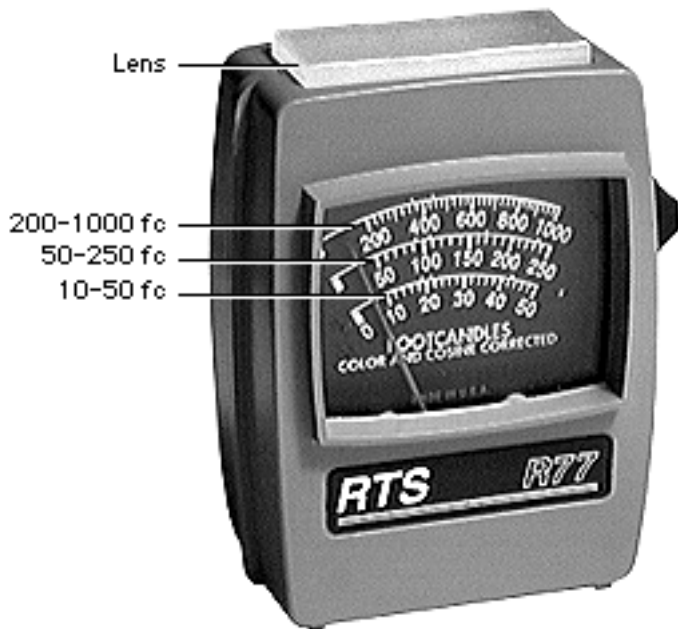

Three scales are shown on the light meter:

- 200-1000 fc
- 50-250 fc
- 10-50 fc

Because display screen luminance typically ranges from 10 to 50 fc, take readings from the bottom scale only.






To measure a display screen's luminance,

- 1 Set the scale switch to the bottom position (to set up the 10-50 fc scale).
- 2 Place the lens against the middle of the screen and read the bottom scale.

Note: When the light meter is not in use, slide the scale switch to its top position, and store the meter in its protective case.




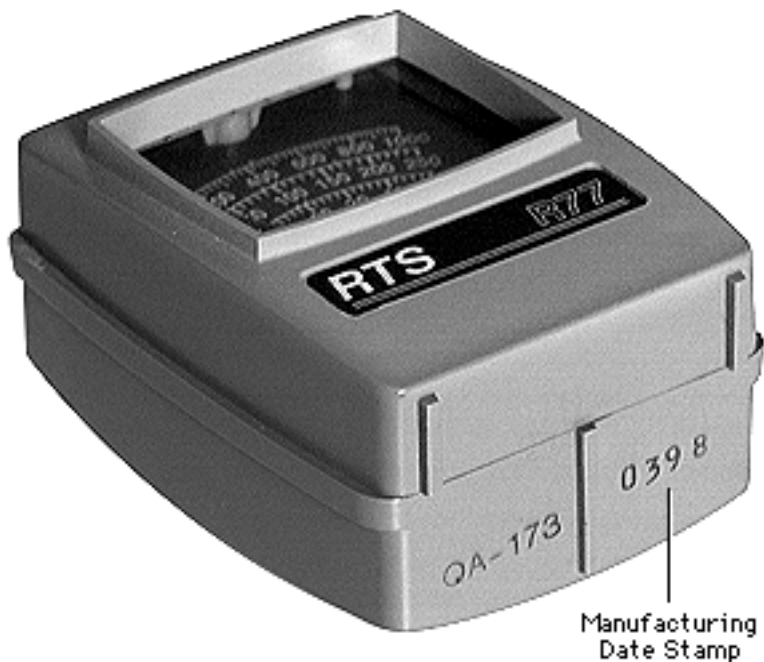

Important: If you suspect the light meter is giving false readings, verify the readings with a known-good light meter or photometer. Also check the age of the R77 light meter by its four-digit manufacturing date stamp (such as 0398 for March 1998).

Caution: Dropping the meter can permanently damage its accuracy. A shock-damaged meter might read incorrectly or its pointer may not drop to zero.




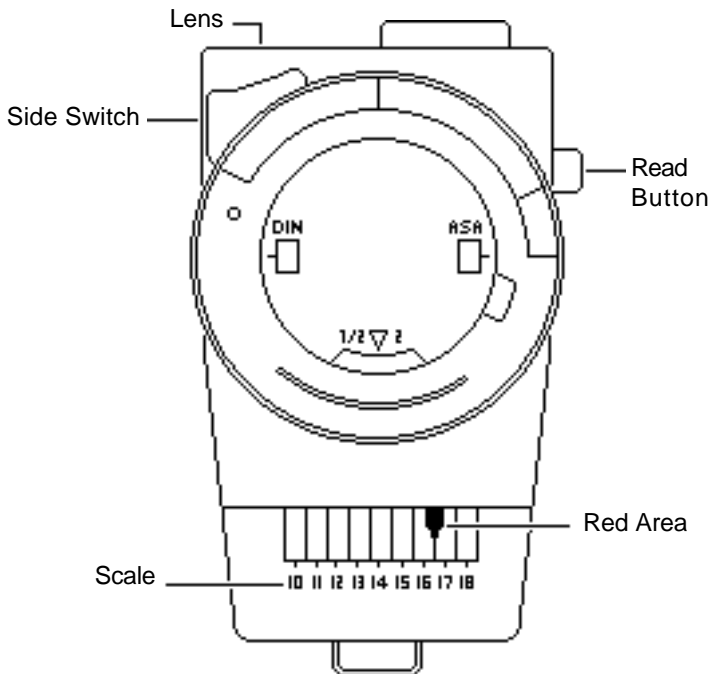

Model L-248

- 1 Press the red button on the back of the light meter. If the reading is out of the red area, replace the battery.
- 2 Move the side switch to its upper position so that the scale reads 10 through 18.
- 3 Uncover the lens of the meter.
- 4 Place the lens against the middle of the screen and press the read button to read the scale.



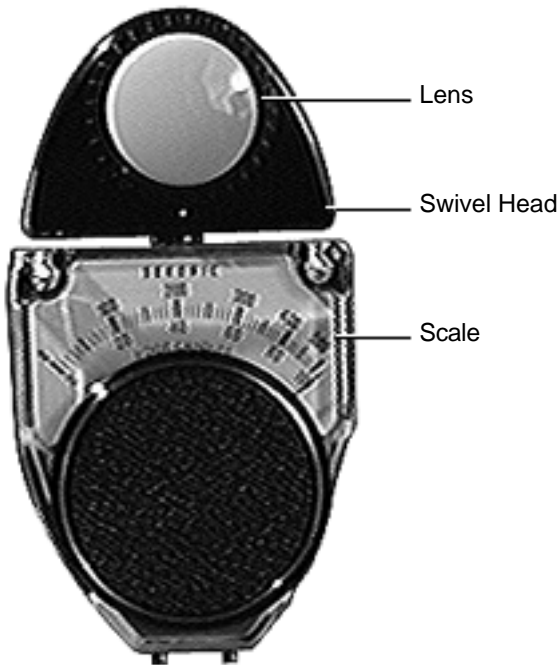

Model 246

This topic covers setup for light meter Model 246.

- 1 Remove the metal slide, if installed, from the top of the light meter.
- 2 Install the white lens with the red dot.
- 3 Swivel the head so the lens of the meter faces the monitor.
- 4 Place the lens against the middle of the screen and read the scale.





Geometry


The Geometry adjustments shown are controlled via the Diagnostic Adjustment Utility.



DAU

- 1 Using the Diagnostic Adjustment Utility (DAU), adjust the settings by moving the appropriate slider bar.


Note: Geometry adjustments are also accessible through the Monitors & Sound control panel.

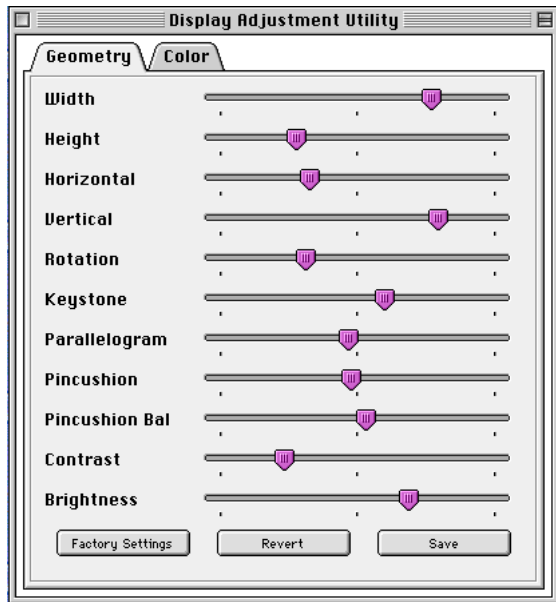



Using Monitors & Sound Control Panel

To use the Monitors & Sound control panel, select Control Panels from the Apple menu, and select Monitors & Sound.

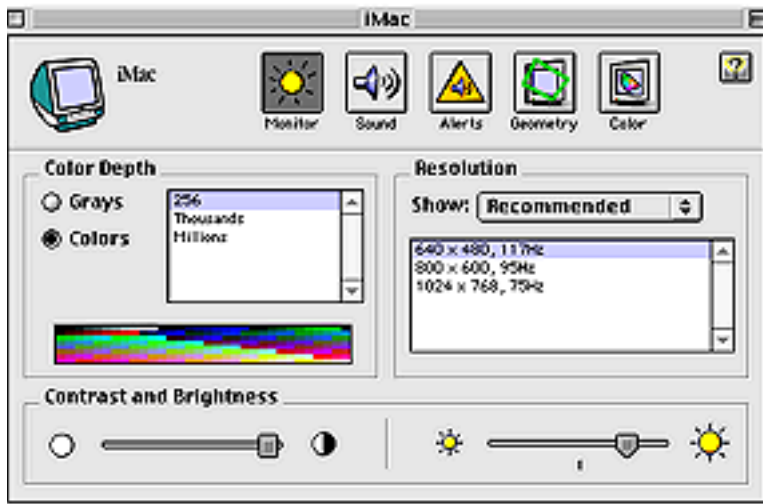

- 1 Click the Monitor button to adjust color depth, resolution, contrast and brightness.
- 2 Click the Geometry button to make geometry adjustments.





Video



DAU


Run
Display Service
Utility



Use the Display Adjustment Utility (DAU) version 1.1 and the Display Service Utility (DSU) version 4.2.1 to perform the Cutoff and White Balance adjustments. These utilities are located on the Service Source Companion 2 CD and on the MacTest Pro Diagnostic CD.

Replacement Note: Perform the cutoff adjustment whenever you replace the CRT or the analog /video board.



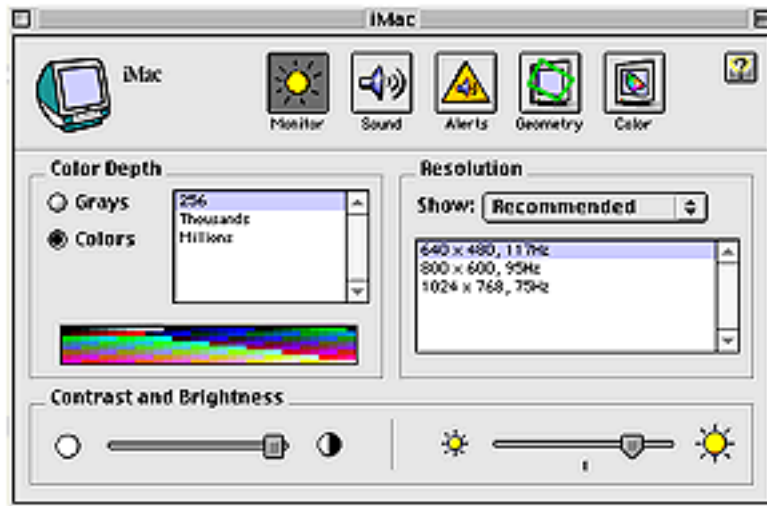

Cutoff


Note: Perform the cutoff adjustment prior to adjusting the white balance. Make sure the monitor has been on for at least 10 minutes.


- 1 Using the Monitors & Sound Control Panel, set the contrast to maximum and brightness to midrange.
- 2 Set the display resolution is set to 640 x 480.





- 3 Using the Diagnostic Adjustment Utility, move the contrast and brightness controls to midrange.

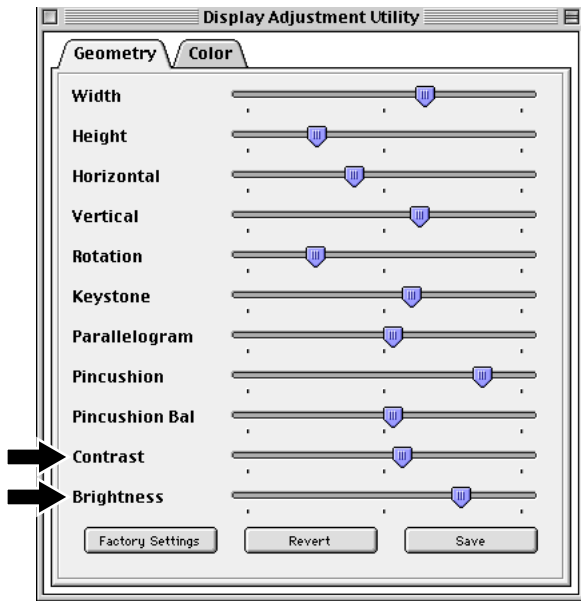

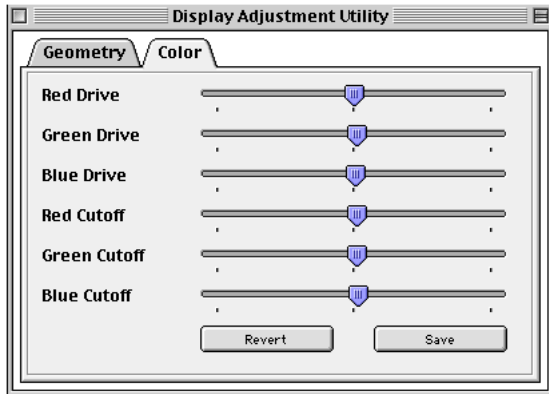

DAU

- 4 Using the Diagnostic Adjustment Utility (Color section), set the drive and cutoff controls to their midpoint positions.

Note: You will need to switch back and forth between the Display Service Utility's Gray Bar Test pattern and the Diagnostic Adjustment Utility.






- 5 Run the Display Service Utility to display the Gray Bar Test pattern.

Note: This procedure should be performed in a dimly lit room.


Run
Display Service
Utility

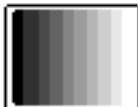

Gray Bar
Test Pattern



- 6 Look at the Gray Bar Test pattern.
- the bars should have no predominant color
 - the leftmost bar should be as black as the screen border
 - the second bar (from the left) should be barely visible
 - the third bar should be dark gray

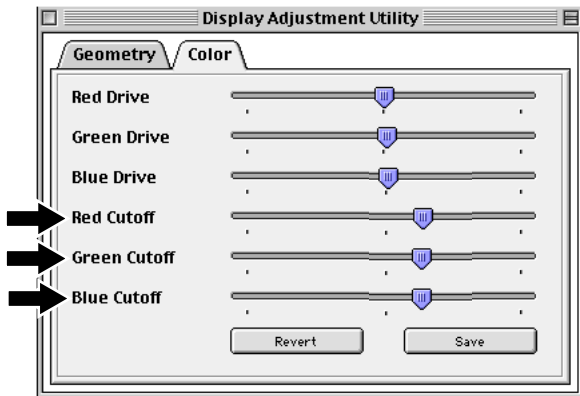

DAU

- 7 Using the Display Adjustment Utility, adjust the red, green, and blue cutoff controls together until the second bar (from the left) is barely visible.





- 8 Check the Gray Bar test pattern. If there is a predominant color in the three gray bars (on the left), adjust the color accordingly until there is no predominant color.



- 9 The cutoff is now set correctly. You should see shades of black and gray and the second bar (from the left) is barely visible.



White Balance

Note: Make sure the cutoff is set correctly before you proceed and that the monitor has been on for at least 10 minutes.


Run
Display Service
Utility



Gray Bar
Test Pattern

- 1 Run the Display Service Utility's Gray Bar test pattern.



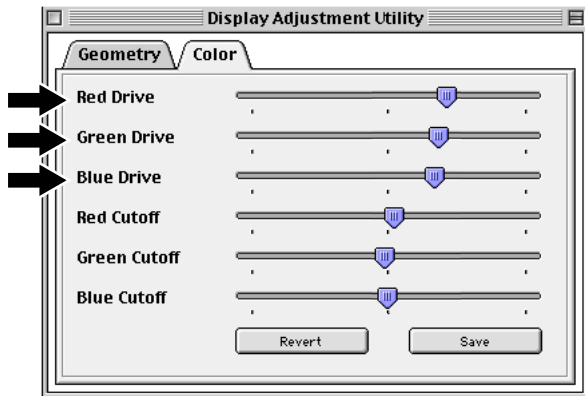

DAU

- 2 Hold a light meter on the white bar (last bar on the right). Adjust the red, green, and blue drive controls until the light meter reads 18 foot candles. **Note:** The drive controls adjust the lighter bars.

Important: If a predominant color is displayed in the three left gray bars, adjust the cutoff controls until you see no predominant color. Recheck the white bar for an 18 foot






candles light meter reading.
Adjust the red, green, and
blue drive controls until
there is no predominant
color and the meter reads
18 foot candles.





Run
Display Service
Utility

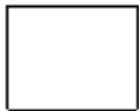

All-White Screen

- 3 Using the Display Service Utility, display the All-White screen test. Hold a light meter or photometer against the center of the screen.

The screen luminance reading should be one of the following:

- 21 (foot candles) on light meter Model R77
- Upper end of 10 on the 10 through 18 scale of light meter Model L-248
- 21 (foot candles) on the red scale of light






meter Model 246

- 25 fL (foot lamberts)
on a photometer



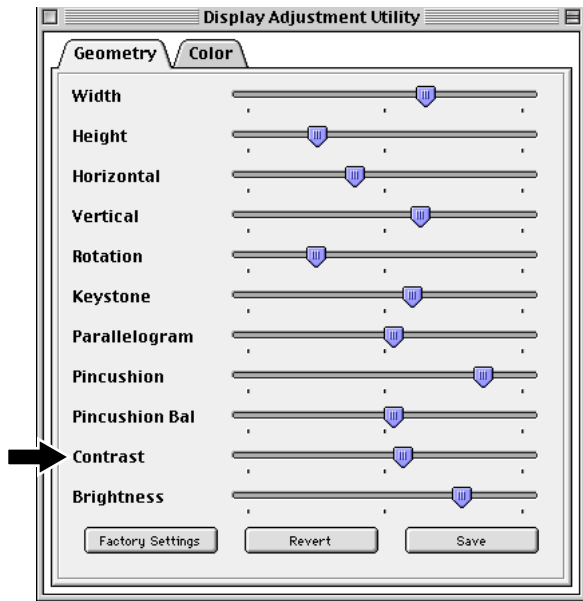

DAU

- 4 Using the Diagnostic Adjustment Utility adjust the contrast control to increase the screen brightness until the luminance measures correctly.


Note: Leave the brightness control at midrange.





Focus

- 1 Run Display Service Utility to display the Focus test pattern.
- 2 Using a flat-head plastic adjustment tool, adjust the focus control on the flyback transformer until the Focus test pattern reaches the best center-of-screen performance.

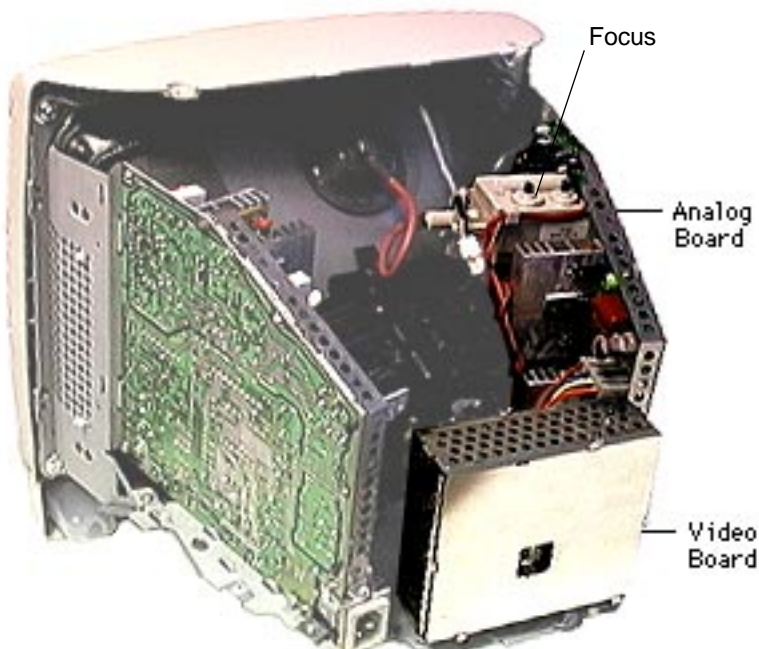



Read Me File

Display Adjustment Utility v. 1.1

Use the Display Adjustment Utility to adjust the geometry, brightness, contrast, and color of Power Macintosh G3 All-in-one and iMac displays. The utility is designed to under Mac OS 8.1.

Note: When running this utility, QuickTime™ v2.5 (or later) extension and QuickTime™ PowerPlug v2.5 (or later) extension must be enabled.





Geometry Adjustments

- Save button - Clicking this button saves the adjustments you have performed.

Note: Adjustments (except for brightness and contrast) are linked to the resolution that the display is currently using. If the user changes the resolution, the adjustments will not apply to the new resolution.

- Revert button- Clicking this button restores the display to the last set of adjustments.

Note: Once you save a set of adjustments, you cannot revert to a previous set of adjustments.

- Factory Setting button - Clicking this button sets the adjustments to pre-defined factory settings.

Note: Brightness and Contrast adjustments will not be affected by clicking the “Factory Setting” button. There is no pre-defined factory setting for brightness and contrast.





Caution: Do not turn brightness and contrast all the way down. If you do, you may not be able to see the controls clearly enough to readjust them.

Color Adjustments

- Save - Clicking this button saves the adjustments.
- Revert - Clicking this button restores the display to the last set of adjustments.

Note: Once you save a set of adjustments, you cannot revert to a previous set of adjustments.

Important: Be careful when performing color adjustments. There is no pre-defined factory setting for color.






Exploded View

iMac






iMac Exploded View

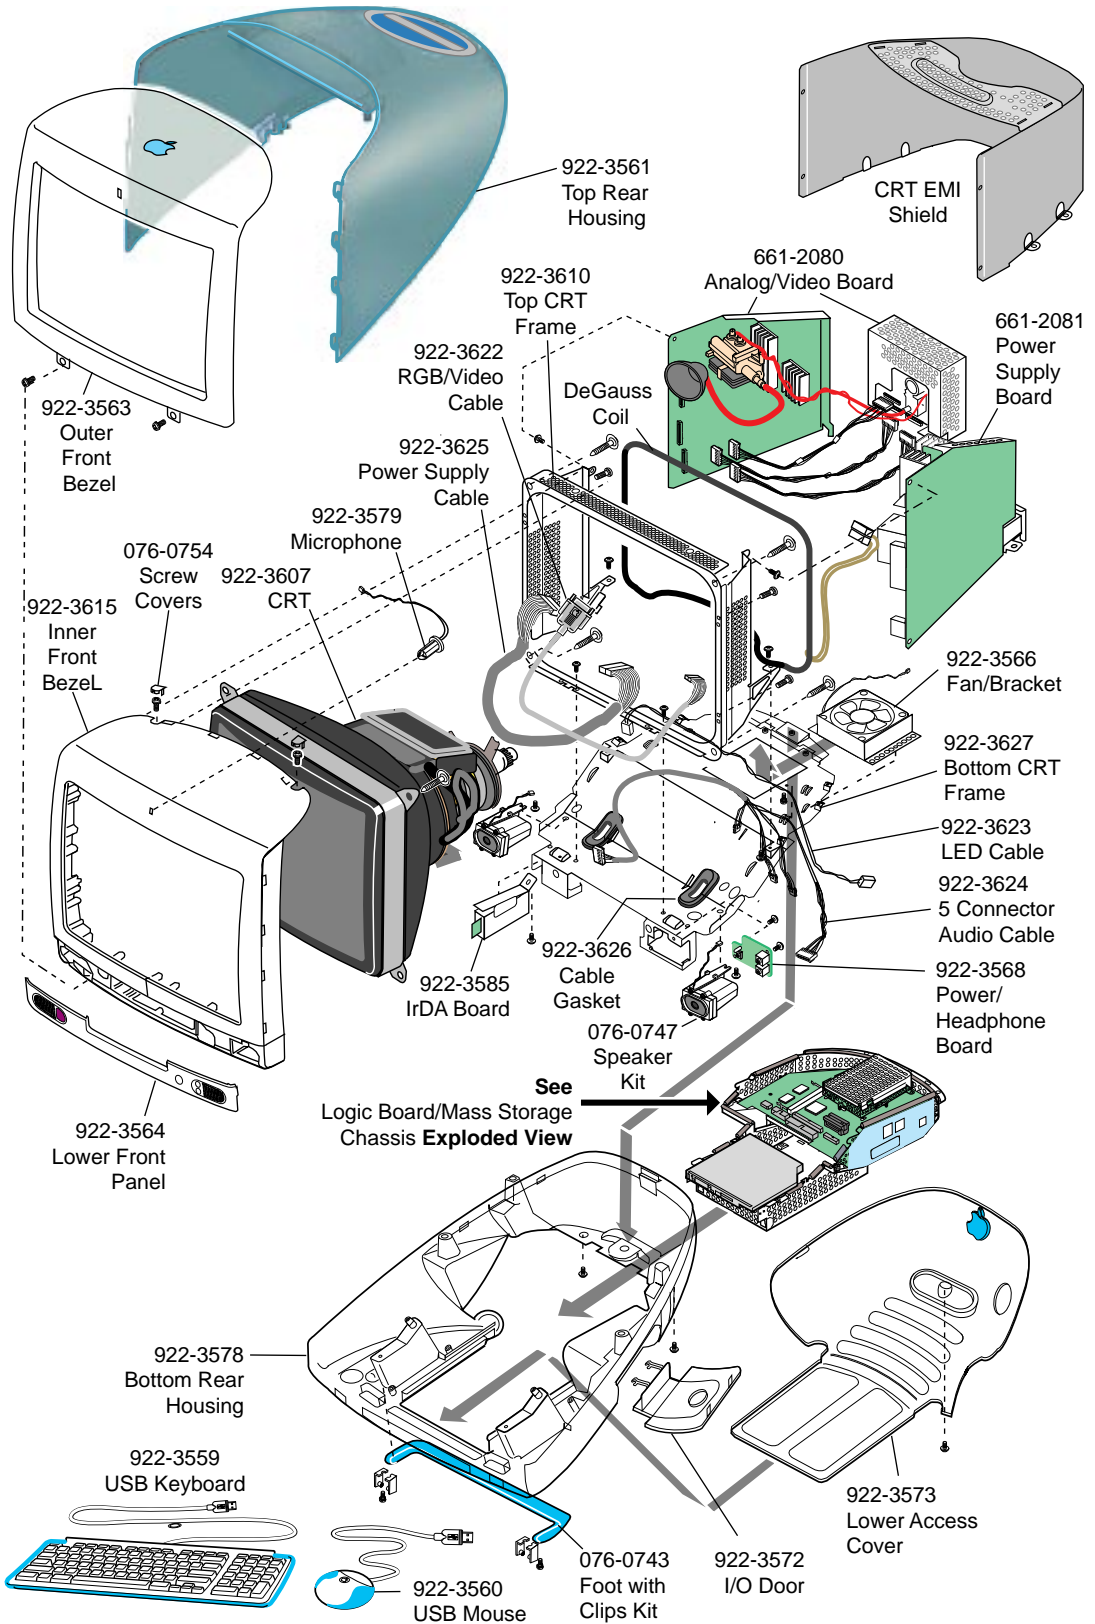



Logic Board/Mass Storage Chassis Exploded View

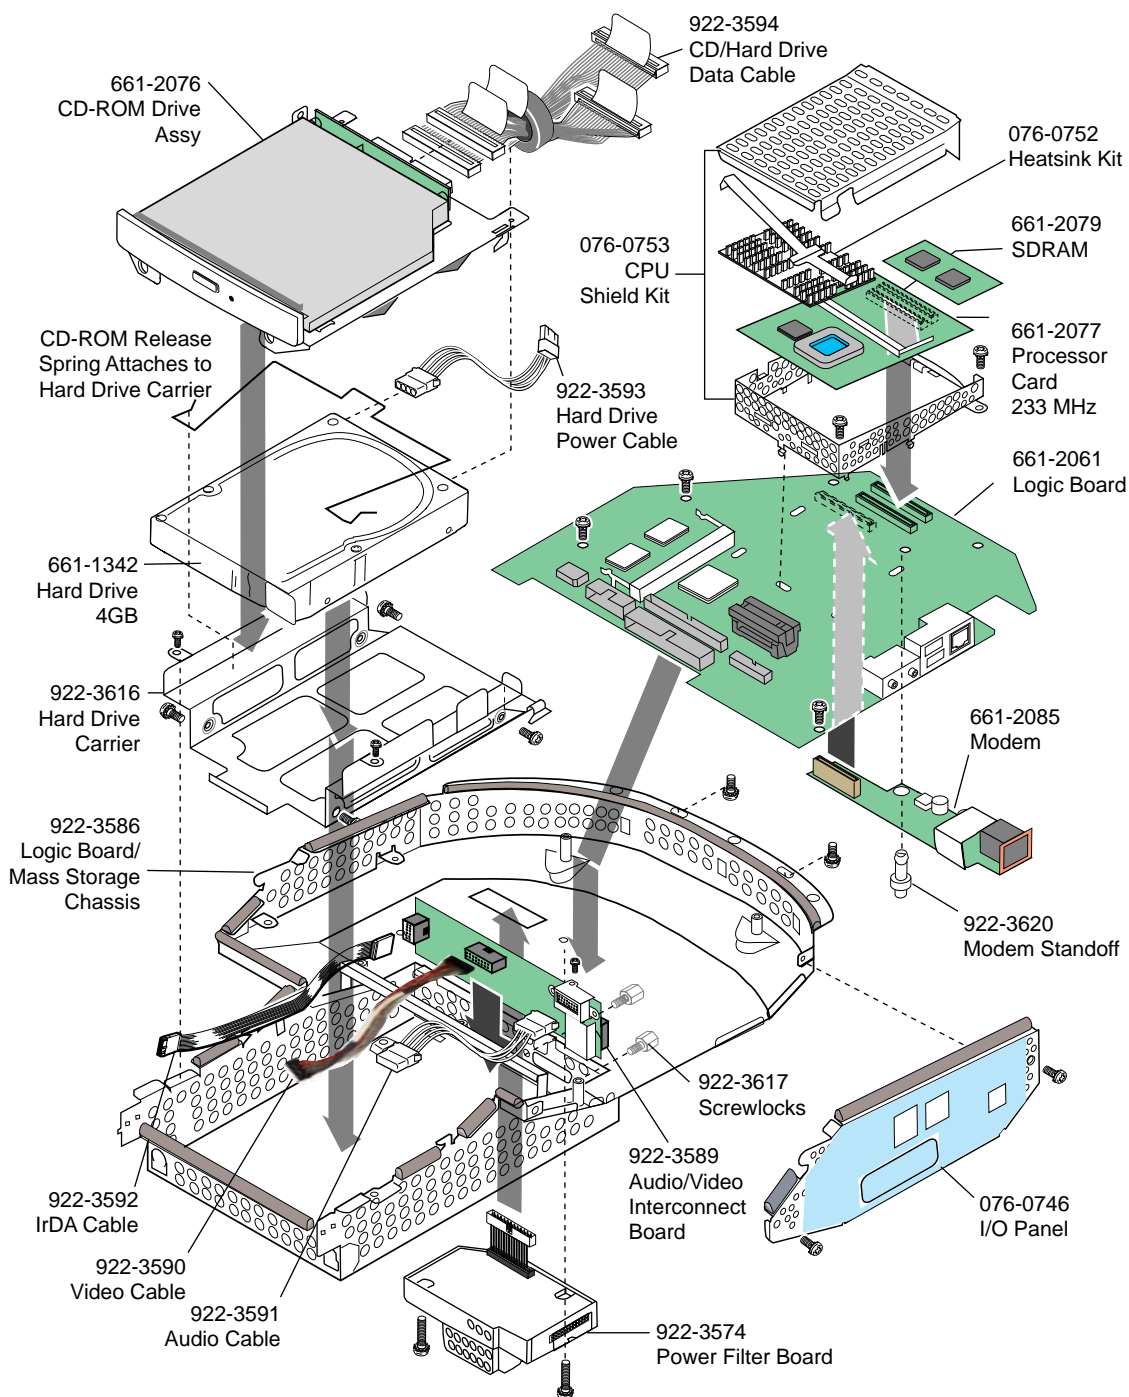





iMac Screw Matrix

922-3645


Can to CRT Chassis
w/lock washer (2)
Can Cable Clip
w/lock washer (1)

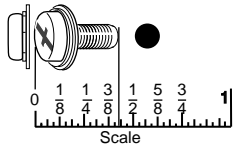**922-3638 w/washer**


Logic Board (5)
HDCarrier to Can (2)
Interconnect Board
Shield to Can (1)
Cable Bracket to Can (1)

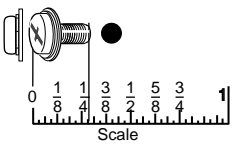**922-3639**


I/O Panel (2)

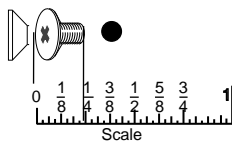**922-2224**


HDA Carrier to HDA (4)

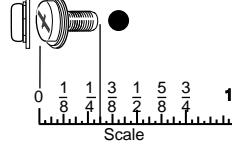**922-3634**


Power Filter (2)

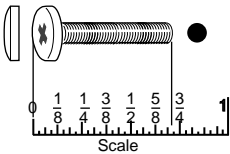**922-3611**


Bottom Housing (4)
Front outer Bezel (2)
Top Rear Housing (2)
CRT chassis to
Inner Bezel (4)

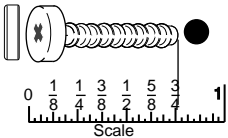**922-3612**


Bottom Housing (4)

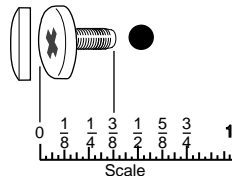**922-3613**


CRT to CRT Chassis to
Inner Bezel (4)

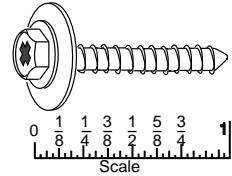**922-3614**


Speakers (1) ea, Fan (2)
Headphone Board (2)
Power Supply Board (3)
Analog Board (3)
CRT lower Chassis (4)
Video Cable Bracket to
CRT lower Chassis (1)
CRT EMI Shield (10)

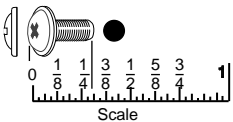**922-3617**


Rear Underside of Can
to Interconnect Board
screwlock (2)

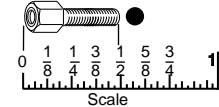**922-3637**

CD Bezel to CD-ROM
(microScrew)

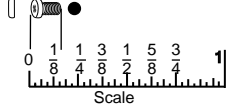**922-3640**

IRDA Connector
underside of can (1)

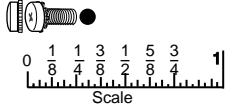

iMac


PART N° & DESCRIPTION		NOTES	STOCK	EXCH	AO STOCK	AO EXCH	RC
MODULES							
661-1342	Hard Drive, 4 GB, IDE, 3.5"		-Ⓜ\$	-Ⓜ	-Ⓜ\$	-Ⓜ\$	2
661-2061	Board, Logic		0.00	0.00	0.00	0.00	2
661-2076	CD-ROM Drive, 24X		0.00	0.00	0.00	0.00	1
661-2077	Card, Processor, 233 MHz, 512K		0.00	0.00	0.00	0.00	2
661-2079	SDRAM, SO-DIMM, 32 MB, 100 MHz		0.00	0.00	0.00	0.00	2
661-2080	Board, Analog / Video		0.00	0.00	0.00	0.00	3
661-2081	Board, Power Supply		0.00	0.00	0.00	0.00	3
661-2084	Modem, 56K, Internal, Europe/Australia		0.00	0.00	0.00	0.00	2
661-2085	Modem, 56K, Internal, US/Japan/Canada/Taiwan/Hong Kong/Singapore		0.00	0.00	0.00	0.00	2
REPLACEMENT PARTS							
076-0747	Speaker Kit, Left and Right		0.00		0.00		2
742-0011	Battery, Lithium, 3.6-3.9V, without Leads		6.00		5.40		1
922-3559	Keyboard, USB		0.00		0.00		1
922-3560	Mouse, USB		0.00		0.00		1
922-3566	Fan with Bracket		0.00		0.00		2
922-3568	Board, Power / Headphone		0.00		0.00		2
922-3574	Board, Filter, Power		0.00		0.00		2
922-3579	Microphone		0.00		0.00		4
922-3585	Board, IrDA		0.00		0.00		2
922-3589	Board, Audio / Video Interconnect with Shield		0.00		0.00		3
922-3590	Cable, Audio, Interconnect to Logic Board		0.00		0.00		2
922-3591	Cable, Video, Interconnect to Logic Board		0.00		0.00		2
922-3592	Cable, IRDA, Interconnect to Logic Board		0.00		0.00		2
922-3593	Cable, Hard Drive, Power		0.00		0.00		2
922-3594	Cable, Data, Hard Drive / CD		0.00		0.00		1
922-3607	CRT Assembly, Northern Hemisphere		0.00		0.00		4
922-3608	CRT Assembly, Southern Hemisphere	13	0.00		0.00		3
922-3609	CRT Assembly, Equator	13	0.00		0.00		3
922-3622	Cable, Video, RGB		0.00		0.00		5
922-3623	Cable, LED		0.00		0.00		2
922-3624	Cable, Audio, 5 Connector		0.00		0.00		4
922-3625	Cable, Power Supply		0.00		0.00		4
922-3628	Cable, IRDA, Enclosure to A / V Interconnect Board		0.00		0.00		1
B922-3559	Keyboard, USB, British		0.00		0.00		1
C922-3559	Keyboard, USB, Canada		0.00		0.00		1
D922-3559	Keyboard, USB, German		0.00		0.00		1
E922-3559	Keyboard, USB, Spanish		0.00		0.00		1
F922-3559	Keyboard, USB, French		0.00		0.00		1
J922-3559	Keyboard, USB, Japan		0.00		0.00		1
S922-3559	Keyboard, USB, Swedish		0.00		0.00		1
T922-3559	Keyboard, USB, Italian		0.00		0.00		1
OTHER PARTS							
076-0743	Foot Kit, Elevation, with Clips		0.00		0.00		
076-0746	I / O Panel Kit		0.00		0.00		
076-0752	Heatsink Kit		0.00		0.00		
076-0753	Shield Kit, CPU		0.00		0.00		
076-0754	Screw Cover Kit, Left and Right, Pkg. of 20		0.00		0.00		
520-0344	Battery Holder		1.00		0.90		
922-2224	Screw, Sems 6-32 x .250, Pkg. of 10		1.00		0.90		
922-3561	Housing, Rear, Top		0.00		0.00		
922-3563	Bezel, Outer, Front		0.00		0.00		
922-3564	Panel, Front, Lower		0.00		0.00		
922-3572	Door, I / O, with Grommet		0.00		0.00		
922-3573	Cover, Access, Lower, with Handle		0.00		0.00		

Apple Computer, Inc. CONFIDENTIAL

iMac

PART N° & DESCRIPTION		NOTES	STOCK	AO STOCK	RC
OTHER PARTS					
922-3577	Foot, Rubber, Pkg. of 4		\$0.00	\$0.00	
922-3578	Housing, Bottom, Rear		0.00	0.00	
922-3586	Chassis, Logic Board / Mass Storage		0.00	0.00	
922-3598	Power Cord, 110 V, US		0.00	0.00	
922-3599	Power Cord, Japan		0.00	0.00	
922-3600	Power Cord, Europe		0.00	0.00	
922-3601	Power Cord, UK		0.00	0.00	
922-3602	Power Cord, Denmark		0.00	0.00	
922-3603	Power Cord, Australia		0.00	0.00	
922-3604	Power Cord, Swiss		0.00	0.00	
922-3605	Bezel, CD-ROM Tray		0.00	0.00	
922-3610	Frame, CRT, Top		0.00	0.00	
922-3611	Screw, Philips, Self-Tapping, Pkg. of 10		0.00	0.00	
922-3612	Screw, Philips, Machine, Pkg. of 10		0.00	0.00	
922-3613	Screw, Philips, Self-Tapping with Washer, Pkg. of 10		0.00	0.00	
922-3614	Screw, Philips, Machine, Small, Pkg. of 10		0.00	0.00	
922-3615	Bezel, Inner, Front		0.00	0.00	
922-3616	Carrier, Hard Drive		0.00	0.00	
922-3617	Screwlocks, Pkg. of 6		0.00	0.00	
922-3618	Ball, Mouse, Pkg. of 5		0.00	0.00	
922-3619	Retainer, Mouse		0.00	0.00	
922-3620	Standoff, Modem, Locking, 10mm, Pkg. of 10		0.00	0.00	
922-3621	Grounding Wire, CRT		0.00	0.00	
922-3626	Gasket, Cable, Rubber, Pkg. of 5		0.00	0.00	
922-3627	Frame, CRT, Bottom		0.00	0.00	
922-3630	Screw, PH, 3.5X.5X14, PAN, Pkg. of 10		0.00	0.00	
922-3634	Screw, Pan, 14mm, Crest Cup, Pkg. of 10		0.00	0.00	
922-3637	Screw, CD bezel to CD		0.00	0.00	
922-3638	Screw, Pan, M3X6MM, Crest Cup, Pkg. of 10		0.00	0.00	
922-3639	Screw, M3X.5X6MM, Philips, Pkg. of 10		0.00	0.00	
922-3640	Screw, Pan, 4-40X.25, Pkg. of 10		0.00	0.00	
922-3645	Screw, M3.5X.6X8MM, PAN, Pkg. of 10		0.00	0.00	
ADJUSTMENTS					
011-0150	Digital Monitor, Video Adjustment				2
011-0180	Warranty Reimbursement, On-Site, iMac, Per Repair				

Apple Computer, Inc. **CONFIDENTIAL**

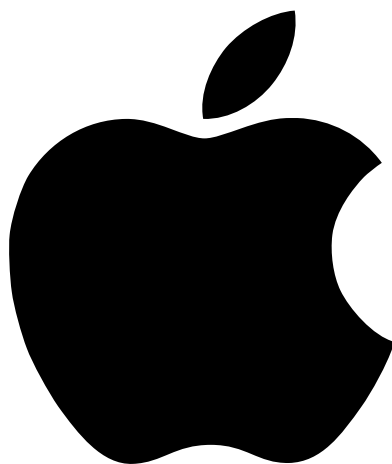

Emergency Handbook

Includes troubleshooting, hard disk repair,
and software installation information for your iMac

Apple Computer, Inc.

© 1998 Apple Computer, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Apple. Your rights to the software are governed by the accompanying software license agreement.

The Apple logo is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. Use of the “keyboard” Apple logo (Option-Shift-K) for commercial purposes without the prior written consent of Apple may constitute trademark infringement and unfair competition in violation of federal and state laws.

Every effort has been made to ensure that the information in this manual is accurate. Apple is not responsible for printing or clerical errors.

Apple Computer, Inc.

1 Infinite Loop

Cupertino, CA 95014-2084

408-996-1010

<http://www.apple.com>

Apple, the Apple logo, AppleShare, AppleTalk, LaserWriter, Mac, the Mac OS logo, Macintosh, Power Macintosh, QuickDraw, and QuickTime are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.


AppleCD, At Ease, Disk First Aid, Extensions Manager, Finder, Foreign File Access, and Macintosh PC Exchange are trademarks of Apple Computer, Inc.

ENERGY STAR is a U.S. registered trademark.

Helvetica is a registered trademark of Linotype-Hell AG and/or its subsidiaries.

PostScript is a trademark of Adobe Systems Incorporated or its subsidiaries and may be registered in certain jurisdictions.

PowerPC and the PowerPC logo are trademarks of International Business Machines Corporation, used under license therefrom.

SRS and the SRS symbol (**SRS** ) are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS technology is incorporated under license from SRS Labs, Inc. and is protected under United States Patent Nos. 4,748,669 and 4,841,572 with numerous additional issued and pending foreign patents. Purchase of this product does not convey the right to sell recordings made with the SRS technology.

Simultaneously published in the United States and Canada.

Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. Apple assumes no responsibility with regard to the performance or use of these products.



Contents

1 Problems Starting Up 7

Problems 7

Computer won't start up, restart, or shut down 7

Single icon appears in middle of screen 8

Computer beeps 8

Computer freezes 8

Message appears 9

Normal desktop doesn't appear 10

Hard disk icon doesn't appear on desktop 10

Computer starts up from wrong disk 11

Solutions 11

Take notes. 11

Wake up your computer. 11

Restart the computer. 12

Force your computer to restart. 12

Shut down the computer. 12

Force your computer to shut down. 13

Quit open applications. 13

Make sure your computer is getting power. 13

Make sure the screen is properly adjusted. 13

Make sure external devices are properly connected and turned on. 14

Check RAM disk settings in the Memory control panel. 15

Increase the memory available for system software. 15

Reset the window display. 16

Re-bless the System Folder.	16
Make sure you're using the correct disk as a startup disk.	16
CD disc is jammed.	17
Resolve system extension conflicts.	17
Reset the PRAM.	19
Make sure memory is installed correctly.	20
Replace the computer's backup battery.	20
Test and repair the hard disk directory.	21
Reinstall system software.	21
Where to Find Onscreen Help	22
Mac OS Help	22
Mac OS Info Center	22

2 Problems Using Your Computer 23

Problems With Applications, Documents, and Memory	23
Problems With Hard Disks, CDs, and Other Storage Media	29
Problems With Hard Disks	29
Problems With CD Drives and Discs	30
Problems Using ISO 9660 or High Sierra Discs	32
Problems Using Photo CDs	33
Problems Playing Audio CDs	33
Problems With USB Devices	33
Problems Printing	35
Performance and Other Problems	36
Problems With Networks and File Sharing	39
Problems With Sound and Video	41

3 Starting Up From a CD 45

Starting Up From the Software Install CD	45
--	----

4 Testing and Repairing Your Hard Disk Directory 47

Repairing Corrupted Data on Your Disk	47
If Disk First Aid Cannot Correct the Problem	48
Updating the Hard Disk Drivers	49
Initializing a Hard Disk	49
Mac OS Extended Format	50

Testing Your Hard Disk for Physical Damage 50

5 Reinstalling Your Computer's Software 53

Reinstalling System Software 53

Before Installing System Software 53

Reinstalling Mac OS System Software 54

Selecting Which Software to Install 55

Performing a Clean Installation 58

Reinstalling Your Custom Extensions, Fonts, and Control Panels 59

If the Clean Installation Didn't Solve the Problem 60

Problems During Installation 60

Responding to Messages About Your Hard Disk 62

Reinstalling Individual Applications 62

Restoring All Original Software 63

Before Restoring Your Software 63

Restoring In Place 63

Erasing Your Hard Disk 64

6 Contacting Apple for Help 65

Obtaining Information via the World Wide Web 65

Have This Information Available Before Calling 66

Using the Apple System Profiler 66

Index 67

Problems Starting Up

Problems

Computer won't start up, restart, or shut down

Computer won't start up.

Try these solutions:

- Make sure your computer is getting power. (p. 13)
- Force your computer to restart. (p. 12)
- Increase the memory available for system software. (p. 15)
- Make sure memory is installed correctly. (p. 20)
- Replace the computer's backup battery. (p. 20)

Unusual sound occurs when you try to start up the computer.

Try these solutions:

- Make sure external devices are properly connected and turned on. (p. 14)
- Make sure memory is installed correctly. (p. 20)
- Test and repair the hard disk directory. (p. 21)

Computer won't restart.

Try these solutions:

- Make sure your computer is getting power. (p. 13)
- Quit open applications. (p. 13)
- Make sure you're using the correct disk as a startup disk. (p. 16)
- Resolve system extension conflicts. (p. 17)
- Force your computer to restart. (p. 12)
- Reset the PRAM. (p. 19)

Computer won't shut down.

Try this solution:

- Force your computer to shut down. (p. 13)

Single icon appears in middle of screen**Icon with blinking question mark appears.**

Try these solutions:

- Make sure external devices are properly connected and turned on. (p. 14)
- Re-bless the System Folder. (p. 16)
- Resolve system extension conflicts. (p. 17)
- Reset the PRAM. (p. 19)
- Test and repair the hard disk directory. (p. 21)
- Reinstall system software. (p. 21)

Icon with X appears.

Try this solution:

- Make sure you're using the correct disk as a startup disk. (p. 16)

Computer beeps

Try these solutions:

- *One or two beeps:* Make sure memory is installed correctly. (p. 20)
- *Three, four, or five beeps:* Contact an Apple-authorized service provider. See the service and support information that came with your computer.

Computer freezes**Computer freezes before "Welcome to Mac OS" appears.**

Note: Startup may take several minutes if you have more than 32 megabytes (MB) of RAM installed because of the time it takes to verify that the RAM is functioning properly.

Try these solutions:

- Take notes. (p. 11)
- Make sure external devices are properly connected and turned on. (p. 14)
- Force your computer to restart. (p. 12)
- Test and repair the hard disk directory. (p. 21)

- Reinstall system software. (p. 21)

Computer freezes during startup or while you're using your computer.

Try these solutions:

- Take notes. (p. 11)
- Make sure external devices are properly connected and turned on. (p. 14)
- Force your computer to restart. (p. 12)
- Resolve system extension conflicts. (p. 17)
- Test and repair the hard disk directory. (p. 21)
- Reinstall system software. (p. 21)

Keyboard or mouse doesn't work.

Try these solutions:

- Make sure external devices are properly connected and turned on. (p. 14)
- Resolve system extension conflicts. (p. 17)
- Test and repair the hard disk directory. (p. 21)
- Reinstall system software. (p. 21)

Message appears

Message about system software appears.

Try these solutions:

- Take notes. (p. 11)
- Make sure you're using the correct disk as a startup disk. (p. 16)
- Reinstall system software. (p. 21)

"Not enough memory" message appears.

Note: These solutions are for system software memory problems. For problems with application memory, see "Problems With Applications, Documents, and Memory" on page 23.

Try these solutions:

- Increase the memory available for system software. (p. 15)
- Check RAM disk settings in the Memory control panel. (p. 15)
- Resolve system extension conflicts. (p. 17)

Disk corruption message appears on startup.

Try these solutions:

- Take notes. (p. 11)
- Check RAM disk settings in the Memory control panel. (p. 15)

Normal desktop doesn't appear**Screen is dark.**

Try these solutions:

- Wake up your computer. (p. 11)
- Make sure your computer is getting power. (p. 13)
- Reset the PRAM. (p. 19)

No icons appear in windows, and pointer alternates between an arrow and a wristwatch.

Try this solution:

- Reset the window display. (p. 16)

Empty flashing box appears.

Try these solutions:

- Re-bless the System Folder. (p. 16)
- Test and repair the hard disk directory. (p. 21)
- Reinstall system software. (p. 21)

Large folder-shaped areas containing pictorial buttons appear.

Try this solution:

- Make sure you're using the correct disk as a startup disk. (p. 16)

Hard disk icon doesn't appear on desktop

Macintosh HD

*This is what a typical
hard disk icon looks like.*

Try these solutions:

- Restart the computer. (p. 12)
- Make sure external devices are properly connected and turned on. (p. 14)
- Test and repair the hard disk directory. (p. 21)

Computer starts up from wrong disk

Try these solutions:

- Make sure external devices are properly connected and turned on. (p. 14)
- Make sure you're using the correct disk as a startup disk. (p. 16)
- Reset the PRAM. (p. 19)
- Test and repair the hard disk directory. (p. 21)

Solutions

Take notes.

If you see an error message or the screen freezes, you don't have to take action immediately. First, note the following information:

- the error message and numbers (if any)
- what you were doing when the problem occurred
- the programs you were using
- software you have installed recently (especially items that have been added to the System Folder)
- clues on the screen—is a menu selected? What programs and document icons are open?
- anything else that seems relevant

If you were typing text, write down any text still visible on the screen so that some of your work will be easy to replace.

If this doesn't solve your problem, return to "Problems" on page 7.

Wake up your computer.

If your screen is dark, a screen saver program may have darkened your screen, or the computer may have "gone to sleep" (to save energy) because it was inactive. If the power button on the front of your computer is amber, your computer is asleep. Turn off the screen saver or wake up your computer by pressing any key or moving the mouse.

You may want to adjust the settings in the Energy Saver control panel to determine when your screen and computer go to sleep. See the information about the Energy Saver control panel in Mac OS Help (choose Help from the Finder's Help menu).

If this doesn't solve your problem, return to "Problems" on page 7.


Restart the computer.

Often you can eliminate a problem simply by restarting your computer, which clears the computer's memory. Always try restarting the proper way:

- 1 If you can, save any open documents before restarting.
- 2 Open the Special menu and choose Restart.

Note: You can also press the power button (⏻) on your Apple USB keyboard or on the front of the computer.

A dialog box appears.

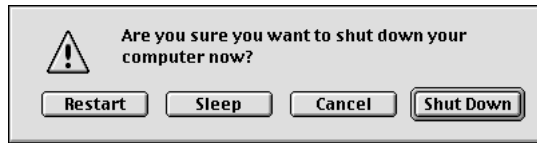

- 3 Click Restart.

If the computer freezes: Try quitting open applications. See “Quit open applications.” on page 13.

Force your computer to restart.

- If you are unable to restart your computer as described above, try pressing the Command (⌘) and Control keys simultaneously while also pressing the power button (⏻) on your Apple USB keyboard or on the front of the computer.
- Open the cover on the side of your computer and locate the Reset hole (it's the upper hole on the right side, between the Ethernet and modem ports). Carefully insert the end of a large straightened paper clip into the hole and push gently. Do not use excessive force. Your computer should restart.
- If neither of the above suggestions work, unplug your computer. Wait at least 30 seconds, then reconnect the power plug and turn your computer on by pressing the power button (⏻) on your Apple USB keyboard or on the front of the computer.

If this doesn't solve your problem, return to “Problems” on page 7.

Shut down the computer.

Always try shutting down your computer the proper way:

- 1 Open the Special menu and choose Shut Down, or press the power button (⏻) on your Apple USB keyboard or on the front of the computer.
- 2 In the dialog box that appears, click Shut Down.

If the computer freezes: Try quitting open applications. See the following section, “Quit Open Applications.”

Force your computer to shut down.

If you are unable to shut down your computer the normal way, unplug your computer. Wait at least 30 seconds before turning your computer back on again.

Quit open applications.

When you restart your computer, the computer tries to quit all open applications. Sometimes an application doesn't get the message to quit and you have to quit the application yourself.

Important Before quitting an application, make sure you save any open documents.

- You can quit almost any application by choosing Quit from the File menu or pressing Command (⌘)-Q.
- If this doesn't work, you can sometimes force a program to quit by simultaneously pressing the keys Command (⌘), Option, and Esc. Then click Force Quit in the dialog box that appears.

Note: Unsaved changes in your current documents will be lost.

Immediately save all open documents, quit all other open programs, and restart your computer.

If this doesn't solve your problem, return to “Problems” on page 7.

Make sure your computer is getting power.

- Check that the keyboard and mouse cables are properly connected. Unplug each cable, then reconnect them.
- Check that the power cord is plugged into a working outlet. If it's plugged into a power strip, make sure the power strip is turned on.

If this doesn't solve your problem, return to “Problems” on page 7.

Make sure the screen is properly adjusted.

- Check that the settings for brightness, contrast, and geometry are adjusted properly in the Monitors & Sound control panel.

If this doesn't solve your problem, return to “Problems” on page 7.

Make sure external devices are properly connected and turned on.

- Make sure connectors are plugged in all the way. Try unplugging connectors on all of the devices, then plugging them back in.
- If the device has a power cord, make sure the cord is plugged into a working electrical outlet.
- Make sure the device is turned on.
- If you are connected to an Ethernet network:
 - Check the settings in the AppleTalk control panel to make sure that Ethernet is selected.
 - Your computer may not start up because of heavy network traffic. Disconnect the Ethernet cable, then start up again. Reconnect the Ethernet cable after the computer starts up. (It's okay to connect and disconnect an Ethernet cable while your computer is on.)

For USB devices:

- Plug the device into another USB port on your computer or into the USB port on another device that is plugged into a power outlet (such as a self-powered hub).
- If the device is connected to a hub, try unplugging one or more devices from the hub.
- If the device is connected to a self-powered hub (a hub that has a power cord), make sure the cord is plugged into a working electrical outlet.
- Unplug all USB devices from your computer except the Apple USB keyboard and Apple USB mouse. Plug one device in at a time to determine which device is the problem, then refer to the documentation that came with the device. Also see the information on connecting equipment in the online documentation that came with your computer.
- If you suspect a mouse problem, clean your Apple USB mouse as described in the online documentation that came with your computer. Then, plug the mouse into an open USB port on your computer. If the mouse works, then you may have a problem with the keyboard. If the mouse doesn't work, borrow an Apple USB mouse from another computer and connect it to yours. If that solves the problem, you may need to repair your mouse. Consult an Apple-authorized service provider.
- If you suspect a keyboard problem, borrow an Apple USB keyboard from another computer and connect it to yours. If that solves the problem, you may need to repair your keyboard. Consult an Apple-authorized service provider.

For non-USB devices:

- Shut down your computer by pressing the power button (⏻) on your Apple USB keyboard or on the front of the computer. When a dialog box appears, click Shut Down. Make sure all external devices are properly connected, make sure connectors are plugged in all the way, and turn on the devices. Then restart your computer.

- If that doesn't solve your problem, shut down your computer again. Turn off and disconnect all external equipment, except your keyboard and mouse. Then restart the computer. To determine which piece of equipment may be causing the problem, reconnect one device, start up your computer, and make sure the device is operating correctly. Then shut down the computer. Continue reconnecting devices one at a time, starting up, verifying the devices work, and shutting down until you determine which device is causing the problem. Then refer to the documentation that came with that device, as well as the information on connecting equipment in the online documentation that came with your computer.

If this doesn't solve your problem, return to "Problems" on page 7.

Check RAM disk settings in the Memory control panel.

If you're using a RAM disk and you see a disk corruption message at startup, click Cancel to close the message. Check the RAM disk settings in the Memory control panel to make sure that you aren't trying to create a RAM disk larger than the amount of free space on your hard disk.

If this doesn't solve your problem, return to "Problems" on page 7.

Increase the memory available for system software.

If you're having trouble starting up your computer, there may not be enough memory to load all the system software extensions you've installed. Restart the computer, holding down the Shift key until you see the message "Extensions Disabled" in the "Welcome to Mac OS" box.

Then try the following:

- Turn on (or increase) virtual memory in the Memory control panel. Your computer will perform well with virtual memory set to no more than twice the amount of RAM in the computer; for best performance, limit virtual memory to 1.5 times the amount of RAM.
- Reduce the size of the disk cache in the Memory control panel.
- If you use a RAM disk, reduce its size or turn it off in the Memory control panel.
- Use the Extensions Manager control panel to turn off extensions you don't need. (You can use the Extensions Manager to create different sets of extensions for special situations.)

You need to restart the computer for these changes to take effect. See Mac OS Help (available in the Help menu) for more information about using virtual memory, a RAM disk, and the Extensions Manager.

If the problem persists, try performing a clean installation of system software. See Chapter 5, "Reinstalling Your Computer's Software."

If none of these suggestions work, install additional memory, or RAM, in your computer. See the online documentation that came with your computer for instructions on how to do this.

If this doesn't solve your problem, return to "Problems" on page 7.

Reset the window display.

There may be a problem with the display of the windows. Restart the computer and hold down the Option key until the desktop icons appear. When the desktop appears, all windows will be closed.

If this doesn't solve your problem, return to "Problems" on page 7.

Re-bless the System Folder.

If your computer is not recognizing the system software, the System Folder may need to be "re-blessed." This helps the computer recognize which System Folder to use.

- 1** Start up your computer from the software install CD.
See Chapter 3, "Starting Up From a CD."
- 2** Open the System Folder.
- 3** Double-click the System suitcase.
- 4** After the System suitcase opens, close the suitcase and System Folder windows and restart your computer.

If this doesn't work, then try the following:

- 1** Drag the System suitcase and Finder out of the System Folder.
- 2** Close the System Folder.
- 3** Put the System suitcase and Finder back into the System Folder.

If this doesn't solve your problem, return to "Problems" on page 7.

Make sure you're using the correct disk as a startup disk.

At least one disk drive must have system software on it from which the computer can start up. Most computers have an internal hard disk that is used as the startup disk. You can also use the software install CD to start up your computer.

- Make sure the correct disk is selected in the Startup Disk control panel.

- If your computer is trying to start up from a CD that is not a startup CD (it has no system software on it), press the Open button on your CD-ROM drive, carefully pull out the tray, and remove the disc. Gently push the tray in and restart your computer.

Note: If your computer started up from a CD, the disc will not be automatically ejected when you shut down. Restart the computer while pressing the Open button on the drive. The tray should open so you can remove the disc. If the tray won't open, see the next section, "CD disc is jammed.."

CD disc is jammed.

If a CD disc is jammed, shut down your computer. Locate the small hole near the disc drive's opening, and carefully insert the end of a large straightened paper clip. Push gently until the CD tray opens, then pull out the tray and remove the disc. Do not use excessive force.

If this doesn't solve your problem, return to "Problems" on page 7.


Resolve system extension conflicts.

If your computer does not start up properly or behaves erratically, you may have an extension or control panel that is not compatible with another extension or control panel, or with an application or system software.

Verify the problem

To verify that you have a compatibility problem:

- 1 Start up your computer while holding down the Space bar.
This opens the Extensions Manager control panel.
- 2 Release the Space bar when the Extensions Manager control panel opens.

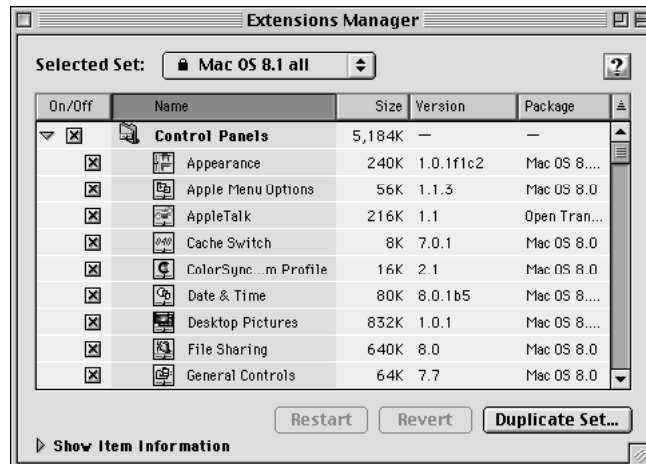

- 3 Notice the name of the currently selected set of extensions in the Selected Set pop-up menu so that you can return to it later if you want.
- 4 Open the Selected Set pop-up menu and choose the “Mac OS 8.1 base” set.
This makes the computer start up using only the software installed at the factory.
- 5 Click the Continue button to continue startup.
- 6 When the computer is ready, try the same actions that caused the problem.
If the problem no longer occurs, you probably have one or more extensions or control panels that don’t work with Mac OS 8.1. Continue with the steps that follow in “Test Individual Extensions and Control Panels.”

Test individual extensions and control panels

- 1 Restart your computer while holding down the Space bar.
- 2 Release the Space bar when the Extensions Manager control panel opens.
- 3 Click the Duplicate Set button to create a new set. In the window that appears, type a name for the set (for example, “Test Set”) and click OK.
- 4 Turn off all the extensions in the new set by choosing All Off in the Edit menu.
- 5 Turn on the item you want to test by clicking its checkbox.
- 6 Click the Continue button to continue startup.
- 7 Try the same actions that caused the problem.

If the problem occurs again, the item is probably incompatible. Remove the item from the Extensions folder or turn the item off using the Extensions Manager.

- 8 Repeat steps 1 through 7 for each item you want to test.

If you find that a piece of software is incompatible, contact the manufacturer of the software to see if an updated version is available.

Tip: A recently installed extension or control panel might be the problem. If you have a lot of extensions and control panels, you may want to “work by halves.” Turn on half the extensions and control panels and test for the problem. If the problem disappears, repeat the process turning on half of the remaining items. If the problem persists, repeat the process turning off half of the items that are turned on. Continue to work by halves like this until you locate the conflicting extensions or control panels.

If this doesn’t solve your problem, return to “Problems” on page 7.

Reset the PRAM.

Your computer stores information in an area of memory called parameter RAM (PRAM). Resetting the PRAM replaces the information stored there with the default (original) settings.

Important Some system preferences are stored in PRAM. Third-party software programs may also store information in PRAM. When you reset the PRAM, some of these preferences are lost. Make sure you make a note of the settings before you reset PRAM.

Resetting PRAM may affect the settings in some of your control panels, including the following:

- Date & Time
- Memory (information lost includes RAM disk settings)
- Monitors & Sound
- Keyboard and Mouse (or Trackpad)
- AppleTalk (“Connect via” is set to the Ethernet port)
- Map

Note: You may also have to restore modem settings in any communications software programs you are using.

Follow these steps to reset the PRAM:

Important Make sure you are using an Apple USB keyboard. This procedure may not work with some USB keyboards from manufacturers other than Apple.

- 1** Make sure the Caps Lock key is not engaged.
- 2** Restart your computer and *immediately* press and hold the Command (⌘), Option, P, and R keys.
- 3** Hold the keys down until you hear the startup sound a second time, then release the keys.
- 4** If you had special settings in any control panels or applications, open those control panels or applications to restore the settings you want.
- 5** If you set preferences for a modem, open the communications software program you are using and restore any modem settings.

If this doesn't solve your problem, return to “Problems” on page 7.

Make sure memory is installed correctly.

If you hear one or more beeps, there may be a problem with the memory in your computer. If you recently installed RAM in your computer, check the installation instructions in the online documentation that came with your computer to make sure it is properly installed. Make sure you've used the proper type of RAM for your computer.

If this doesn't solve your problem, return to "Problems" on page 7.

Replace the computer's backup battery.

If you have intermittent problems starting up your computer and the date is reset, replace the battery. See the online documentation that came with your computer for instructions on how to do this.



Important Batteries contain chemicals, some of which may be harmful to the environment. Please dispose of used batteries according to your local environmental guidelines.

Replacing the battery may affect the settings in some of your control panels, including the following:

- Date & Time
- Memory (information lost includes RAM disk settings)
- Monitors & Sound
- Keyboard and Mouse (or Trackpad)
- AppleTalk ("Connect via" is set to the Ethernet port)
- Map

Make sure you make a note of the settings before you replace the battery.

Note: You may also have to restore modem settings in any communications software programs you are using.

If this doesn't solve your problem, return to "Problems" on page 7.

Test and repair the hard disk directory.

Follow the instructions in Chapter 4, “Testing and Repairing Your Hard Disk Directory.”

If this doesn't solve your problem, return to “Problems” on page 7.

Reinstall system software.


Follow the instructions in Chapter 5, “Reinstalling Your Computer's Software.”

If this doesn't solve your problem, return to “Problems” on page 7.


Where to Find Onscreen Help

Mac OS Help

Step-by-step instructions for using the Mac OS are available from Mac OS Help.

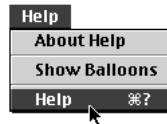

To open the help system, choose Help from the Finder's Help menu.

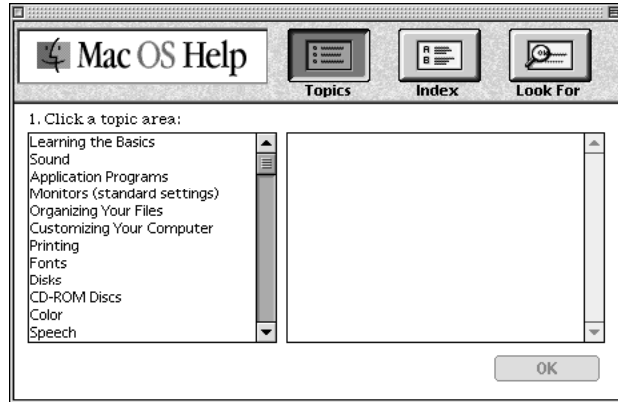


Mac OS Info Center

The Mac OS Info Center contains information about your computer and the Mac OS, including troubleshooting information.



Double-click the Mac OS Info Center icon on the desktop to open the Info Center.

Click this button to see the online user's manual.

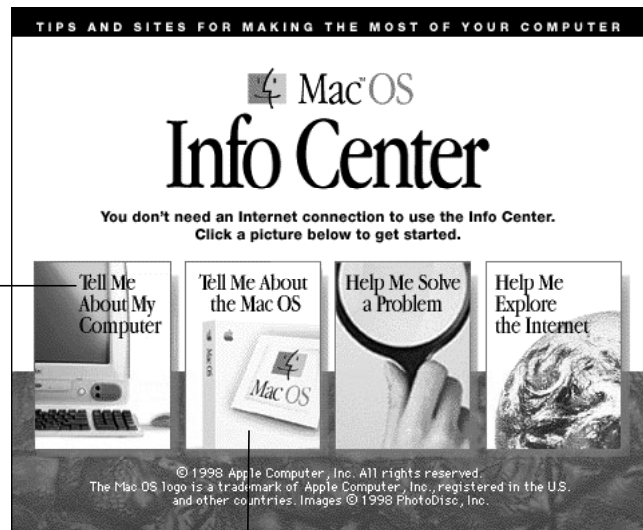


Click this button to see troubleshooting information and information on Apple's online support Web sites.

Problems Using Your Computer

Problems With Applications, Documents, and Memory

Message appears saying there's not enough memory.

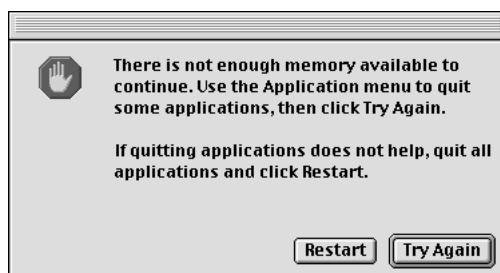

All the memory in your Macintosh is in use by other application programs, system software, and system resources.

- Quit other open programs to free memory, then open the program you want to use.
Note: Make sure you have quit other applications, not just closed their open documents. To quit an application, open the application menu at the far right of the menu bar and choose the application name to make the application active. Then open the File menu and choose Quit.
- Follow these steps to allocate more memory to the program:
 - 1 Choose About This Computer from the Apple () menu. Take note of the number in the Largest Unused Block section. This number tells you how much memory is available to open programs.
 - 2 Quit the program if it's open, select its icon, and choose Get Info from the File menu. Take note of the numbers in the Minimum Size and Preferred Size boxes.

3 If the number in the Minimum Size box is larger than the largest unused block, not enough memory is available to use this program. To free memory, quit open programs or restart the computer. You can also type a smaller number in the Minimum Size box if you want to open the program using less memory. But some programs don't work well if you assign them less memory.

4 If the number in the Preferred Size box is smaller than the largest unused block, you may need to assign more memory to the program. (A program may need more memory if you are working with complex documents.) Type a larger number in the Preferred Size box. (Try increasing the number in increments of 200.)

- Use the Memory control panel to reduce the size of the disk cache, remove or reduce the size of your RAM disk, or turn on virtual memory. For more information, use Mac OS Help (choose Help from the Finder's Help menu).

Note: If you have both virtual memory and a RAM disk turned on in the Memory control panel, don't set both of them at or near their maximum values. Doing so can result in unpredictable or reduced performance by your computer. (A RAM disk uses random-access memory, or RAM, as if it were a hard disk.)


- Turn off system extensions that you don't need using the Extensions Manager control panel. See the information about the Extensions Manager control panel in Mac OS Help (choose Help from the Finder's Help menu).
- If you have installed system software additions from the Apple Extras folder, you may want to remove them if you are not using them. (This software can decrease the amount of memory available for use by application programs.) To remove a system software addition, run the system software Installer. Follow the steps for a custom installation (one of the choices is to Add/Remove software). For more information, see Chapter 5, "Reinstalling Your Computer's Software," on page 53.
- If you frequently want to open more programs than memory allows, you may want to install more random-access memory (RAM). See the online documentation that came with your computer.

Computer freezes.

- Your computer may be trying to complete a task, but it's taking so long that it seems that the screen has frozen. If you need to do something else instead, try simultaneously pressing the Command (⌘) key and the period key (.) to cancel the task the computer is working on.
- There may be a temporary software problem that can be fixed by restarting your computer. See "Restart the computer." on page 12.

If the problem recurs, it may involve one or more of your application programs. See the next entry for additional suggestions.

Software quits unexpectedly.

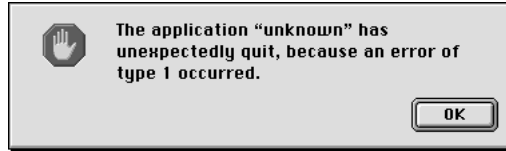

The application program needs more memory, or there is a software problem.

- Write down what you were doing when the message appeared, and write down the text of the message. This information may help a technical support representative diagnose your problem if you later need to contact Apple or the manufacturer of the application program.

About the codes in error messages: The number codes in error messages are used in software development. Sometimes they can help a technician narrow down the source of a problem.

- Restart your Macintosh. (See “Restart the computer.” on page 12.) Most software problems are temporary, and restarting the computer usually corrects the problem.
- Check for multiple System Folders on your startup disk, using the Find File command. If you have more than one System Folder, throw away the current System Folder. The System Folder that your computer is using has the Mac OS icon on it, which distinguishes it from any other System Folder.



System Folder

Try re-blessing another System Folder so that your computer uses that one on startup (see “Re-bless the System Folder.” on page 16). If that doesn’t work, try reinstalling system software (see Chapter 5, “Reinstalling Your Computer’s Software,” on page 53.)

- Check for viruses on all your disks, using a virus-detection program. Eliminate any viruses the program finds.
- Use the program’s Get Info window to give it more memory. (Select the program’s icon and choose Get Info from the File menu.) See “Message appears saying there’s not enough memory.” on page 23.
- If the problem occurs when you are trying to print, there may not be enough memory for printing. Quit other open programs to free memory.
- If the problem only occurs in one application program, check for multiple copies of the program on your hard disk. Use the Get Info command to check the programs’ version numbers. Keep one copy of the latest version and throw away all other copies.

Also, try reinstalling the program from the original disks. If reinstalling doesn't solve the problem, contact the manufacturer of the program to see if the program contains software errors or "bugs" and if it is compatible with the version of system software you're using.

- Sometimes incompatible system extensions or control panels can cause system software problems. Restart while holding down the Shift key; this temporarily turns off all system extensions.

If your computer works normally after you do this, use the Extensions Manager control panel (in the Control Panels folder in the Apple [🍏] menu) to turn on extensions and control panels one at a time. Restart after you turn on each extension or control panel. This procedure should identify incompatible extensions and control panels. (If you just added new software to your computer, its system extension is the most probable cause of the problem.) See "Resolve system extension conflicts." on page 17.

If your computer performs better when a particular extension or control panel is turned off, contact the software's manufacturer for information or an upgrade.

- Reduce the number of active fonts in your system by moving fonts from the Fonts folder to another folder [such as "Fonts (Disabled)"]. Then restart your computer.
- If the problem recurs, you may need to reinstall system software. See Chapter 5, "Reinstalling Your Computer's Software," on page 53.

Application won't open.

- The application program may already be open. Check the Application menu to see which programs are running.
- There may not be enough memory available to open the program. Quit any programs you're not using and try again. If that doesn't work, try restarting the computer.

You can also use virtual memory to make more memory available to your programs. You turn on virtual memory in the Memory control panel. See the information about the Memory control panel in Mac OS Help (choose Help from the Finder's Help menu).

- The program isn't requesting as much memory as it needs. Use the program's Get Info window to give it more memory. See "Message appears saying there's not enough memory." on page 23.
- The program may be damaged, or it may not be compatible with Power Macintosh technology. Check to make sure the software is PowerPC-compatible. (See the program's documentation, or contact the manufacturer or vendor.) Make sure you install the software from a known good source (such as the original program disks).
- Check that the program is compatible with the version of system software that you are using. (See the program's documentation, or contact the manufacturer or vendor.)
- You may need an updated version of the software. Contact the software manufacturer for more information.

Application won't open because a file can't be found.

Macintosh programs designed specifically for the PowerPC microprocessor (also called “native” applications) use special files called “shared libraries.” Any necessary shared libraries should be installed automatically when you install these special Macintosh programs.

Follow the directions that came with your program to reinstall it. If the shared library is still missing, contact the software program's manufacturer for assistance.

Document won't open, or application program can't be found.

The document may have been created with a program that is not on your hard disk, or with a different version of the program.

- Try starting a program that you think might be able to open the document. Then choose Open from the program's File menu to open the document. For more information, see the documentation that came with the program.
- Purchase and install the correct software to use the document, or find out if the creator of the document can convert it to a format that one of your programs can use.
- Rebuild your desktop. To rebuild the desktop, hold down the Command (⌘) and Option keys on the keyboard while you restart the computer. Hold down the keys until a dialog box appears asking if you want to rebuild the desktop. Click OK.
- Don't try to open the files in your System Folder. Most of the files in your System Folder are used by your computer for internal purposes and are not intended to be opened.
- If the document is from a DOS or Windows computer, see “DOS or Windows document won't open, or displays incorrectly.” on page 28.

Document can't be saved.

- A CD-ROM disc is a read-only medium. This means that information can be read (retrieved) from it, but not written (stored) on it. You can save the changed information on a hard disk.

“QuickDraw 3D could not be found” message appears.

- Make sure that the following files are in the Extensions folder, inside the System Folder:
 - QuickDraw 3D
 - QuickDraw 3D RAVE
 - QuickDraw 3D Viewer
 - QuickDraw 3D IR

If the files are there and you still get the message, it means that you don't have enough memory to run the application. You may be able to open the application if you try one or more of the following:

- Quit other open applications.
- Reduce the amount of memory allocated to the application:
 - 1 Select the application's icon in the Finder.
 - 2 Choose Get Info from the File menu.
 - 3 Type a lower number in the box for Preferred Size.
- Install more memory (RAM).

DOS or Windows document won't open, or displays incorrectly.

If you can't open a DOS or Windows document by double-clicking its icon, try one of the following:

- Open the document from within the program by choosing Open in the program's File menu.
- Use the PC Exchange control panel (in the Control Panels folder in the Apple [🍏] menu) to specify which Macintosh program will open the document.

If a DOS document is displayed incorrectly, or you see strange codes or characters in the document, try one of the following:

- Your application program may have special procedures for opening and saving documents with different file formats. See the information that came with your program, or call the program's publisher.
- Try opening the document in another program.

Note: Some characters that can be displayed on the Macintosh are not accurately displayed on DOS computers.

See information about working with DOS or Windows documents on your Macintosh in Mac OS Help (choose Help from the Finder's Help menu).

Can't throw away a file.

- The file may be locked. From the Finder, select the file's icon, choose Get Info from the File menu, and click the Locked checkbox to remove the X. You can delete locked files that are in the Trash by holding down the Option key while you choose Empty Trash from the Special menu.
- An application program may be using the file. Close the file or quit the program.
- The file may be in a shared folder that can't be changed. You can throw away the file by turning off file sharing temporarily (click Stop in the File Sharing control panel). Or you can select the shared folder, choose Sharing from the File menu, and uncheck the box labeled either "Can't be moved, renamed, or deleted" or "Same as enclosing folder."

Older Macintosh programs don't work properly.

- Some older Macintosh programs are not completely compatible with Macintosh computers that have the PowerPC microprocessor or Mac OS 8.1. Contact the program's publisher to see if an upgrade is available.

Window disappears.

- Another window may be covering the one you're looking for. Move, resize, close, or hide windows until you see the one you want.
- The program the window is associated with may be hidden. Choose Show All from the Application menu and then click the window you want, or choose the program from the Application menu.

Can't quit program opened from Launcher.

Some programs in the Learning section of the Launcher (when you press the Learning category button) are self-running demos. If you can't get out of one of the programs or demos, try the following:

- Look again to see if you can find a Quit button or other quitting option.
- Hold down the Command (⌘) key on your keyboard and, while holding it down, press the period (.) key.
- While holding down the Command (⌘) key on your keyboard, press the Q key.
- Press the power button (⏻) on your Apple USB keyboard or on the front of your computer, then press Return to shut down the computer.
- Restart your computer by holding down the Command (⌘) and Control keys while you press the power button (⏻) on your Apple USB keyboard or on the front of the computer.

Problems With Hard Disks, CDs, and Other Storage Media

Problems With Hard Disks

Only one document called "Where have all my files gone?" appears on the hard disk.

If no files appear on the hard disk except for a single document called "Where have all my files gone?", you started up your computer from a CD with system software earlier than Mac OS 8.1. To see the contents of your disk, you must start up your computer from a disk with Mac OS 8.1 (or later).

Can't mount Mac OS, DOS, or ProDOS partitions.

- Use PC Exchange to mount these partitions as individual volumes on the desktop. (PC Exchange is a control panel that is part of system software.)

Note: If the disk contains both Mac OS and DOS-format partitions, PC Exchange will recognize only the Mac OS partition.

Can't resize Mac OS, DOS, or ProDOS partitions.


- To resize or reformat multiple Mac OS, DOS, or ProDOS partitions, you need to use third-party software designed for partitioning hard disks and removable media cartridges.

Problems With CD Drives and Discs**CD disc is jammed.**

The normal way to remove a CD disc from your computer is to drag the disc's icon on the desktop to the Trash. You can also select the disc's icon and choose Eject from the Special menu. Removable discs are usually ejected when you shut down your computer.

Warning Turn off your computer before you attempt to remove a jammed disc. If you don't, you may damage the CD-ROM drive.

If a disc is jammed, shut down your computer. Locate the small hole in the middle of the CD-ROM disc drive tray, and carefully insert the end of a large straightened paper clip. Push gently until the disc is ejected. Do not use excessive force.

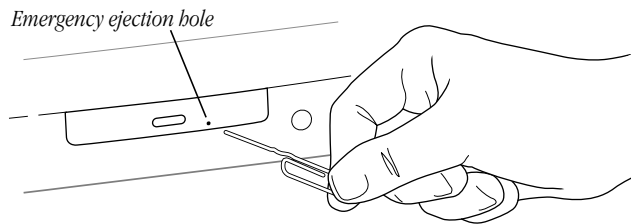**Icon doesn't appear on desktop.**

- Make sure that the disc label is facing up and the disc is centered in the tray.
- Make sure the tray is closed all the way.
- Try restarting your computer.
- Make sure that the Apple CD-ROM and Foreign File Access extensions are turned on in the Extensions Manager control panel. Then restart your computer.

- Try starting up your computer from the system software CD that came with your computer. Insert the CD and restart while holding down the C key. (See Chapter 3, “Starting Up From a CD,” on page 45.) If only the hard disk icon appears on the desktop, then there may be a hardware problem with your CD-ROM drive. If the CD-ROM disc icon appears above the hard disk icon, reinstall your CD-ROM software. The easiest way to do this is by reinstalling your system software. See Chapter 5, “Reinstalling Your Computer’s Software,” on page 53.
- The disc may use a format that the Macintosh cannot recognize. Ask the disc’s manufacturer for a disc that a Macintosh can recognize.

Disc is vibrating in the drive.

- Make sure the disc is centered in the tray.
- Some CD-ROM disc labels have artwork that is noticeably thicker on one side than the other and can cause the disc’s weight to be slightly off-center. This uneven distribution of weight coupled with the high rotation speed of your CD-ROM drive can cause some discs to wobble in the drive and make your computer vibrate. The vibration does not damage the CD-ROM disc or the computer and affects very few CD-ROM discs. If you can feel or hear that the CD-ROM disc is vibrating in the computer, you don’t need to do anything special; continue to use the CD-ROM disc as you normally would.

Note: If you use a CD-ROM disc with a removable (sticky) label, remove the label before inserting the disc.

Tray won’t open.

If a CD-ROM disc icon appears on your screen:

- Select the disc icon and choose Put Away from the File menu, or drag the icon to the Trash.

Note: You won’t lose information on the CD by dragging its icon to the Trash.

If the AppleCD Audio Player is active, choose Eject CD from the File menu or click the eject button in the AppleCD Audio Player controller.

If you see a message that a disc can’t be put away because it is being shared, turn file sharing off in the File Sharing control panel in the Control Panels folder, available in the Apple () menu.

If no CD-ROM disc icon appears on your screen:

- Restart your computer. Immediately after you hear the startup sound, press the Open button on your CD-ROM drive.
- The signal to open the tray may not be reaching the computer. Manually remove the disc, as described in the online documentation that came with your computer.

If neither of these suggestions works, your CD-ROM drive may be damaged. Contact an Apple-authorized service provider or Apple for further assistance.

Can't eject disc.

- If file sharing is on and you are having trouble ejecting a disc, turn file sharing off in the File Sharing control panel in the Control Panels folder, available in the Apple (🍏) menu.

"This is not a Macintosh disk: Do you want to initialize it?" message appears.

- Make sure that the Foreign File Access extension is installed and turned on. Use the Extensions Manager control panel in the Control Panels folder in the Apple (🍏) menu to turn it on, then restart your computer.
- Make sure the CD-ROM software is installed. (The CD-ROM software is already installed on Macintosh computers that come with CD-ROM drives.) The easiest way to install CD-ROM software is by reinstalling your system software. (See Chapter 5, "Reinstalling Your Computer's Software," on page 53.) Restart your computer after reinstalling system software.
- The disc may use a format that the Macintosh cannot recognize. Ask the disc's manufacturer for a disc that a Macintosh can recognize.

Computer ejects disc unexpectedly.

- Make sure the disc is lying flat in the tray and the disc label is facing up.

Important If you're using a small (8 cm) disc, make sure it's centered within the tray's inner ring and the computer is absolutely level. An improperly seated small disc in your computer may result in damage to the disc, the CD-ROM drive, or both.

- The disc may need to be cleaned. (See the online documentation that came with your computer.) If there are visible scratches on the shiny side of the disc, you may be able to remove them with a CD-ROM disc polishing kit (available from your audio CD dealer). If the scratches can't be removed, you need to replace the disc.
- The disc may be damaged. Try another disc in the drive, and try the original disc in another drive. If the original drive reads other discs or if the original disc also doesn't work in another drive, the disc is probably damaged. You need to replace it.

Problems Using ISO 9660 or High Sierra Discs**Files can't be opened.**

- Discs in the ISO 9660 and High Sierra disc formats have version numbers attached to file names. Some application programs need these version numbers in order to work with files. To make the version numbers available to programs on your computer, drag the CD-ROM disc icon to the Trash. When the tray opens, hold down the Option key and push the tray back in. Continue to hold down the Option key until the disc is mounted in the drive. The program you are using should now be able to locate file names on that CD-ROM disc.

- Make sure that the Foreign File Access, ISO 9660 File Access, and High Sierra File Access files are present in the Extensions folder in the System Folder on your hard disk. If these files are not present, reinstall your CD-ROM software. The easiest way to do this is by reinstalling your system software. See Chapter 5, “Reinstalling Your Computer’s Software,” on page 53.

Problems Using Photo CDs

Icon doesn’t appear on desktop.

- Reinstall the CD-ROM and QuickTime software. The easiest way to do this is by reinstalling your system software. See Chapter 5, “Reinstalling Your Computer’s Software,” on page 53.

Color icons for individual images don’t appear.

- Your computer may be low on memory. To view color icons, restart your computer and then reopen the Photos folder. See Mac OS Help (choose Help from the Finder’s Help menu).

Image is scrambled, colors are displayed incorrectly, or no image appears.

- The program you are using may not be designed to work with large (high-resolution) image files. You can open the image with another program or you can assign more memory to the program. See Mac OS Help (choose Help from the Finder’s Help menu).

System “freezes,” or “bomb” message appears.

- Restart your Macintosh. (If you need help restarting your computer, see Chapter 1, “Problems Starting Up.”) The program you are using may not be designed to work with large (high-resolution) image files. You can open the image with another program or you can assign more memory to the current program. See Mac OS Help (choose Help from the Finder’s Help menu).

Problems Playing Audio CDs

See “Problems With Sound and Video” on page 41.

Problems With USB Devices

Message appears saying the device can’t operate because it needs more power than is available.

- If the device has a power cord, make sure the cord is plugged into a working electrical outlet.
- Plug the USB cable from the USB device into a USB port on your computer or another USB device that is plugged into a power outlet.

- If the device is connected to a USB hub, do the following:
 - If the hub has a power cord, make sure the cord is plugged into a working electrical outlet.
 - Try unplugging one or more devices from the hub.

Message appears saying a device may not provide all of its functions because it requires more power.

- If the device has a power cord, make sure the cord is plugged into a working electrical outlet.
- Plug the USB cable from the USB device into a USB port on your computer or another USB device that is plugged into a power outlet.
- If the USB device is connected to a USB hub, try unplugging one or more devices from the hub.

Message appears saying a device plugged into another device needs more power than is available and all ports on the second device have been disabled.

- If the device has a power cord, make sure the cord is plugged into a working electrical outlet.
- Plug the USB cable from the USB device into another USB port on your computer or another USB device that supplies power (such as a hub).
- If the device is connected to a USB hub, try unplugging one or more devices from the hub.

The device isn't working, but no message appears.

- Make sure the USB connectors are plugged in properly.
- If the device has a power cord, make sure the cord is plugged into a working electrical outlet and the device is turned on.
- Some USB devices, such as printers, need to warm up for a few minutes after you turn them on. For more information, see the documentation that came with your device.
- Make sure you've installed the necessary software to use the device.

USB devices use software called “drivers” that allow your computer to check the device when it's connected to make sure it gets enough power and speed. Some software drivers are already available on your computer in the Mac OS. However, with some devices, you may need to install the software drivers. For more information, see the documentation that came with your USB device.

- If you suspect a mouse problem, clean your Apple USB mouse as described in the online documentation that came with your computer. Then, plug the mouse into an open USB port on your computer. If the mouse works, then you may have a problem with the keyboard. If the mouse doesn't work, borrow an Apple USB mouse from another computer and connect it to yours. If that solves the problem, you may need to repair your mouse. Consult an Apple-authorized service provider.

- If you suspect a keyboard problem, borrow an Apple USB keyboard from another computer and connect it to yours. If that solves the problem, you may need to repair your keyboard. Consult an Apple-authorized service provider.
- Make sure the cables on your device are not damaged or frayed. If so, contact the manufacturer of the device or see the documentation that came with the device.

For more information

- To find out more about USB and your computer, see the online documentation that came with your computer.
- To find out more about your USB device, see the documentation that came with the device.

Problems Printing

If you're using a USB printer, see also "Problems With USB Devices" on page 33.

Note: Also refer to the documentation that came with the printer.

- Check your printer settings in the Chooser (in the Apple [🍏] menu), making sure you have selected the correct printer.
- Turn off the computer and printer and check the printer cable connections.
- If none of these suggestions solves the problem, you may need to reinstall the printer software that came with your printer. Refer to the documentation that came with your printer.

Can't print, or error message appears.

- There may not be enough memory for printing. Try the following:
 - Try quitting other open applications.
 - Immediately after sending the Print command, quit the application you're printing from to free memory for printing.
 - Increase the amount of memory for the desktop printer icon; select it, choose Get Info from the File menu, and type a larger number in the Preferred Size box.
 - Reduce the amount of memory used by the application you're printing from.
 - If your document uses lots of fonts, choose Page Setup from the File menu. Make sure you have selected "Unlimited Downloadable Fonts" under PostScript™ Options. If that doesn't work, use fewer fonts in the document.
 - If the document contains complex graphics, remove some of the detail from the images.
 - Don't use background printing.
- Make sure the printer is turned on. Some printers need to warm up for a few minutes after you turn them on.

- The printer may be out of paper or may need attention. Check the printer status lights and any messages on your screen.
- Open the desktop printer icon and check for status messages.
- Print a detailed report. (In the Print dialog box, select “Print detailed report” under Error Handling.)
- Reinstall your printer software.
- Check the settings in the application’s Page Setup dialog box. If there is a setting for “printer type,” make sure it is set to the type of printer you are using.

Performance and Other Problems

Performance decreases.

- If you notice a decrease in your computer’s speed and general performance after you install a control panel or system extension, the software may not be compatible either with Macintosh computers built with the PowerPC microprocessor or with other system extensions. See “Resolve system extension conflicts,” on page 17. You may also need updated software. Contact the software manufacturer for more information.
- Use the Memory control panel to turn off virtual memory. See the information about memory in Mac OS Help (choose Help from the Finder’s Help menu).

Note: If you turn on both virtual memory and a RAM disk in the Memory control panel, don’t set both of them at or near their maximum values. Doing so can result in unpredictable or reduced performance by your computer. (A RAM disk uses random-access memory, or RAM, as if it were a hard disk.)

- If you still do not notice an improvement, you may want to reinstall system software on your startup hard disk. See Chapter 5, “Reinstalling Your Computer’s Software,” on page 53.
- If you typically use several application programs at the same time, your computer’s performance will increase if you install more random-access memory (RAM). See the online documentation that came with your computer.
- Remove unused fonts from the Fonts folder in the System Folder.
- Test and repair the hard disk. See Chapter 4, “Testing and Repairing Your Hard Disk Directory,” on page 47.

Computer isn’t performing well.

If, after trying the tips in the previous section, your computer still isn’t performing as fast as you’d like, try these suggestions. Each one will make only a small difference in your computer’s speed, but if you try them all, you’ll notice the improvement.

- Open the Memory control panel in the Control Panels folder in the Apple (🍏) menu; then make these changes:
 - In the Disk Cache section, increase the Cache Size slightly. (Because the amount of memory available for opening programs decreases as you increase the size of the cache, do not set the Cache Size too high.)
 - In the Virtual Memory section, click Off if you haven't already done so.
- Open the Keyboard control panel in the Control Panels folder; then make these changes:
 - Set the Key Repeat Rate to Fast.
 - Set the Delay Until Repeat to Short.
- If you don't need to see thousands or millions of colors on the screen, reduce the color depth. Open the Monitors & Sound control panel in the Control Panels folder; then select 256 in the Color Depth section.
- Increase the speed of mouse tracking. Open the Mouse control panel in the Control Panels folder; then set Mouse Tracking to Fast.
- Make sure your computer is not calculating folder sizes. Choose View Options in the View menu. Make sure the checkbox next to "Calculate folder sizes" is *not* selected.

Note: "Calculate folder sizes" is only available when "as List" is selected in the View menu.
- Test and repair the hard disk. See Chapter 4, "Testing and Repairing Your Hard Disk Directory," on page 47.

3D rendering doesn't seem to be accelerated.

The performance advantage of any 3D accelerator depends on the type of scene being rendered. Some applications may show the benefits of acceleration more than others.

Check the following items:

- Set your screen to a lower resolution (the lowest resolution is 640 x 480) and reduce the number of colors. The online documentation that came with your computer may provide additional information about the video modes (resolution and color depth) that support 3D acceleration.
- Make sure that your application uses QuickDraw 3D. Some older 3D applications don't use QuickDraw 3D for rendering, and cannot be accelerated.
- If the Control Strip is overlapping or touching the 3D window, hide the Control Strip or move the window.
- Some applications allow you to turn hardware acceleration on or off. Check your application's documentation to be sure that hardware acceleration is turned on.
- Check that the following files are in the Extensions folder, which is in the System Folder:
 - ATI 3D Accelerator
 - ATI Graphics Driver

- ATI Video Memory Manager

Note: If these files are missing, you need to reinstall system software in order to have them on your computer.

- Turn off virtual memory. (Apple recommends turning off virtual memory whenever you use 3D applications.) Open the Memory control panel, click the Off button in the Virtual Memory section of the control panel, and restart your computer.

Right-angle bracket prompt (>) appears.

Your computer has tried to launch a “debugging” application (perhaps you inadvertently pressed the Command (⌘) and Power keys at the same time), but could not find one on your hard disk. Debugging applications are programs that software developers use to locate and fix problems in computer code. If you do not have a debugging application installed, your screen displays a right-angle bracket prompt (>). To return to the desktop or your application, type G and then press Return.

Clock doesn’t keep time accurately.

If your clock begins to keep time inaccurately, replace the battery. See the online documentation that came with your computer for instructions on how to do this.



Important Batteries contain chemicals, some of which may be harmful to the environment. Please dispose of used batteries according to your local environmental guidelines.

Icons look strange.

- There may be a problem with the information that the computer uses to keep track of files. To fix this problem, rebuild the desktop. Hold down the Command (⌘) and Option keys on the keyboard while you restart the computer.
- You may be using a file-compression program to save space on your hard disk. Some compression programs change the appearance of icons.

Font file can’t be opened or moved.

- The font file may be damaged. Replace the font in the Fonts folder (inside the System Folder).

Blinking icon appears in menu bar.

- A program needs attention. Open the menu and choose the program whose icon is blinking (it may have a diamond by its name). Respond to any messages on the screen. If it’s not clear what you should do, consult the documentation that came with the program.
- Open the Easy Access control panel (if it is installed on your computer) and check whether any of its features are turned on.

Computer makes unusual sounds.

- Select a different alert sound in the Monitors & Sound control panel.

- If the sounds are regular or melodic, they may be caused by interference from electrical equipment. Move the computer farther away from any such equipment.
- If you hear one or more beeps, there may be a problem with the memory in your computer. If you recently installed RAM in your computer, check the installation instructions in the online documentation that came with your computer to make sure it is properly installed. Make sure you've used the proper type of RAM for your computer.

Problems With Networks and File Sharing

If you are having problems using the network or file sharing, try the following before attempting further solutions:

- Make sure the network is working by opening the Chooser and checking for the shared disks and printers you usually use. See if other computers on your network have access to network devices.
- Open the AppleTalk and TCP/IP control panels and make sure the settings are correct. See the topic on file sharing in Mac OS Help (choose Help from the Finder's Help menu).
- Make sure that all the network software is installed. The Network and AppleShare extensions should be in the Extensions folder. If you want to use file sharing, the File Sharing control panel should be in the Control Panels folder, and the File Sharing extension should be in the Extensions folder. If any of these items is missing, reinstall the system software. See Chapter 5, "Reinstalling Your Computer's Software," on page 53.
- There may be a physical problem with a cable, connector, hub, or wall jack. Make sure network cables are connected properly. Try substituting equipment that you know is reliable. (You can even try a different computer if one is available.)

Computer you want doesn't appear in the Chooser.

- Make sure the computer you're trying to connect to is turned on.
- Make sure file sharing is active on the computer you're trying to connect to. (That computer's File Sharing control panel should say that file sharing is on.)

Shared disk you want to use is not available.

- You may already be connected to the shared disk. Check for its icon on your desktop.
- You may not have the access privileges you need to use the shared disk. Ask the network administrator or the owner of the shared item to give you access. See the information on file sharing in Mac OS Help (choose Help from the Finder's Help menu).

Can't see any files on remote computer.

- Make sure that files are being shared on the other computer. The File Sharing Monitor control panel on that computer lists the items being shared.

- Make sure you have the access privileges you need to view the files. Ask the network administrator or the owner of the shared item to give you access. See the information on file sharing in Mac OS Help (choose Help from the Finder's Help menu).

File sharing can't be turned on.

- Make sure AppleTalk is turned on in the Chooser.
- Make sure you have at least 400K of space available on your hard disk.
- Some disk-formatting programs don't work with file sharing. If you use such a program, contact the manufacturer or vendor for compatibility information.
- There may be a problem with some of the information your computer uses to start up file sharing. Follow these steps in order until the problem is solved:
 - 1 Open the File Sharing control panel and enter new information in the Network Identity section. Then try again to turn on file sharing.
 - 2 Remove the File Sharing folder from the Preferences folder (inside the System Folder). Then restart the computer and try to turn on file sharing.
 - 3 Reset the PRAM. See "Reset the PRAM." on page 19.
 - 4 Remove the Users & Groups Data File from the Preferences folder (inside the System Folder). Restart the computer.
 - 5 Reinstall system software. See Chapter 5, "Reinstalling Your Computer's Software," on page 53.

Item can't be shared.

- Make sure you have at least 1 MB of space available on your hard disk.
- Some removable storage devices can't be shared. Check with the manufacturer or vendor of the device for more information.
- Some disk-formatting programs don't work with file sharing. If you use such a program, check with the program's manufacturer or vendor.

Can't open a shared disk or folder.

- You may not have the access privileges needed to use the disk or folder. Ask the network administrator or the owner of the shared item to give you access.
- Check with the owner of the item to make sure you are entering your name exactly as the owner specified (including spaces and capitalization) and try again.

You can't remember your Administration password.

- Erase your Administration password (along with all of your AppleTalk settings and configurations) by dragging the AppleTalk or TCP/IP Preferences file (inside the Preferences folder in your active System Folder) to the Trash. When you open the AppleTalk or TCP/IP control panel again, you must reenter all your settings.

Your computer can't connect to devices outside its local network.

- Check that your router address is correct in the TCP/IP control panel.

Your computer can connect to hosts by IP address, but not by name.

- Check the settings in the TCP/IP control panel:
 - Check that you have entered valid domain names in the Additional Search Domains box.
 - If you have entered your local and administrative domain names, double-check to make sure they're correct.
 - Check that the domain name server (DNS) you have selected is actually a DNS server and is operating properly.
- Check with your Internet service provider (ISP) or network administrator if you have questions about configuring the TCP/IP control panel.

Servers: Your computer does not respond to a "ping."

- Check that you have an application open on your computer that uses TCP/IP and can respond to a ping from another computer, and that the correct port is being pinged.
- Check that your TCP/IP configuration is correct.
- Check that the Use 802.3 checkbox isn't selected in the TCP/IP control panel.

Problems With Sound and Video

Can't hear any sound.

- If you have headphones connected to the computer, make sure they are firmly connected. Make sure the volume control on your headphones is not turned down too low.
- If you do not have headphones connected to the computer, make sure that nothing else is plugged into the computer's sound output port (🔊).
- If you are using a CD-ROM disc over a network, you won't be able to hear the audio portion.
- Make sure that the correct sound source is selected in the Monitors & Sound control panel or in the Sound Source module in the Control Strip.
- Make sure the volume is turned up in the Monitors & Sound control panel.
- Make sure the volume is turned up in the AppleCD Audio Player. With the program open, drag the volume control slider up, use the volume controls on your computer, or press the Up Arrow key on your keyboard.
- The CD may have been paused. Click the Play/Pause button in the AppleCD Audio Player.

Audio stops playing when you double-click a CD-ROM disc icon.

- You can't open data files on a CD-ROM disc and listen to audio tracks on it at the same time.

Audio CD begins playing automatically when inserted.

- Your computer is set to automatically begin playing audio CDs when they are inserted. To turn off this feature, use the QuickTime Settings control panel to change the automatic play setting.

Sound comes out of computer's speakers even though headphones are plugged in.

- Plug your headphones into one of the headphone jacks (🎧) on the front of the computer.

Sound in headphones is odd.

- Your computer has **SRS (●)** 3D Surround Sound, which doesn't work well through headphones. To turn it off, open the Monitors & Sound control panel and click the Sound icon. Click to remove the X from the Enabled checkbox.

Can't record from audio CD.

- Check your computer's sound input port to see if a microphone or other device is connected.
- You may need to reset the sound options in the Monitors & Sound control panel. See the information on sound in Mac OS Help (choose Help from the Finder's Help menu).

Can't record with microphone.

- If you're using your monitor's built-in microphone to record, use the Monitors & Sound control panel to mute the monitor's speakers. In the same control panel, make sure that the sound input is set to the monitor's built-in microphone.
- If you're using an external microphone plugged into your computer, make sure your sound input source is set to External Microphone. Open the Monitors & Sound control panel, click the Sound icon, and choose External Microphone from the Sound Input pop-up menu.

See the information about sound in Mac OS Help (choose Help from the Finder's Help menu).

"QuickDraw 3D could not be found" message appears.

- Make sure that the following files are in the Extensions folder (inside the System Folder):
 - QuickDraw 3D
 - QuickDraw 3D RAVE
 - QuickDraw 3D Viewer
 - QuickDraw 3D IR

If the files are there and you still get the message, it means that you don't have enough memory to run the application. You may be able to open the application if you try one or more of the following:

- Quit other open applications.
- Reduce the amount of memory allocated to the application. Follow these steps:
 - 1** Select the application's icon in the Finder.
 - 2** Choose Get Info from the File menu.
 - 3** Type a lower number in the box for Preferred Size.
- Install more memory (RAM). See the online documentation that came with your computer for instructions on how to do this.

Starting Up From a CD

To test, repair, or initialize a hard disk, or to install or remove system software on a hard disk, you need to start up your computer from another disk. You can start up your computer using the software install CD-ROM disc.

Starting Up From the Software Install CD

Follow these steps to start up from the software install CD.

- 1 Turn on your computer if it's not already running.
- 2 Press the Open button on your CD-ROM drive.
- 3 Carefully open the tray and place the software install CD in the tray with the disc label facing up.

Make sure the disc is lying flat in the tray.

- 4 Gently push the tray in.
- 5 Hold down the C key on your keyboard while you choose Restart from the Special menu and wait for the message "Welcome to Mac OS" to appear.

If this doesn't work, restart the computer, make sure the CD is inserted, and hold down the Command, Option, Shift, and Delete keys (to temporarily disable the hard disk). Hold the keys down until the message "Welcome to Mac OS" appears.

- 6 When you see the screen that says "Mac OS" and the phrase "Starting Up," release the C key.

In a few seconds the desktop appears. The CD's icon appears at the top-right corner of the desktop (above your hard disk icon), and the Apple (🍏) menu does not contain the usual items.

Note: The desktop pattern is different from the pattern you normally see, since your computer is now using the system software that's on the CD. Your regular desktop pattern will reappear when you start up from your normal startup disk.

When You're Done With the CD

When you start up your computer from a CD, the CD cannot be ejected in the usual way.

To restart your computer from the hard disk and eject the CD:

- 1** Choose Restart from the Special menu.
- 2** Immediately after hearing the startup sound, press the eject button on the front of the CD-ROM drive.

Note: You can also change the startup disk by opening the Startup Disk control panel and selecting the hard disk. Restart your computer. After startup, eject the CD by selecting its icon and choosing Put Away from the File menu (or by dragging its icon to the Trash).

Testing and Repairing Your Hard Disk Directory

If you see a message reporting that a disk is “damaged” or unreadable, the directory on your hard disk may have become corrupted. The directory can be corrupted

- any time the computer is not shut down properly, using the Shut Down command
- when your computer freezes or crashes

Repairing Corrupted Data on Your Disk

Most data corruption can be fixed easily by using Disk First Aid. Disk First Aid is an application on the software install CD that came with your computer.


- 1 Start up your computer from the software install CD.
See Chapter 3, “Starting Up From a CD,” on page 45.
- 2 Locate the Disk First Aid icon and double-click it to open the Disk First Aid program.



Disk First Aid

- 3 Click the icon of the disk you want to test.

Disk icons appear in a box at the top of the Disk First Aid window.

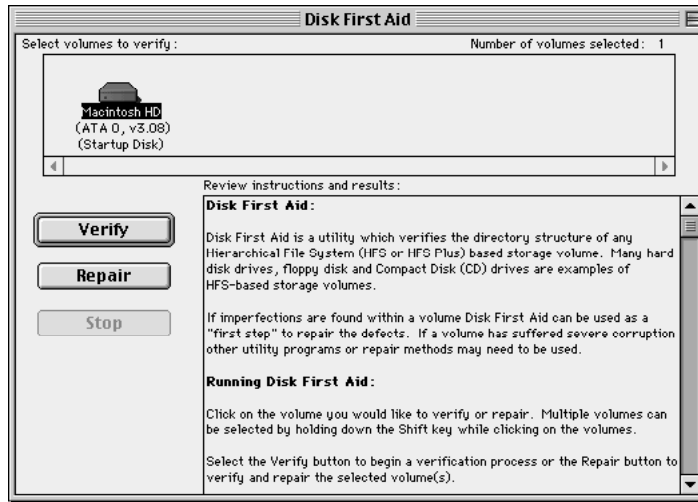

- 4 Click Repair to begin testing and repairing the disk directory.

If Disk First Aid Cannot Correct the Problem

- Make sure you started up from the software install CD. See Chapter 3, “Starting Up From a CD,” on page 45.
- Try running Disk First Aid a second or third time. Sometimes repeating the process corrects the problem.
- Use the Drive Setup utility (typically located in the Utilities folder) to update the driver.
- Use another disk repair or recovery program. Sometimes another program will help you recover a corrupted disk.

Note: Before using software from a manufacturer other than Apple, see the documentation that came with the software or contact the software manufacturer to make sure the program is compatible with your computer and the version of Mac OS installed on your computer. Apple cannot guarantee the performance of software from manufacturers other than Apple.

- If you can't repair the disk directory, the System suitcase file or other resources may be damaged. Perform a clean installation of system software (see Chapter 5, “Reinstalling Your Computer's Software,” on page 53). If that doesn't work, reinitialize the hard disk (see “Initializing a Hard Disk” on page 49).


Updating the Hard Disk Drivers

- 1 Start up your computer from the software install CD. (See Chapter 3, “Starting Up From a CD,” on page 45.)
- 2 Locate the Drive Setup icon and double-click it to open the Drive Setup program.



Drive Setup

- 3 In the list of drives, click the disk you want to update.

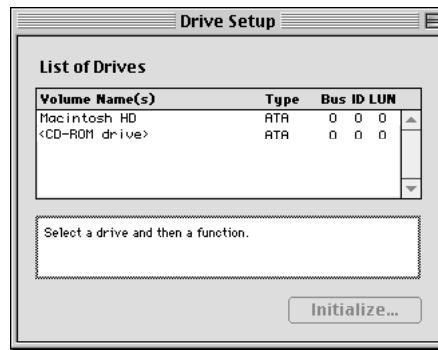

- 4 From the Functions menu, choose Update Driver.
A message appears saying the new driver won't be available until you restart your computer.
- 5 Restart your computer. (See “Restart the computer.” on page 12.)

Initializing a Hard Disk

The hard disk inside your computer was initialized (formatted for use) at the factory, so you should need to initialize it only if your hard disk is damaged and can't be repaired with Disk First Aid (or another disk repair program).


You can initialize your internal hard disk using a program called Drive Setup, which is on the software install CD that came with your computer.

Warning Initializing a disk erases all information on the disk. Before initializing your disk, recover all the information you can and copy it to another disk or a network file server.

- 1 Start up your computer from the software install CD. (See Chapter 3, “Starting Up From a CD,” on page 45.)
- 2 Locate the Drive Setup icon and double-click it to open the Drive Setup program.



- 3 In the list of drives, select the disk you want to initialize.

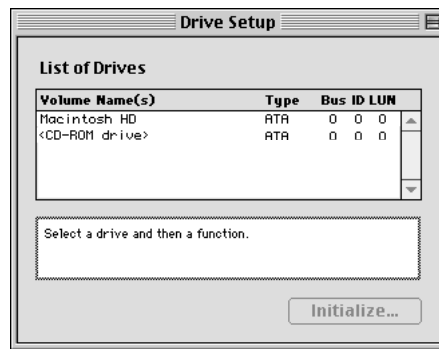

- 4 Click Initialize.

If initialization fails, choose Initialization Options from the Functions menu to select the “Low level format” and “Zero all data” options. Then try initializing the disk again.

If initialization fails a second time, test your hard disk for damage, as described in “Testing Your Hard Disk for Physical Damage” on page 50.

Mac OS Extended Format

Mac OS Extended format is a new method of formatting hard disks that allows for more efficient use of hard disk storage space. You can format your hard disk with Mac OS Extended format by performing a custom initialization of your hard disk. For instructions, see Drive Setup Help in the Help menu.

Testing Your Hard Disk for Physical Damage


Note: Testing the disk can take two hours or more, depending on the size of your disk.

- 1 Start up your computer from the software install CD. (See Chapter 3, “Starting Up From a CD,” on page 45.)

- 2 Locate the Drive Setup icon and double-click it to open the Drive Setup program.



- 3 In the list of drives, click the disk you want to test.

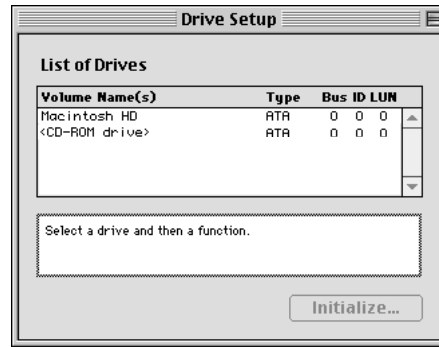

- 4 From the Functions menu, choose Test Disk.
- 5 When a message tells you that the testing is complete, click Quit.

If the test reveals a problem, the hard disk may be damaged. Consult an Apple-authorized service provider for assistance.

Reinstalling Your Computer's Software

If you are having problems with the system software or applications that came with your computer, you can replace software in the following ways:

- reinstall system software—if you encounter system software problems or you want to add or remove system software components
- reinstall individual applications—if you inadvertently erased an application on your hard disk, are having problems with an application, or an application is damaged
- restore your hard disk with its original contents—if you want your computer to have its original system software, factory settings, and applications that came with the computer

Reinstalling System Software

The Mac OS Install application, located on the software install CD, lets you reinstall the Mac OS (or specific components of the Mac OS) on your computer. This CD also includes a Read Me document that describes how to reinstall custom system software settings and application software that came with your computer.

Before Installing System Software

Before you begin the installation, do the following:

- *Customized preferences and settings:* If you have preferences or settings in control panels and individual applications, make a note of them so you can easily reset them if necessary, after you install system software.

Note: If you are having problems with your computer, you may not be able to open any files with preferences or customized settings.

- *Software that runs in the background:* If you are using software that runs in the background, such as virus protection software or access control software, you may need to turn it off before you reinstall system software. For instructions, see the documentation that came with the software.

Important It is highly recommended that you back up the data on your hard disk before installing system software.

Reinstalling Mac OS System Software

Note: If something goes wrong, see “Problems During Installation” on page 60.

- 1 Start up from the software install CD-ROM disc. (See Chapter 3, “Starting Up From a CD,” on page 45.)
- 2 Double-click the *Mac OS Install* icon.



A Welcome dialog box describes the steps in the installation process. To learn more about each step, click the Help button (?) in the upper-right corner of the window.



Click to display more information about each step.

- 3 When you're ready to begin, click Continue.

The Select Destination dialog box appears.



If you want to perform a clean installation, skip to “Performing a Clean Installation” on page 58. Otherwise, continue with the following step.

Note: A clean installation gives you a fresh start with system software. It is sometimes the best way to solve a persistent problem.

- 4 Choose the destination disk from the pop-up menu and click Select.

The following dialog box appears.



- 5 Proceed to the next section, “Selecting Which Software to Install.”

Selecting Which Software to Install

After selecting a disk, you need to decide between a standard or a custom installation. The standard installation installs all the software you need for your model of computer and is the best choice to solve system software problems. A custom installation lets you add or remove specific system software components.


Note: Keep in mind that the more components you install, the more memory, or RAM, is used and the greater the potential for software conflicts. Install only the items you expect to use.

Standard installation: Click Reinstall. Proceed to “Standard Installation” on page 56.

Custom installation: Click Add/Remove. Proceed to “Custom Installation” on page 56.

Standard Installation

- 1 Follow the instructions on your screen until you see the Install Software window.

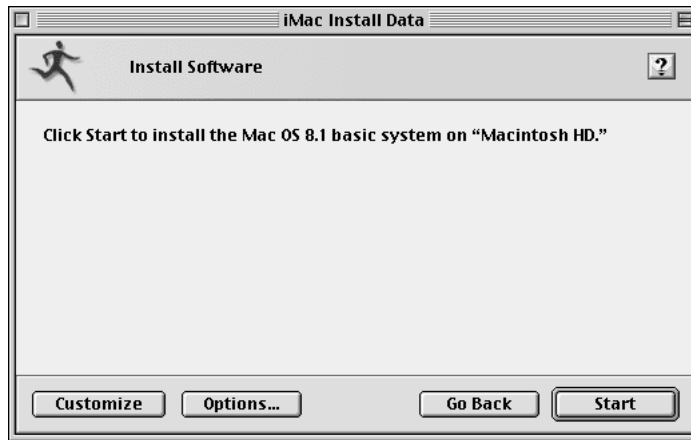


Note: Your screen may look slightly different from the one pictured here.

- 2 If you want to update the hard disk drivers and create an installation report, click Options. In the window that appears, click the appropriate checkboxes, then click OK.
- 3 Click Start.
- 4 When the installation has finished, restart your computer.


Custom Installation

- 1 In the window that appears, select the software to install, the software to remove, or both.

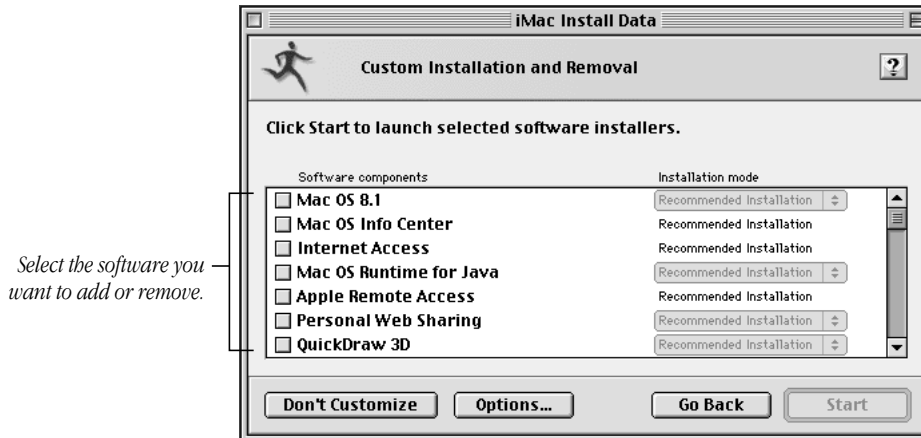

- 2 Open the pop-up menu next to each software product and choose an option.
 - Customized Installation—lets you choose the components to install
 - Customized Removal—lets you choose the components to remove

Note: Recommended Installation installs the standard components.
- 3 All available components for the software product appear in a window.

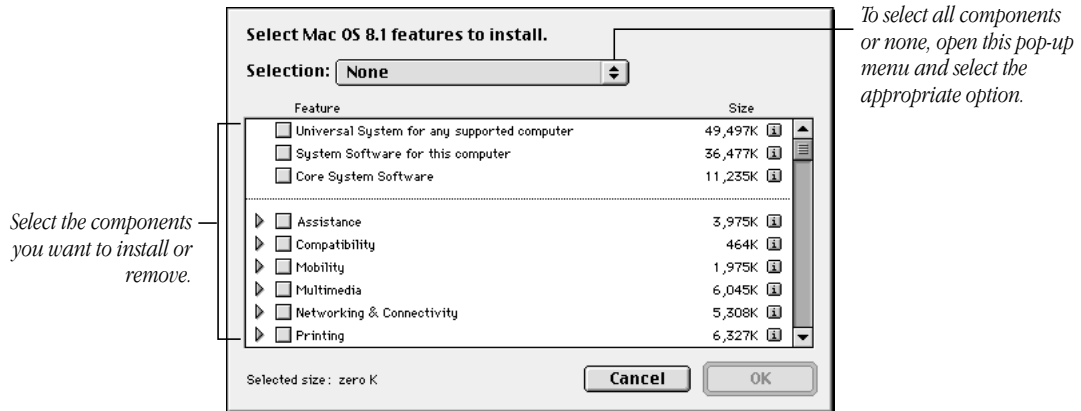

- 4 Scroll through the list of components and click the checkbox next to each component you want to install or remove.

You can see and select individual items within each component by clicking the arrow to the left of the component, then clicking the item you want to install. For more information about each component listed, click the box with the letter “i” in it to the right of the component.
- 5 When you’re finished choosing components, click OK.
- 6 Repeat steps 2–4 for all the software products you want to install or remove.
- 7 If you want to update the hard disk drivers and create an installation report, click Options. In the window that appears, click the appropriate checkboxes, then click OK.
- 8 Click Start.

A window appears, showing the status of the installation or removal process.

If you see messages about problems with your hard disk, see “Problems During Installation” on page 60.

- 9 When a message appears saying that the installation process finished, click Quit to leave the program or click Continue to install or remove other software.

Performing a Clean Installation

This section provides instructions for what is commonly called a “clean installation” of system software. Performing a clean installation is more complicated than a standard installation, but it is sometimes the best way to solve a persistent problem. A clean installation gives you a fresh start with system software.


When you install system software using a clean installation, the Installer creates a new System Folder on your hard disk. The old System Folder is renamed Previous System Folder. Since your computer has a new System Folder, after a clean installation you must reinstall custom fonts, extensions, and control panels that you’ve added to your system or that came with utility or application programs. You will also need to reset modem settings in communications software programs you are using.

Note: Though application programs are not replaced or changed, some require system software components that are removed from the System Folder during a clean installation. You may need to reinstall these applications after you perform a clean installation.

- 1 Start up your computer from the software install CD-ROM disc. (See Chapter 3, “Starting Up From a CD,” on page 45.)
- 2 Open the Mac OS Install application.
- 3 In the Welcome box, click Continue.

The Select Destination dialog box appears.

To perform a clean installation, click Options.

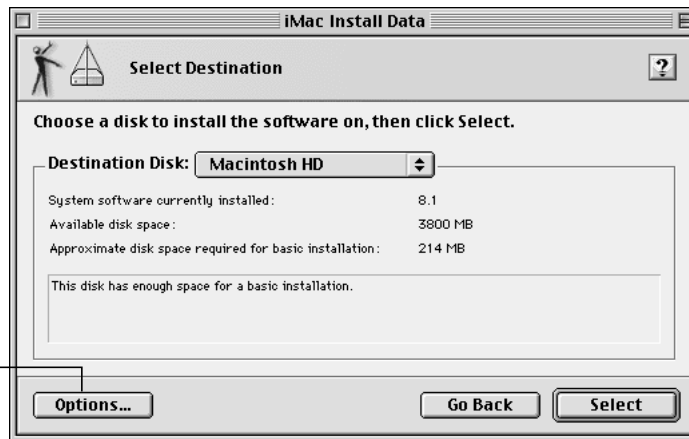

4 Click Options.



5 Click the Perform Clean Installation checkbox so that it has a checkmark in it, then click OK.

6 Click Select and follow the instructions until you see the Install Software dialog box.

7 To install software other than the basic system, click Customize and follow the instructions in the section, "Custom Installation" on page 56.

8 Click Start to install the software.

A new System Folder is installed on your hard disk. (The old System Folder is renamed Previous System Folder.)

9 Restart your computer from the hard disk.

If the problem is solved: See the following section that describes how to reinstall your custom extensions, fonts, and control panels.

If the problem is not solved: You can reinstall your custom extensions, fonts, and control panels; or you can restore the previous system. These options are described in the following sections.

Reinstalling Your Custom Extensions, Fonts, and Control Panels

After a clean installation, you need to reinstall any custom extensions, fonts, and control panels you were using. If you don't have the original installation discs, you can drag items one at a time from the Previous System Folder to the new System Folder. It's a good idea to restart your computer after you install each item, to see if that's the item causing the problem. After you're sure that you've copied all the items you want into the new System Folder, delete the Previous System Folder by dragging it to the Trash.

If the Clean Installation Didn't Solve the Problem

You may have a hardware problem. Consult an Apple-authorized service provider.

You may want to revert to the Previous System Folder so that you do not have to reinstall your custom extensions, fonts, control panels, and other items not installed with Mac OS 8.1. To use the previous system again, follow the steps in this section.

Warning Reverting to the previous System Folder may not work. If it doesn't, you'll have to perform a clean installation again.

- 1 Locate the currently active System Folder. It is distinguished by the Mac OS icon on it.
- 2 Open the System Folder and move the System suitcase into the Preferences folder. Close the System Folder.
- 3 Rename the System Folder "Clean System Folder."
- 4 Rename the Previous System Folder (the one you wish to use again) "System Folder."
- 5 Open the newly designated System Folder and double-click the System suitcase. Close the window that appears, then close the System Folder.

The Mac OS icon should appear on the new System Folder's icon. If it doesn't appear, repeat this step.

- 6 Restart your computer.
- 7 Drag the Clean System Folder to the Trash.

Problems During Installation

This section helps you solve problems you may encounter while installing your software.

You can't start up the computer using the software install CD.

- Your computer may have located the system software on your hard disk before it located the system software on the CD.

With the CD inserted, open the Startup Disk control panel and click the CD icon. Then restart the computer.

Note: After you install the software, you'll need to reselect your hard disk as the startup disk. Open the Startup Disk control panel again and click the icon for your hard disk. Then restart your computer.

The files on your hard disk disappear when you start up from the CD.

- If no files appear on the hard disk except for a single document called “Where have all my files gone?”, you started up your computer from a CD with system software earlier than Mac OS 8.1. To see the contents of your disk, you must start up your computer from a disc with Mac OS 8.1 (or later).

You can't install or restore software.

- Make sure your computer started up from the software install CD. See Chapter 3, “Starting Up From a CD,” on page 45.

The Installer cannot repair your hard disk.

- If you see a message that the disk can't be fixed because a file is open, quit all programs. If file sharing is on, turn it off. Then try installing again.
- Use Disk First Aid or a third-party disk repair utility to see if it can repair the disk.

Note: Before using a disk utility from a manufacturer other than Apple, see the documentation that came with the software or contact the software manufacturer to make sure the program is compatible with your computer and the version of Mac OS installed on your computer. Apple cannot guarantee the performance of software from manufacturers other than Apple.

If you don't have a third-party utility, or if that utility can't repair the disk either, you may need to reinitialize the hard disk. See “Initializing a Hard Disk” on page 49. After you've reinitialized the disk, try installing the system software again.

The Installer cannot update the hard disk driver.

- If you don't have an Apple-brand hard disk, or if you've updated your Apple hard disk with a non-Apple disk utility, use that disk utility or the one supplied by the disk's manufacturer to update the drivers on your system. Make sure to get the latest version of the utility.
- Some hard disks must be reinitialized before you can update the driver. See “Initializing a Hard Disk” on page 49.

You see a message that there's not enough memory to use the Installer.

- Make sure you are starting up the computer from the software install CD.

You see a message that the System file cannot be modified.

- You may have virus-protection software installed that guards against modification of the System file. Make sure you are starting up the computer from the software install CD. Drag any virus-protection software out of the System Folder and try installing again. You can put the virus-protection software back after installation.

- The System and Finder files may be locked. To see if your System file or Finder file is locked, open the System Folder and select the System or Finder icon. Open the File menu and choose Get Info. To unlock the file, click the Locked checkbox to remove the checkmark.
- Try performing a clean installation of system software. See “Performing a Clean Installation” on page 58.

You see a message that the installation was not successful.

- Make sure the software install CD is the startup disk, then try installing system software again. If the installation is still not successful, try performing a clean installation.
- Make sure the CD is clean. See the online documentation that came with your computer for information on cleaning CDs.

Responding to Messages About Your Hard Disk

The Mac OS 8.1 Installer checks the destination hard disk for errors before installing the software. Additionally, if your hard disk was formatted with an Apple disk utility program, the Installer updates the hard disk drivers with the latest version of the driver software. If your disk drives are formatted with a disk utility from another company, the drivers are not updated. You should use the third-party disk utility to update your hard disk before installing Mac OS 8.1.

Note: Before using a disk utility from a manufacturer other than Apple, see the documentation that came with the software or contact the software manufacturer to make sure the program is compatible with your computer and the version of Mac OS installed on your computer. Apple cannot guarantee the performance of software from manufacturers other than Apple.

Reinstalling Individual Applications

If you're having problems with an application or it was damaged or inadvertently erased, try reinstalling that application. If an application came with its own CD, see the software documentation or the Read Me document on that CD for instructions on how to reinstall that software. If not, see the Read Me document on the software install CD for instructions on how to reinstall that software.

Important If you have preferences or settings for individual applications, make a note of them so you can easily reset them if necessary, after you install system software. If you are having problems with your computer, you may not be able to open any files with preferences or customized settings.

Restoring All Original Software

The Apple Software Restore application, located on the software restore CD, restores all your original software, including original system software, factory settings, and applications that came with your computer. This application gives you the option of erasing your hard disk before restoring the original software, or just replacing the original software (“Restore In Place”).

Before Restoring Your Software

Before you begin the restore process, do the following:

- *Customized preferences and settings:* If you have preferences or settings in control panels and individual applications, make a note of them so you can easily reset them if necessary, after you install system software.
Note: If you are having problems with your computer, you may not be able to open any files with preferences or customized settings.
- *Software that runs in the background:* If you are using software that runs in the background, such as virus protection software or access control software, you may need to turn it off before you reinstall system software. For instructions, see the documentation that came with the software.

Important It is highly recommended that you back up the data on your hard disk on an external storage device or network file server before restoring your system.

Restoring In Place

This procedure replaces only your original software (original system software, factory settings, and applications that came with your computer) with new copies from the CD, leaving everything else on your disk untouched.

Important Your preferences may be reset to their original factory defaults, and if you’ve already registered software, this procedure may modify that data.

- 1 Start up your computer from the software restore CD and open the Apple Software Restore application.

For instructions, see Chapter 3, “Starting Up From a CD,” on page 45.

- 2 Click the OK button on the introductory screen.
- 3 If necessary, click Switch Disk to choose the disk on which you want to restore your software.
- 4 Click the checkbox next to “Restore In Place.”
- 5 Click Restore.
- 6 An onscreen message shows the status of the restore process.

- 7 Click Quit when the process is complete.

Erasing Your Hard Disk

This procedure completely erases the contents of your hard disk before restoring the original contents (original system software, factory settings, and applications that came with your computer).

- 1 Start up your computer from the software restore CD and open the Apple Software Restore application.

For instructions, see Chapter 3, “Starting Up From a CD,” on page 45.

- 2 Click the OK button on the introductory screen.
- 3 If necessary, click Switch Disk to choose the disk on which you want to restore your software.
- 4 Click the checkbox next to “Erase your hard disk before restoring.”
- 5 If necessary, change the disk format you want from the Volume Format pop-up menu.

The recommended option is “Same as selected configuration” because it restores your hard disk to the Mac OS Extended format. This format provides more efficient storage, especially on large disks.

- 6 Click Restore.
- 7 Click OK.
- 8 An onscreen message shows the status of the erase and restore process.
- 9 Click Quit when the process is complete.

Contacting Apple for Help

If this handbook has not helped you solve your computer's problem, try getting information from Apple's product support site on the World Wide Web. See the next section, "Obtaining Information via the World Wide Web."

If you can't find answers on the support Web site, or don't have access to the Web, contact Apple for assistance. For information on how to contact the Apple Assistance Center, see the service and support card that came with your computer. Before you contact Apple, see the section, "Have This Information Available Before Calling."

Obtaining Information via the World Wide Web

Apple provides substantial information online for its customers. If you have access to the World Wide Web (WWW), you may want to check the information in the support area before you call Apple. Support information can be found at the following Uniform Resource Locator (URL):

- www.apple.com/support

At Apple's support Web site, you'll find

- Apple software updates
- Tech Info Library—a searchable database of easy-to-read articles
- Tech Exchange—a resource for product-specific information and support, including a discussion forum and the latest news

Have This Information Available Before Calling

Have the following information and software available when calling the Apple Assistance Center:

- a description of the problem (for example, the computer freezes in only one application or at startup)
- what you have tried to do already
- the type of computer
- the serial number of your computer
- the version of system software, third-party software, external devices, and so on (especially if the problem involves something you have added to the computer)
- the software install CD

Be in front of the computer when you call so you can take steps the technician suggests.

Using the Apple System Profiler

If you are able to start up your computer, the Apple System Profiler provides information about your computer that will help you and the Apple Assistance Center troubleshoot your computer.

To open the Apple System Profiler:

- 1** Choose Apple System Profiler from the Apple () menu.

A System Overview window appears.

- 2** Use the commands in the Select menu to get more specific information about the hardware and software used by your computer, or to go back to the System Overview window.
 - To find out what the items in the Apple System Profiler window mean, choose Show Balloons from the Help menu. Then point to the item you want to know about.
 - The Create Report command in the File menu lets you create a customized report of system software information. You can print this report by choosing the Print command from the File menu.



Index



*Can't find it?
See also Mac OS
Help's onscreen
index. Open the
Help menu and
choose Help;
then click the
Index button.*

A

- Administration password, forgetting 40
- Apple Assistance Center 65, 66
- AppleCD Audio Player 31, 41
- Apple Guide. *See* Mac OS Help
- Apple System Profiler 66
- application programs
 - clean installation and 58
 - compatibility issues with older Macintosh programs 29
- Disk First Aid 47–48
- Drive Setup program 49–51
- problems with 23–29
- quitting 13, 29
- reinstalling individual applications 62
- resetting PRAM and 19
- restoring all original software 63–64

B

- batteries
 - replacing clock battery 38
 - replacing computer's backup battery 20
- beep sound 8, 20, 39
- blinking icon in menu bar 38
- blinking question mark icon 8
- bomb message 33

C

- CD-ROM discs. *See also* software install CD; software restore CD
 - cleaning 32
 - ejecting 30, 32, 46
 - jammed 17, 30
 - problems with 30–33, 42
 - starting up from 17, 45–46, 60–61
- CD-ROM drive 30–32
- Chooser, computer doesn't appear in 39
- cleaning CD-ROM discs 32
- clean installation of system software 58–60
- clock problems 38
- control panels. *See also individual control panels*
 - reinstalling after clean installation 59
 - replacing battery and 20
 - resetting PRAM and 19
 - resolving compatibility problems with 17–18
- custom installation of system software 56–58

D

- date, incorrect 20, 38
- deleting files 28
- desktop
 - CD-ROM icon doesn't appear on 30–31
 - hard disk icon missing from 10
 - normal desktop doesn't appear 10
 - rebuilding 27, 38
- devices, troubleshooting 14–15, 33–35
- disk corruption message 10, 15
- Disk First Aid 47–48



*Can't find it?
See also Mac OS
Help's onscreen
index. Open the
Help menu and
choose Help;
then click the
Index button.*

disks. *See* CD-ROM discs; hard disk
documents. *See also* files
 deleting 28
 DOS 28
 missing 27, 29, 61
 problems with 27–28, 32–33
 unlocking 28, 62
 “Where have all my files gone” document 29
 Windows 28
DOS documents 38
DOS partitions 30
drivers
 updating hard disk drivers 49, 61
 USB devices and 34
Drive Setup program
 initializing hard disk with 49–50
 testing hard disk with 50–51
 updating hard disk drivers with 49

E

Easy Access control panel 38
ejecting CD-ROM discs 30, 32, 46
electrical interference 39
empty flashing box 10
Energy Saver control panel 11
erasing hard disk 64
error messages. *See* messages
Ethernet network, device problems and 14
extensions
 disabling 15, 26
 incompatible 17–18
 not enough memory for 15–16
 reinstalling after clean installation 59
 testing 18
 virtual memory and 15
Extensions Manager control panel 15, 17–18
external devices, troubleshooting 14–15, 33–35

F, G

files
 deleting 28
 DOS 28
 Finder file 62
 font file 38

locked files 28, 62
missing 27, 29, 61
problems with 27–28, 32–33
System file 61–62
unlocking 28, 62
“Where have all my files gone” file 29
Windows 28
file sharing 28, 31, 32, 39–41
File Sharing control panel 28, 31, 32, 39, 40
Finder file 62
font file 38
fonts
 reinstalling after clean installation 59
 software problems and 26
forced quit (applications) 13
forced restart 12
forced shutdown 13
Foreign File Access 30
formatting disks 30, 50
frozen system
 during shutdown 13
 during startup 9
 before “Welcome to Mac OS” appears 8–9
 while restarting computer 12
 while using computer 9, 24
 while using Photo CDs 33

H

hard disk
 computer starts up from wrong disk 11, 16
 erasing with software restore CD 64
 icon missing from desktop 10
 initializing 49–50
 Mac OS Extended format and 50
 messages about 62
 missing files on 27, 29, 61
 problems with 29–30, 61, 62
 repairing corrupted data on 47–48, 61
 starting up from external hard disk 16
 testing 50–51
 updating drivers on 49, 61
headphones 41, 42
help
 Apple Assistance Center 65, 66
 Apple support Web site 22, 65

- Mac OS Help 22
- Mac OS Info Center 22
- High Sierra CD-ROM discs 32–33

I, J

- icons
 - blinking icon in menu bar 38
 - blinking question mark icon 8
 - CD-ROM icon doesn't appear on desktop 30–31, 33
 - hard disk icon missing 10
 - icon with X in center 8
 - incorrect appearance of 38
 - missing from windows 10
- initializing hard disk 49–50
- installing system software 53–64
- Install Mac OS 8.1* alias 54
- ISO 9660 CD-ROM discs 32–33

K

- keyboard. *See also* USB devices
 - doesn't work 9
 - resetting PRAM and 19
 - startup problems and 13
 - troubleshooting USB devices and 14, 35
- Keyboard control panel 37
- keyboard shortcuts
 - canceling current operation 24
 - forcing application to quit 13
 - forcing computer to restart 12
 - quitting application 13, 29
 - rebuilding desktop 27, 38
 - resetting PRAM 19
 - restarting computer 12

L

- Launcher 29
- locked files 28, 62

M

- Mac OS Extended format 50
- Mac OS Help 22
- Mac OS Info Center 22

- Mac OS partitions 30
- Mac OS system software. *See* system software
- memory
 - disk corruption message and 10, 15
 - incorrectly installed 20
 - increasing for system software 15–16
 - “Not enough memory” message 9, 23–24, 61
 - problems with 23–29
 - QuickDraw 3D and 42–43
 - RAM disk 15, 24
 - resetting PRAM 19
 - restarting computer to clear memory 12
 - virtual memory 15, 24, 36, 38
- Memory control panel
 - increasing memory for system software 15
 - insufficient memory and 24
 - performance and 36, 37, 38
- menu bar, blinking icon in 38
- messages
 - bomb message 33
 - disk corruption message 10, 15
 - during system software installation 61–62
 - messages about hard disk 62
 - messages while printing 35–36
 - “Not enough memory” message 9, 23–24
 - number codes in 25
 - “QuickDraw 3D could not be found” message 27–28, 42–43
 - “This is not a Macintosh disk: Do you want to initialize it?” message 32
 - USB device messages 33–34
- microphone 42
- modem settings 19, 20
- Monitors & Sound control panel 37, 41, 42
- mouse. *See also* USB devices
 - doesn't work 9
 - startup problems and 13
 - troubleshooting USB devices and 14, 34
- Mouse control panel 37

N, O

- network problems 14, 39–41
- non-USB devices 14–15
- “Not enough memory” message 9, 23–24



Can't find it?
See also Mac OS
Help's onscreen
index. Open the
Help menu and
choose Help;
then click the
Index button.

P

parameter RAM. *See* PRAM
password, Administration 40
PC Exchange control panel 28, 30
performance problems 36–39
Photo CDs 33
ping, server doesn't respond to 41
power, insufficient 33–34
power button
 restarting computer with 12
 shutting down computer with 12
 sleep and 11
power cord 13, 14, 33–34
PRAM, resetting 19
preferences
 reinstalling applications and 62
 restoring original software and 63
printing problems 35–36
problems. *See* troubleshooting
ProDOS partitions 30
programs. *See* application programs
Put Away command 31, 46

Q

question mark icon 8
“QuickDraw 3D could not be found” message
 27–28, 42–43
QuickTime Settings control panel 42
quitting application programs 13, 29

R

RAM. *See* memory
RAM disk 15, 24
re-blessing System Folder 16
rebuilding desktop 27, 38
recording from audio CDs 42
reinstalling individual applications 62
reinstalling system software 53–64
removing system software 57
repairing hard disk 47–48, 61
Reset hole, forcing restart with 12
resetting PRAM 19

restarting computer
 forced restart 12
 keyboard shortcut for 12
 problems restarting computer 7
 procedure for 12
 restarting to solve problems 12
restoring all original software 63–64
right-angle prompt appears 38

S

screen 8, 11, 13, 37
servers 41
shortcuts. *See* keyboard shortcuts
shutting down computer 8, 12–13
sleep 11
software install CD
 problems starting up from 60
 reinstalling system software with 53–62
 starting up from 45–46
software restore CD
 erasing hard disk with 64
 restoring all original software with 63–64
software updates 65
sound
 computer beeps 8, 20, 39
 computer makes unusual sounds 7, 38–39
 problems with 41–43
Sound Source module 41
speakers 42
standard installation of system software 56
starting up computer
 from CD-ROM disc 17, 45–46, 60–61
 computer freezing during startup 9
 computer starts up from wrong disk 11,
 16–17
 disk corruption message appears during 10
 problems starting up computer 7–22, 60
 unusual sound when starting up computer 7
Startup Disk control panel 46, 60
System file 61–62
System Folder
 clean installation and 58, 59
 multiple System Folders 25
 re-blessing 16

system software
 memory problems 9, 15–16
 message about 9
 not recognized by computer 16
 reinstalling 53–64
 removing 57
 updates for 65
System suitcase file, damaged 48

T

TCP/IP control panel 40, 41
Tech Exchange 65
Tech Info Library 65
testing extensions and control panels 18
testing hard disk 50–51
3D accelerator 37–38
3D Surround Sound 42
troubleshooting. *See also specific problems*
 Apple Assistance Center and 65, 66
 Apple support Web site 22, 65
 Apple System Profiler and 66
 application programs 23–29
 computer beeps 8, 20, 39
 external devices 14–15, 33–35
 frozen system 8–9, 12, 13, 24
 hard disk 29–30, 61, 62
 jammed CD-ROM discs 17, 30
 keyboard 9, 14
 Mac OS Help and 22
 Mac OS Info Center and 22
 memory problems 9, 20, 23–29, 61
 mouse 9, 13, 14, 34
 printing problems 35–36
 problems during system software installation
 60–62
 problems using computer 23–43
 reinstalling system software and 53–64
 screen 8, 11, 13, 37
 sound problems 41–43
 startup problems 7–22, 60
 unusual sounds 7, 38–39
 USB devices 14, 33–35
 video problems 41–43
turning off computer 8, 12–13

U

unlocking files 28, 62
USB devices 14, 33–35. *See also* keyboard;
 mouse

V

video problems 41–43
virtual memory 15, 24, 36, 38
virus-protection software 25, 54, 61, 63

W, X, Y, Z

waking up computer 11
Web sites, Apple 22, 65
“Where have all my files gone?” document 29
windows
 disappearing 29
 no icons appear in 10
 resetting window display 16
Windows documents 28
World Wide Web (WWW)
 Apple support information on 64, 65
 Mac OS Info Center and 22

